

# 0270 SECOND DISPLAY KIT WITH Y CABLE

0270-5X00-000 and 0270-7X00-000\*


\* X – based on PS scale model and capacity range

## MAJOR COMPONENTS

1. Scale, with Display mounted to Base
2. Y-Cable with three connectors and ferrite ring (Minimizes emissions)
3. 2<sup>nd</sup> Display – remote Wall mount (0270-5X00-000) or Tower Display (0270-7X00-000)
4. In-line Female-to-Female Adapter

## INSTALLATION INSTRUCTIONS

1. Remove power from the scale before taking any steps to add the second display.
2. Locate scale connectors, PS15, 30, 3L, 60, and 6L on bottom of scale, PS90 under the platter.
3. For the connector marked “Scale display”, disconnect base display cable by pressing in the latching tab on the jack while pulling the cable out. Insert the jack of the 6 inch long portion of the 10 ft “Y” cable into this same “Scale Display” connector port.
4. Now connect the base display cable into one end of the In-line female-to-female adapter, and connect the 12 inch long end of the Y-cable into the other end of the In-line adapter.
5. Mount remote display (Wall or Tower) in proper location with mounting screws. If not already done, connect the 114” long end of the Y-cable into the back side of the remote display.
6. Make sure any excess cable is properly secured and does not provide a trip hazard for personnel or customers.

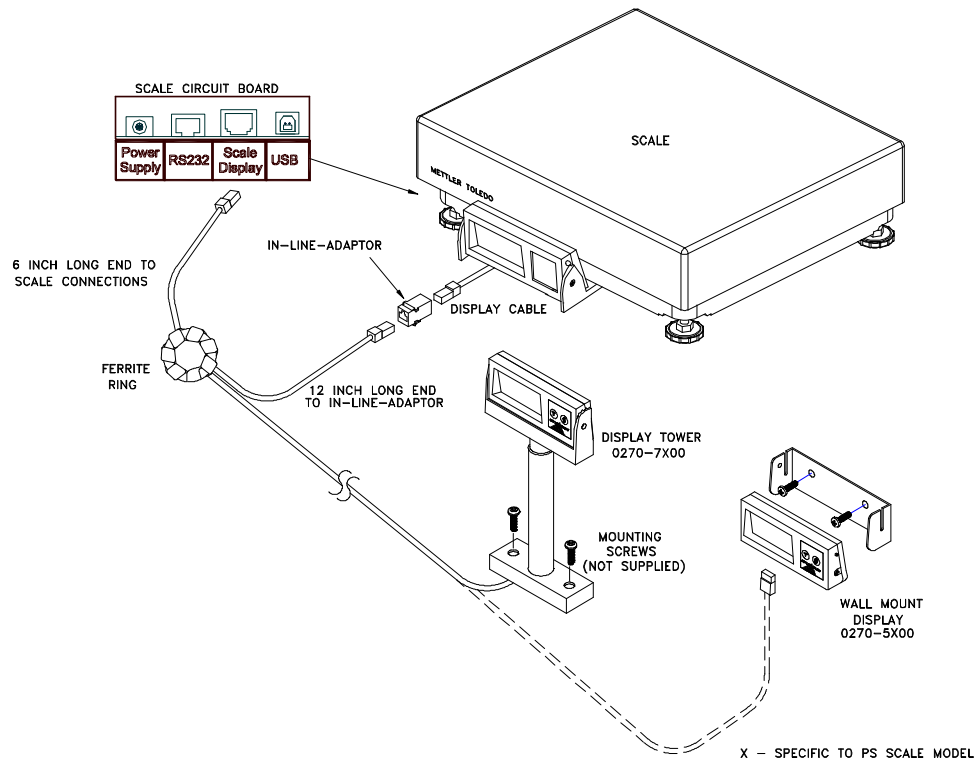

64067794