

How to set a Custom Default and retrieve it

Purpose: To customize the program setting of the BC scale and retrieve it. .

When Used:

- a) If the communication settings differ from the standard carrier defaults. .
 - b) Want to save current settings in the scale.
1. **Enter scale Program Mode.** Press and hold the UP navigation key for 5 seconds. The HOME screen will be displayed.
 2. Scroll to SET UP soft key with the right arrow and press ENTER (Center Navigation Key).
 3. The parameters covered in the default are:
 - 4.
 - 5.
 - 6.
 7. Scroll to the SCALE soft key and press ENTER.
Note: If Metrology Lock is enabled, scale will request that you push the Cal Button
 - ◆ Remove platter from the scale
 - ◆ Unscrew green plug on scale housing. You may need to break the Metrology Seal if scale is being used in a Legal for trade application.
 - ◆ Use stylus, pencil or finger to push the SW2 Cal Button.
 8. In the SCALE screen, scroll to CALIB soft key and press ENTER.
 9. In the Calib screen, scroll to UseGeo soft key and press ENTER.
 10. The following screen will appear with a two digit number between "01-30".
 - a. Press ENTER to highlight the "units" digit.
 - b. Press the up arrow to increase the number and the down arrow to decrease the number.
 - c. Once the desired digit is shown, press the LEFT arrow to highlight the 10's digit.
 - d. Press the up arrow to increase the 10's number and the down arrow to decrease the number.
 - e. Once the desired 10's digit is shown, press the ENTER key to accept the GeoCode.
 11. Press the DOWN arrow to highlight the Save / Cancel boxes. Scroll to SAVE and highlight it. Press Enter to accept SAVE.
 12. Geo Code is not fully saved yet. It must be saved in END>SAVE. To access the END screen, press and HOLD the ENTER button until END screen appears. Scroll to SAVE and press ENTER. Scale will prompt for confirmation and then Reboot. .

13. Geo Code is now updated.
14. You can check the update by pressing the UP arrow for 5 sec and going to the HOME screen. Press ENTER on INFO. Scroll to CAL-INF and Press ENTER. Update will be shown in the "GEO Location Code". Exit by following step 8.