



Quick start guide

METTLER TOLEDO bTwin™

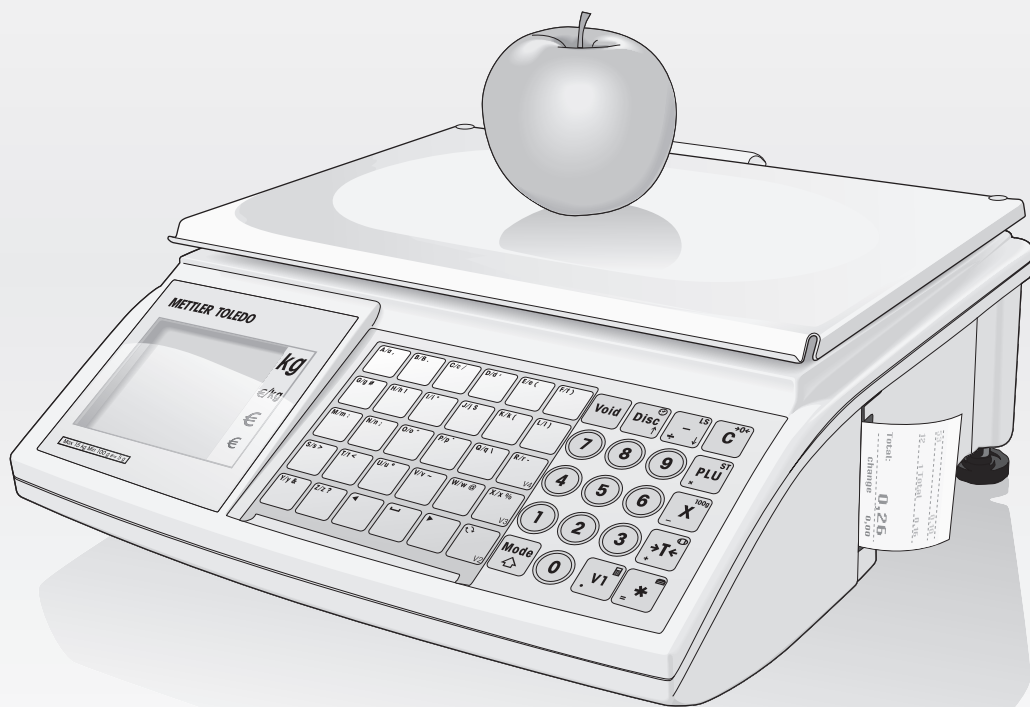


METTLER TOLEDO


Getting started

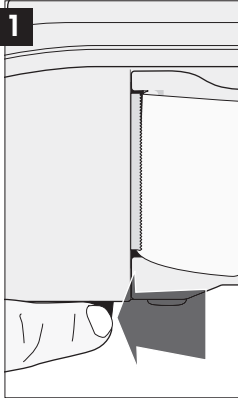


1 Open printer door.

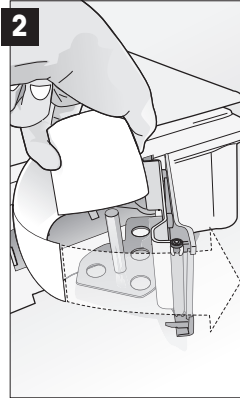

2 Load paper; close door.

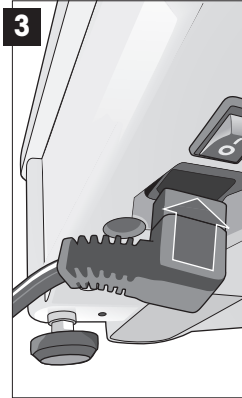


3 Connect power cable.

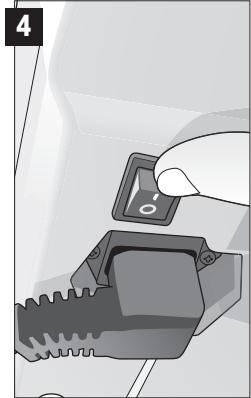


4 Attach the weighing plate (do not switch on the device until you have done this).


Weighing with a direct price

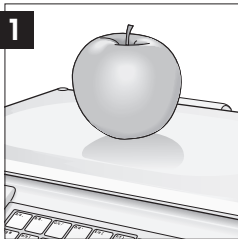


1 Place item to be weighed on load plate.

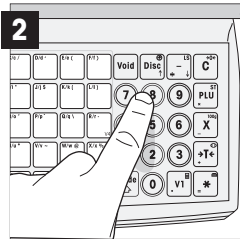

2 Enter price.

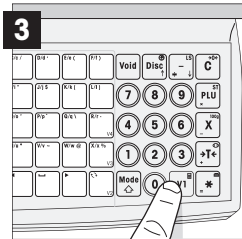


3 Press the sale button **V1**.

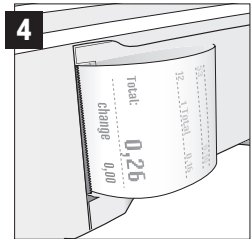


4 Press ***** twice to complete the transaction, a ticket will be printed.


Selling individual items with a direct price

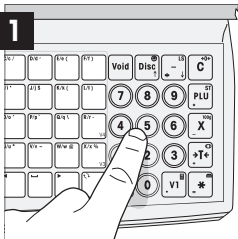


1 Enter the item price. Do not put anything on the weighing plate.

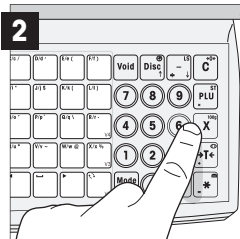

2 Press the item button **X**. Enter the corresponding number of items if applicable.

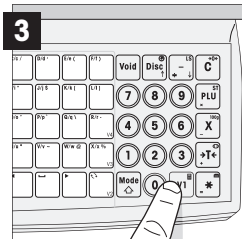


3 Press the sale button **V1**.

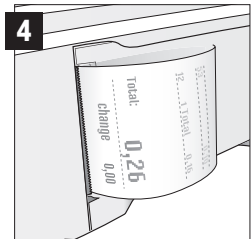

4 Press ***** twice to complete the transaction, a ticket will be printed.


Operation with PLU

Creating a PLU

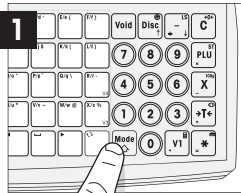


Enter Setup menu

- Press **Mode**.
- Enter 1 × **1**; 6 × **8**.
- Press ***** to confirm.

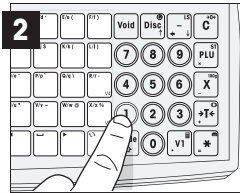


Call up PLU menu

- Enter **1 0 1**.
- Press ***** to confirm.

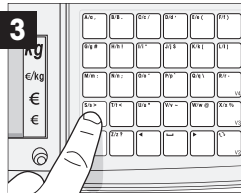

PLU 1, salad master data


- Enter PLU number 1 and press ***** to confirm.
- Enter text using keypad, (e.g., salad) and press ***** to confirm.

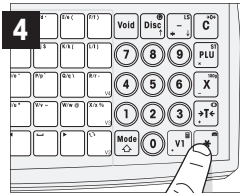

Save PLU


- Select weight or number of PLU items (press **+T+** to make your selection then confirm with *****).
- Enter price then press *****.
- Save PLU then press *****.
- Press **Mode** 3 times to exit the Setup menu.

One-off weighing with PLU

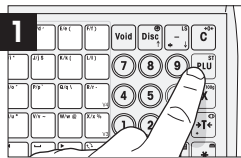

Working with PLU 1

- Place items on weighing plate.
- **1**; **PLU**
- **V1**; 2 × *****
- Your ticket will be printed.

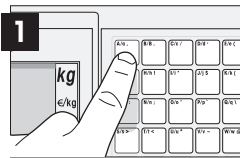

Direct assignment of fixed buttons

 
- Press 2 sec. **A/a**.
- Enter PLU number 1 and press ***** to confirm
- Place items on weighing plate; press **A/a**.
- Press **V1** then press ***** twice to print ticket.

Setting up buttons with fixed assignments

How to navigate the Setup menu

1 Enter Setup: Press **Mode**; 1 × **1**; 6 × **8**; 1 × *****

2 Navigation in the menu



3 Exit Setup: Press 3 × **Mode**

Setup groups


1. Data entry
2. Print setup
3. Delete data
4. Operation
5. Service mode
6. Reports
7. Network
8. Passwords

The scales have 8 settings groups in which all functions can be set.


Important functionalities

Editing data	Printing	Data deletion	Operational settings
101 Edit PLU information	218 Print vendor name on ticket	301 Delete PLU	403 Load PLU
102 Change PLU Price	219 Print date	306 License/PID-LID	409 Vendor quantity
103 PLU Content	221 Print VAT on ticket		410 VAT
105 Edit vendor information	222 Print Change on ticket		443 Multi-payment (Credit card)
106 Date/Time			Reports
109 Header/Footer			602 Sales Report
122 Ausdrucken PLU-Listen			603 PLU Report



Display and keypad at a glance

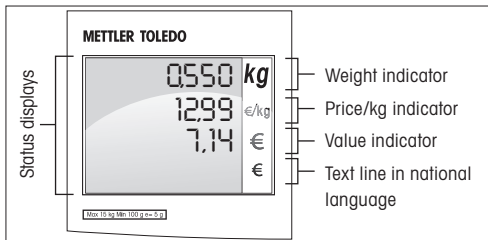

Status displays for battery, network and much more.

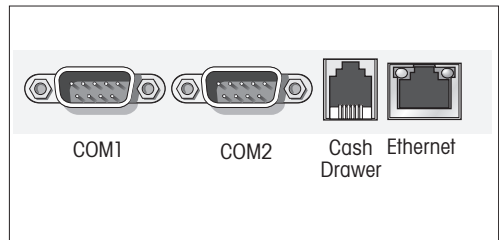

Easy connection of register drawers, PCs and other peripherals

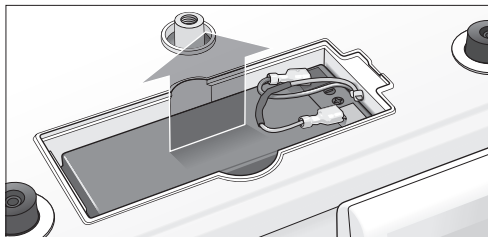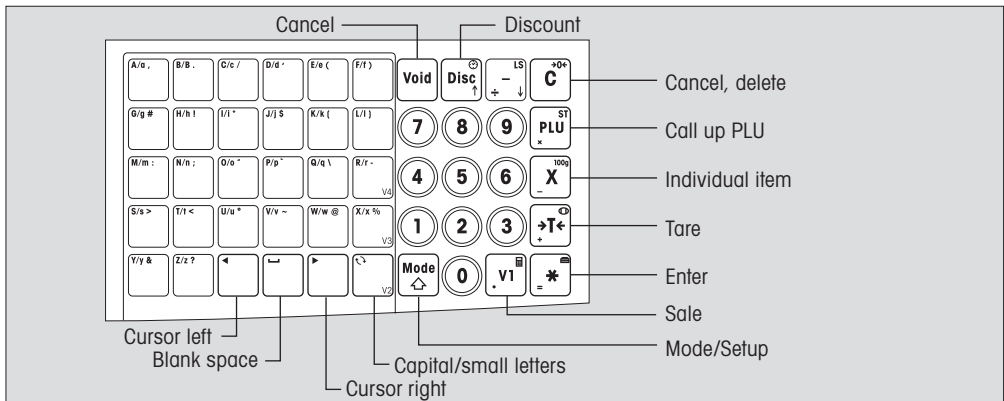

- Remove load plate.
- Open battery compartment.
- Insert battery. Remember: red to red (+), black to black (-).

N.B. Ask your dealer to activate the battery function.