

0270 DISPLAY KIT
DUAL WALL / DUAL TOWER
 0270-4X00-000 and 0270-6X00-000*


* X – based on PS scale model and capacity range

MAJOR COMPONENTS

1. Scale, with Display mounted to Base
2. Display – remote Dual Wall mount (0270-4X00-000) or Dual Tower Display (0270-6X00-000)

INSTALLATION INSTRUCTIONS

1. Remove power from the scale before taking any steps to add the display.
2. Locate scale connectors, PS15, 30, 3L, 60, and 6L on bottom of scale, PS90 under the platter.
3. For the connector marked “Scale display”, disconnect base display cable by pressing in the latching tab on the jack while pulling the cable out. Remove Screws mounting the Base Display
4. Mount remote display (Dual Wall or Tower) in proper location with mounting screws. Connect the Display Cable into the Scale Display Jack.
5. Make sure any excess cable is properly secured and does not provide a trip hazard for personnel or customers.

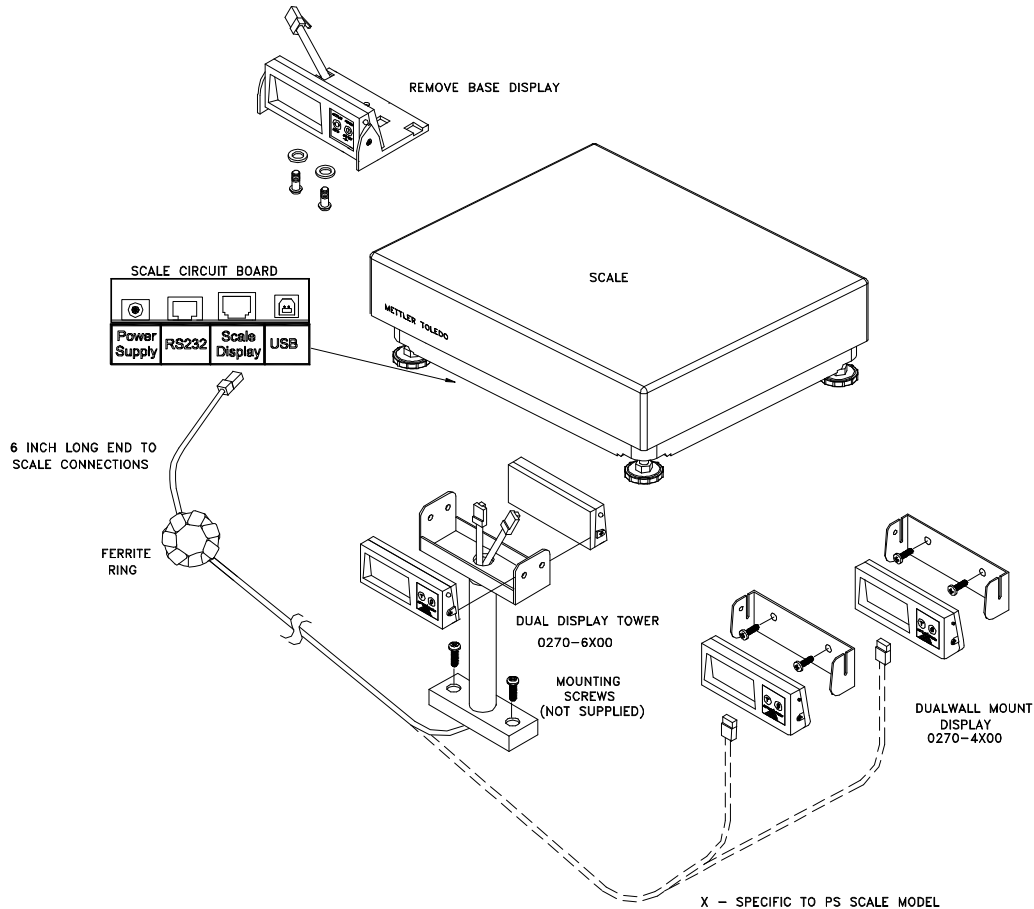

64068460