


**Program Step**  
 Category  
 Press and Hold Units Key for 8 Sec to enter setup mode

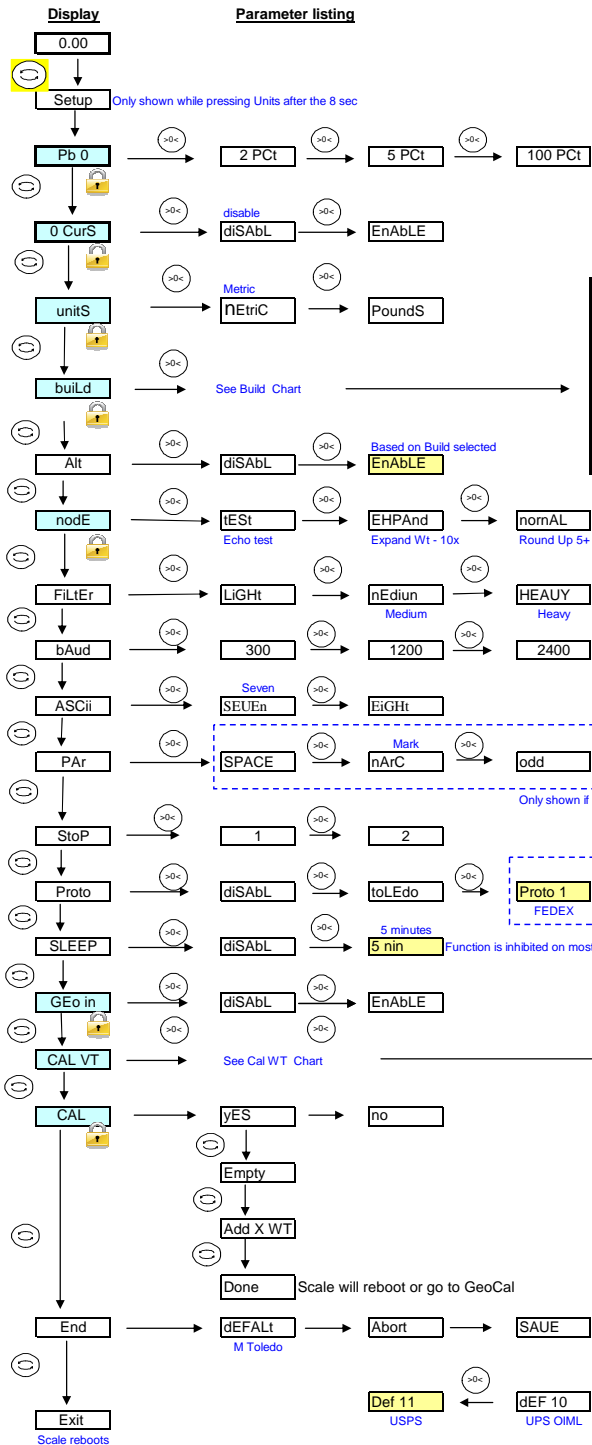


**Units Key** (↔)

**Zero Key** (>0<)

**Metrology Lock** (🔒)

- Remove PCB Cover on top of scale (Bottom for PS15)
- Remove Blue W1 jumper on PCB to access functionality

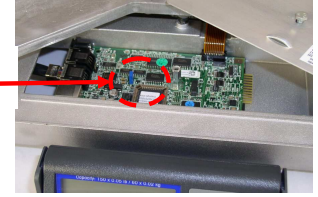

**Not available on all models or builds (IE: Multi-Interval)**

**nodE** Note: 7 Segment Display is limited in alpha characters that can be displayed (IE: No Letter "M" so "n" is used)

Scale	Units	Build Options - based on 'Units' selected and PS Model							
		1	2	3	4	5	6	7	8
PS15	Pounds	30-01	30-005	30-n0					
	Metric(kg)	15-005	15-002	15-ni	15-nC				
PS30	Pounds	70-05	70-nr	70-ni	70-n0				
	Metric(kg)	30-02	30-01	30-ni					
PS60U	Pounds	150-02	150-05	100-n0	100-05	150-ni	149-ni	150-n5	100-ni
	Metric(kg)	60-01	60-02	45-05	45-02	60-ni	70-ni	60-nC	45-ni
PS90U	Pounds	150-05	250-1	300-1		149-ni	200-ni		
	Metric(kg)	60-02	100-05	150-05	150-nC	60-05	90-1		

Scale	Units	Calibration Weight Options			
		Cal 1	Cal 2	Cal 3	Cal 4
PS15	Pounds-lb	5	10	15	20
	Metric-kg	2	5	7	10
PS30	Pounds-lb	5	25	30	50
	Metric-kg	2	10	15	20
PS60U	Pounds-lb	25	50	75	100
	Metric-kg	10	20	30	45
PS90U	Pounds-lb	25	50	70	100
	Metric-kg	10	20	25	45

Use to Customize Serial set up