

# Measuring Module M 700<sup>®</sup> O<sub>2</sub> 4700(X) ppb

---

For Trace Oxygen Measurement in  
Liquids and Gases



52121222

**METTLER TOLEDO**



71941

## Warranty

Defects occurring within 1 year from delivery date shall be remedied free of charge at our plant (carriage and insurance paid by sender). Sensors, fittings, and accessories: 1 year.

©2007 Subject to change without notice

## Return of Products Under Warranty

Please contact our Service Team before returning a defective device. Ship the cleaned device to the address you have been given. If the device has been in contact with process fluids, it must be decontaminated/disinfected before shipment. In that case, please attach a corresponding certificate, for the health and safety of our service personnel.

## Disposal

Please observe the applicable local or national regulations concerning the disposal of "waste electrical and electronic equipment".

---

## Trademarks

The following registered trademarks are used in this instruction manual without further marking

SMARTMEDIA®

is a registered trademark of Toshiba Corp., Japan

FOUNDATION FIELDBUS™

is a trademark of Fieldbus Foundation, Austin, USA

---

Mettler-Toledo AG,  
Process Analytics, Industrie Nord, CH-8902 Urdorf,  
Tel. +41 (44) 729 62 11 Fax +41 (44) 729 26 36  
Subject to technical changes.



## Mettler-Toledo GmbH

Process Analytics

Adresse | Im Hackacker 15 (Industrie Nord), CH-8902 Urdorf, Schweiz  
Briefadresse | Postfach, CH-8902 Urdorf  
Telefon | 01-736 22 11  
Telefax | 01-736 26 36  
Internet | www.mt.com  
Bank | Credit Suisse First Boston, Zürich (Acc. 0835-370501-21-90)

# Declaration of conformity Konformitätserklärung Déclaration de conformité



**Wer/ Wir/Nous**

**Mettler-Toledo GmbH, Process Analytics**

Im Hackacker 15  
8902 Urdorf  
Switzerland

declare under our sole responsibility that the product,  
erklären in alleiniger Verantwortung, dass dieses Produkt,  
déclarons sous notre seule responsabilité que le produit,

**Description**

**Beschreibung/Description**

**O<sub>2</sub> 4700 ppb**

to which this declaration relates is in conformity with the following standard(s) or other normative document(s).

auf welches sich diese Erklärung bezieht, mit der/den folgenden Norm(en) oder Richtlinie(n) übereinstimmt.

auquel se réfère cette déclaration est conforme à la (aux) norme(s) ou au(x) document(s) normative(s).

**EMC Directive/ EMV-Richtlinie**

**Directive concernant la CEM**

**89/336/EWG**

**Place and Date of issue/**

**Ausstellungsort/ - Datum**

**Lieu et date d'émission**

**Urdorf, September 22, 2004**

Mettler-Toledo GmbH, Process Analytics

Waldemar Rauch  
General Manager PO Urdorf

Thomas Hösl  
Head of Operations and R&D

**Norm/ Standard/ Standard**

**EN 61326/ VDE 0843 Teil 20**

**EN 61326 / A1/ VDE 0843 Teil 20 / A1**

**METTLER TOLEDO**

CE\_Transmitter\_O2\_4700ppb.doc



Adresse Im Hackacker 15 (Industrie Nord), CH-8902 Urdorf, Schweiz  
Briefadresse Postfach, CH-8902 Urdorf  
Telefon 01-736 22 11  
Telefax 01-736 26 36  
Internet www.mt.com  
Bank Credit Suisse First Boston, Zürich (Acc. 0635-370501-21-90)

# Declaration of conformity Konformitätserklärung Déclaration de conformité



**We/Wir/Nous** **Mettler-Toledo GmbH, Process Analytics**  
Im Hackacker 15  
8902 Urdorf  
Switzerland

declare under our sole responsibility that the product,  
erklären in alleiniger Verantwortung, dass dieses Produkt,  
déclarons sous notre seule responsabilité que le produit,

**Description**  
**Beschreibung/Description** **O<sub>2</sub> 4700X ppb**

to which this declaration relates is in conformity with the following standard(s) or other normative document(s).

auf welches sich diese Erklärung bezieht, mit der/den folgenden Norm(en) oder Richtlinie(n) übereinstimmt.

auquel se réfère cette déclaration est conforme à la (aux) norme(s) ou au(x) document(s) normatif(s).

**Explosion protection** **94/9/EG**  
**Explosionsschutzrichtlinie** **KEMA 04 ATEX 2056**  
**Prof. contre les explosions** **NL-6812 AR Arnhem, KEMA 0344**

**Low-voltage directive**  
**Niederspannungs-Richtlinie**  
**Directive basse tension** **73/23/EWG**

**EMC Directive**  
**EMV-Richtlinie**  
**Directive concernant la CEM** **89/336/EWG**

**Place and Date of issue**  
**Ausstellungsort / - Datum**  
**Lieu et date d'émission** **Urdorf, July 16, 2004**

Mettler-Toledo GmbH, Process Analytics

Waldemar Rauch  
General Manager Ingold

  
Christian Zwicky  
Head of Marketing**METTLER TOLEDO**

## Mettler-Toledo GmbH

Process Analytics

Adresse Im Hackacker 15 (Industrie Nord), CH-8902 Urdorf, Schweiz  
Briefadresse Postfach, CH-8902 Urdorf  
Telefon 01-736 22 11  
Telefax 01-736 26 36  
Internet www.mt.com  
Bank Credit Suisse First Boston, Zürich (Acc. 0835-370501-21-90)

|                               |                    |  |                |
|-------------------------------|--------------------|--|----------------|
| <u>Norm/Standard/Standard</u> | <b>94/9/EG:</b>    | <b>EN 50014</b><br><b>EN 50020</b><br><b>EN 50281-1-1</b><br><b>EN 50284</b> |                |
|                               | <b>73/23/EWG:</b>  | <b>DIN EN 61010-1 / VDE 0411 Teil 1:</b>                                     | <b>2002-08</b> |
|                               | <b>89/336/EWG:</b> | <b>DIN EN 61326 / VDE 0843 Teil 20:</b>                                      | <b>2002-03</b> |

**METTLER TOLEDO**

# Contents

---

M 700 O<sub>2</sub> 4700(X) ppb

|   |           |
|---|-----------|
| Warranty .....  | 2         |
| Disposal .....  | 2         |
| Trademarks .....  | 2         |
| EC Declaration of Conformity .....  | 3         |
| Intended Use .....  | 11        |
| Conformity with FDA 21 CFR Part 11 .....                                  | 11        |
| Safety Information .....  | 12        |
| Application in Hazardous Locations: O <sub>2</sub> 4700X ppb Module ..... | 12        |
| Software Version .....  | 13        |
| Modular Concept .....   | 15        |
| <b>Short Description.....</b>   | <b>16</b> |
| Short Description: FRONT Module.....                                      | 16        |
| Short Description: Menu Structure .....                                   | 17        |
| Short Description: BASE Module .....                                      | 19        |
| <b>Terminal Plate O<sub>2</sub> 4700(X) ppb Module .....</b>              | <b>20</b> |
| <b>Inserting the Module.....</b>  | <b>21</b> |
| <b>Wiring Example.....</b>  | <b>22</b> |
| InPro 6900 trace sensor, VP cable .....                                   | 22        |
| <b>Menu Selection .....</b>   | <b>24</b> |
| <b>Menu Structure .....</b>   | <b>24</b> |
| <b>Passcode Entry .....</b>   | <b>25</b> |
| Changing a Passcode.....  | 25        |
| Passcode Lost .....   | 25        |
| <b>Configuring the Measurement Display .....</b>                          | <b>26</b> |
| <b>Calibration / Adjustment.....</b>                                      | <b>28</b> |
| Adjustment.....   | 29        |
| Recommendations for Calibration.....                                      | 30        |
| Selecting a Calibration Method.....                                       | 31        |
| Automatic Calibration in Water .....                                      | 33        |
| Automatic Calibration in Air .....  | 35        |
| Product Calibration: Saturation (Calibration with Sampling) .....         | 37        |
| Product Calibration: Concentration (Calibration with Sampling) .....      | 39        |
| Data Entry of Premeasured Sensors .....                                   | 41        |
| Zero Correction.....  | 42        |

# Contents

---

M 700 O<sub>2</sub> 4700(X) ppb

|   |           |
|---|-----------|
| <b>Parameter Setting: Operating Levels.....</b>       | <b>43</b> |
| Administrator Level .....                             | 43        |
| Operator Level .....                                  | 43        |
| Viewing Level .....                                   | 43        |
| Parameter Setting: Lock Functions .....               | 44        |
| Activating Parameter Setting.....                     | 45        |
| Documenting Parameter Setting .....                   | 46        |
| Module Configuration: Operating Mode.....             | 48        |
| <b>Setting the Sensor Data Parameters .....</b>       | <b>49</b> |
| Sensoface .....                                       | 51        |
| Calculation Blocks.....                               | 52        |
| Logbook .....   | 54        |
| Factory Setting.....                                  | 54        |
| Messages: Default Settings and Selection Range.....   | 55        |
| <b>Device Limits.....</b>                             | <b>55</b> |
| Configure a Current Output .....                      | 57        |
| Current Outputs: Characteristics .....                | 58        |
| Output Filter .....                                   | 60        |
| NAMUR Signals: Current Outputs .....                  | 61        |
| NAMUR Signals: Relay Contacts.....                    | 62        |
| Relay Contacts: Protective Wiring .....               | 63        |
| Relay Contacts.....                                   | 64        |
| Relay Contacts, Usage .....                           | 64        |
| Rinse Contact .....                                   | 65        |
| Configuring the Rinse Contact.....                    | 65        |
| Icons in the Measurement Display.....                 | 66        |
| Limit Value, Hysteresis, Contact Type .....           | 66        |
| OK1, OK2 Inputs: Specify Level.....                   | 67        |
| Switching Parameter Sets via OK2 .....                | 68        |
| Selecting Parameter Set (A, B) via OK2 Input .....    | 68        |
| Signaling Active Parameter Set via Relay Contact..... | 68        |
| <b>Maintenance.....</b>                               | <b>69</b> |



# Contents

---

M 700 O<sub>2</sub> 4700(X) ppb

|   |           |
|---|-----------|
| <b>Diagnostics Functions .....</b>                                      | <b>70</b> |
| Point of Meas Description .....   | 70        |
| Logbook .....   | 70        |
| Device Description .....  | 71        |
| FRONT Module .....  | 71        |
| BASE Module.....  | 71        |
| Module Diagnostics .....  | 72        |
| Sensor Monitor .....  | 72        |
| Cal Record.....   | 73        |
| Sensor Network Diagram .....  | 73        |
| Statistics .....  | 73        |
| Activating Diagnostics.....   | 76        |
| Message List .....  | 76        |
| <b>Specifications .....</b>   | <b>81</b> |
| <b>Appendix: .....</b>  | <b>84</b> |
| Minimum Spans for Current Outputs.....                                  | 84        |
| Dissolved Oxygen Measurement in Carbonated Beverages (SW 700-011) ..... | 85        |
| <b>Overview of Parameter Setting .....</b>                              | <b>88</b> |
| <b>Index .....</b>  | <b>90</b> |

# Contents

---

# Intended Use

---

The module is used to measure traces of dissolved oxygen in liquids using the Mettler-Toledo InPro 6900 series sensors.

The module permits simultaneous measurement of oxygen partial pressure, barometric pressure, and temperature. In addition, oxygen saturation or concentration can be calculated and displayed.

The O<sub>2</sub> 4700X ppb module is intended for operation in locations subject to explosion hazards which require equipment of Group II, device category 2(1), gas/dust.

## Conformity with FDA 21 CFR Part 11

---

In their directive "Title 21 Code of Federal Regulations, 21 CFR Part 11, Electronic Records; Electronic Signatures" the US American health agency FDA (Food and Drug Administration) regulates the production and processing of electronic documents for pharmaceutical development and production. This results in requirements for measuring devices used for corresponding applications. The following features ensure that the M 700(X) modular process analysis system meets the demands of FDA 21 CFR Part 11:

### **Electronic Signature**

Access to the device functions is regulated and limited by individually adjustable codes – "Passcodes". This prevents unauthorized modification of device settings or manipulation of the measurement results. Appropriate use of these passcodes makes them suitable as electronic signature.

### **Audit Trail Log**

Every change of device settings can be automatically recorded and documented in the Audit Trail Log on the SmartMedia card. The recording can be encrypted.

# Safety Information

---

## Application in Hazardous Locations

### **Caution!**

Never try to open the module! If a repair should be required, return the module to our factory.

If the specifications in the instruction manual are not sufficient for assessing the safety of operation, please contact the manufacturer to make sure that your intended application is possible and safe.

### **Be sure to observe during installation:**

- Switch off power supply before replacing or inserting a module.
- Protect the signal inputs of the modules against electrostatic discharge.
- Before commissioning it must be proved that the device may be connected with other equipment.
- Observe correct shielding: To avoid interferences, the cable shielding must be completely covered by the ESD shielding cap.

### **Application in Hazardous Locations:**

#### **O<sub>2</sub> 4700X ppb Module**

When using the O<sub>2</sub> 4700X ppb module, the stipulations for electrical installations in hazardous areas (EN 60079-14) must be observed. When installing the device outside the range of applicability of the 94/9/EC directive, the appropriate standards and regulations in the country of use must be observed.

The module has been developed and manufactured in compliance with the applicable European guidelines and standards.

Compliance with the European Harmonized Standards for use in hazardous locations is confirmed by the EC-Type-Examination Certificate.

Compliance with the European guidelines and standards is confirmed by the EC Declaration of Conformity.

There is no particular direct hazard caused by the operation of the device in the specified environment.

---

# Software Version

O<sub>2</sub> 4700(X) ppb Module

## Device Software M 700(X)


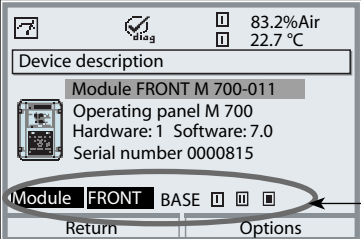
The O<sub>2</sub> 4700 ppb module is supported by software version 1.0 or higher.  
The O<sub>2</sub> 4700X ppb module is supported by software version 4.0 or higher.

## Module Software O<sub>2</sub> 4700(X) ppb

|                      |  |
|----------------------|--|
| Software version 2.1 | Measurement in gases<br>Distinguishing between adjustment and calibration: Values determined by a calibration can only be taken over by an adjustment. |
| Software version 2.2 | Membrane correction  |

## Query Actual Device/Module Software

When the analyzer is in measuring mode:  
Press **menu** key, open Diagnostics menu.

| Menu   | Display   | Device description   |
|--|---|--|
|  |  | Provides information about all modules installed: Module type and function, serial number, hardware and software version, and device options.<br>Select the different modules (FRONT, BASE, slots 1 - 3) using the arrow keys. |




# Modular Concept

---

Basic Unit, Measuring Module, Additional Functions

The M 700(X) is an expandable modular process analysis system. The basic unit (FRONT and BASE modules) provides three slots which can be equipped by the user with any combination of measuring or communication modules. The software capabilities can be expanded by additional functions (options). Additional functions must be ordered separately. They are supplied with a device-specific TAN for function release.

## M 700(X) Modular Process Analysis System

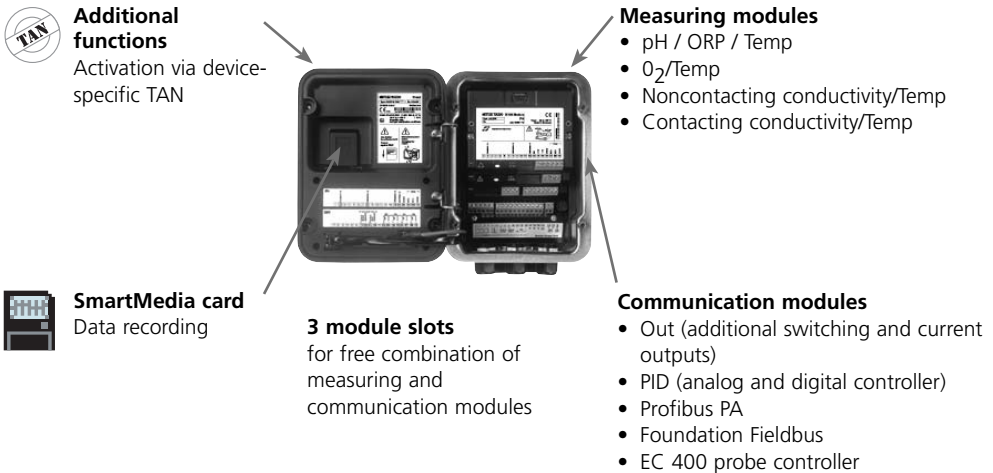

## Documentation

The basic unit is accompanied by a CD-ROM containing the complete documentation.

Latest product information as well as instruction manuals for earlier software releases are available at [www.mt.com/pro](http://www.mt.com/pro).

# Short Description

## Short Description: FRONT Module

### 4 captive screws

for opening the analyzer

**(Caution!** Make sure that the gasket between FRONT and BASE is properly seated and clean!)

### Transflective LC graphic display

(240 x 160 pixels)

white backlighting, high resolution and high contrast.



### Measurement display

### User interface

with plaintext menus as recommended by NAMUR.

Menu texts can be switched to: German, English, French, Italian, Swedish, and Spanish.

Intuitively acquirable menu logic, based on Windows standards.

### Secondary displays

### 2 softkeys

with context-sensitive functions.

### Red LED

signals failure (On) or maintenance request/function check (flashing) according to NE 44.

### Green LED

Voltage supply okay

### Control panel

3 function keys

(menu, meas, enter)

and 4 arrow keys for menu selection

and data entries

### 5 self-sealing cable glands


M20 x 1.5

for entry of voltage supply and signal lines



# Short Description: Menu Structure

Basic Functions: Calibration, Maintenance, Parameter Setting, Diagnostics

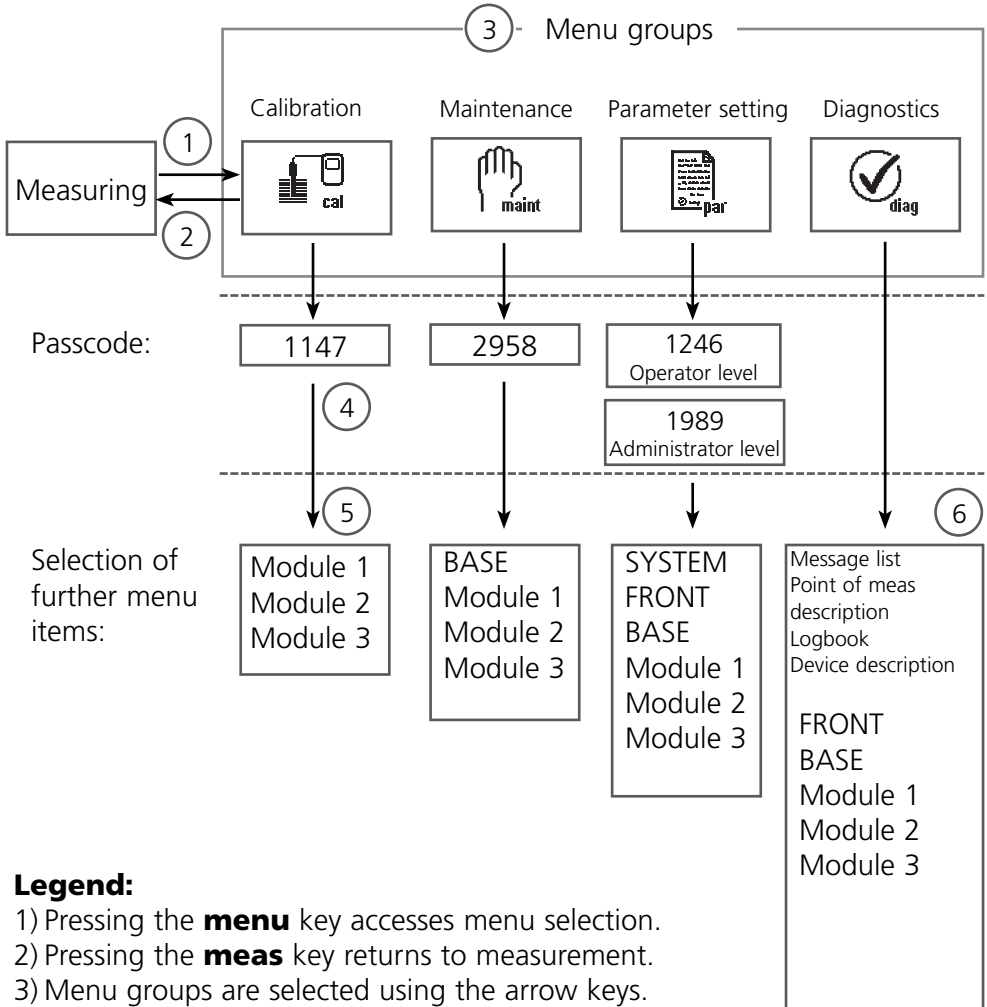

## Legend:


- 1) Pressing the **menu** key accesses menu selection.
- 2) Pressing the **meas** key returns to measurement.
- 3) Menu groups are selected using the arrow keys.
- 4) Press **enter** to confirm, enter passcode.
- 5) Further menu items are displayed.
- 6) Selected functions of the Diagnostics menu can be recalled via softkey even when in measuring mode.

# Short Description: FRONT Module

View into the open device (FRONT module)

## Slot for SmartMedia card

- Data recording  
The SmartMedia card expands the measurement recorder capacity to > 50000 records.
- Exchange of parameter sets  
5 parameter sets can be stored on the SmartMedia card. The 2 internal parameter sets can be switched by remote control. Configurations can be transmitted from one analyzer to the other.
- Function expansions  
are possible with additional software modules, which are released using transaction numbers (TAN)
- Software updates

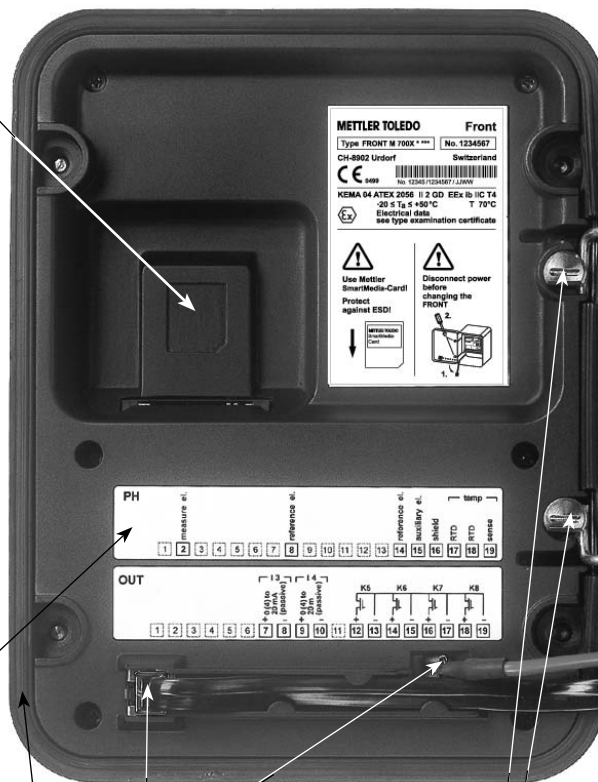

## Terminal plates of "hidden" modules

Each module comes with an adhesive label containing the contact assignments. This label should be stuck to the inner side of the front (as shown). Then, the terminal assignments remain visible even if further modules are inserted.

## Replacing the front module

Pull off power cord and ground wire. To separate the FRONT module from the BASE module, turn the retaining screws of the pivot hinge by 90°.


## The circumferential sealing

guarantees IP 65 protection and allows spray cleaning / disinfection.

**Caution!** Keep clean!

# Short Description: BASE Module

View into the open device (BASE module, 3 function modules installed)

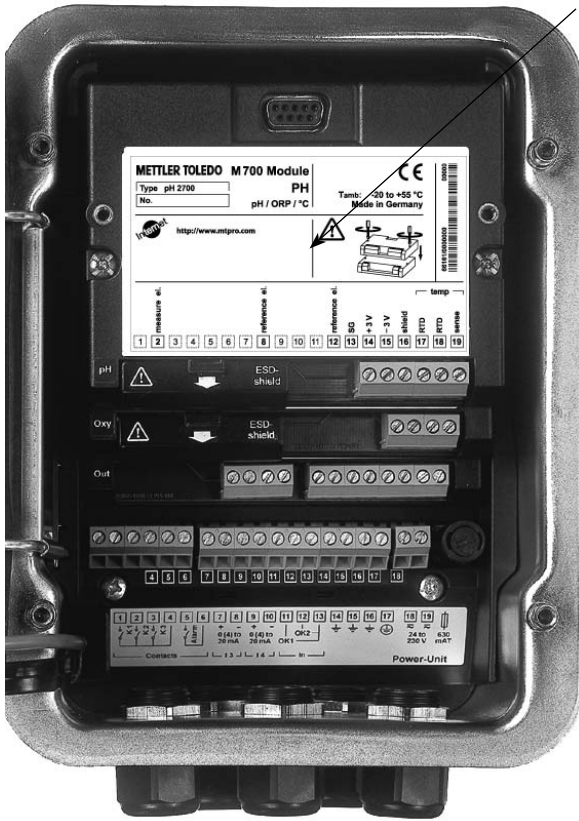

## Module equipment

Module identification: Plug & Play.

Up to 3 modules can be combined as desired. Several input and communication modules are available.

## BASE module

2 current outputs (free assignment of process variable) and 4 relay contacts, 2 digital inputs.

VariPower broad-range power supply, 20 ... 265 V AC/DC, suitable for all public mains supplies in the world.

## Power supply units, IS version:

100 ... 230 V AC or  
24 V AC/DC



## Warning!


**Do not touch the terminal compartment, there may be dangerous contact voltages!**

## Important Notice Concerning SmartMedia Card


The SmartMedia card may be inserted or replaced with the power supply switched on. Before a memory card is removed, it must be "closed" in the maintenance menu. When closing the device, make sure that the sealing is properly seated and clean.

# Terminal Plate O<sub>2</sub> 4700(X) ppb Module

## Terminal Plate O<sub>2</sub> 4700 ppb Module:
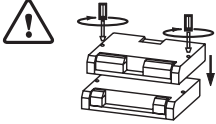
|  |                     |   |           |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |
|--|---------------------|---|-----------|---|---|---|---|---|----|----|----|----|----|----|----|----|----|----|
| <b>METTLER TOLEDO</b> M 700 Module                         |                     | CE  |           |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |
| Type O <sub>2</sub> 4700 ppb                               | O <sub>2</sub>      | Tamb: -20 to +55 °C   |           |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |
| No.  | O <sub>2</sub> / °C | Made in Germany   |           |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |
| Internet <a href="http://www.mt.com">http://www.mt.com</a> |                     |  |           |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |
|  |                     | 00000<br>65892/00000000   |           |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |
| cathode  | anode               | anode   | reference |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |
| guard  | shield              | RTD   | RTD       |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |
| temp   |                     |   |           |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |
| 1  | 2                   | 3   | 4         | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 |

## Terminal Plate O<sub>2</sub> 4700X ppb Module:

|   |                     |   |           |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |
|---|---------------------|---|-----------|---|---|---|---|---|----|----|----|----|----|----|----|----|----|----|
| <b>METTLER TOLEDO</b> M 700X Module   |                     | CE  |           |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |
| Type O <sub>2</sub> 4700 X ppb  | OXY                 | Tamb: -20 to +50 °C   |           |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |
| No.   | O <sub>2</sub> / °C | Made in Germany/Kassel  |           |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |
| KEMA 04 ATEX 2056 Electr. data see type examination certificate II 2 (1) GD EEx ib [ia] IIC T4 T 70 °C CH-8902 Urdorf Switzerland<br>IS, CLASS I, DIV1, GRP A, B, C, D, T4 Entity, T <sub>a</sub> = 50 °C control dwg. 201.004-110<br>CLASS I, ZONE 1, AEx ib [ia], GRP IIC, T4<br>WARNING: DO NOT USE IN OXYGEN ENRICHED ENVIROMENTS WITH OXYGEN CONCENTRATION MORE THAN 21% BY VOLUME.<br>NI, CII, DIV 2, GRP A, B, C, D with IS circuits extending into DIV 1 control dwg. 201.004-120<br>AIS, CI I, Zone 1, Ex ib [ia] IIC T4<br>NI, CI I, Zone 2, Ex na [ia] IIC |                     | 00000<br>65892/0000000050   |           |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |
|   |                     |  |           |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |
| cathode   | anode               | anode   | reference |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |
| guard   | shield              | RTD   | RTD       |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |
| temp  |                     |   |           |   |   |   |   |   |    |    |    |    |    |    |    |    |    |    |
| 1   | 2                   | 3   | 4         | 5 | 6 | 7 | 8 | 9 | 10 | 11 | 12 | 13 | 14 | 15 | 16 | 17 | 18 | 19 |

## Attaching the Terminal Plates


The terminal plates of the lower modules can be stuck to the inner side of the door. This facilitates maintenance and service.



# Inserting the Module

---

Note: Be sure to connect the shielding properly!

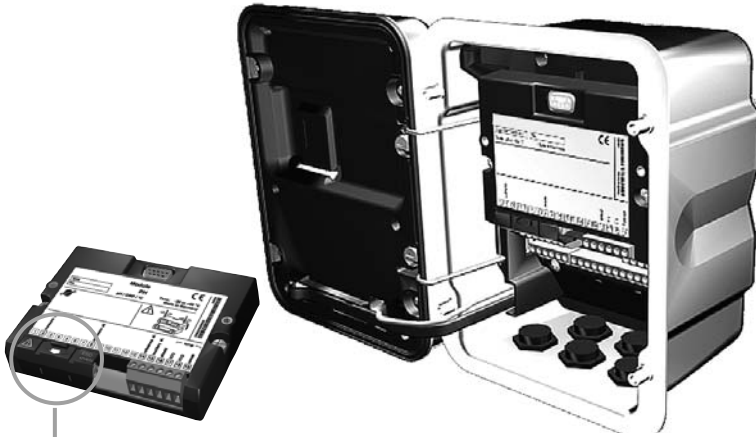


The terminals 2 and 8 are covered by an ESD shield. To connect the sensor cable, just pull it back.

Make sure that the cable glands are tightly closed to protect against humidity.

1. Switch off power supply
2. Open the device (loosen the 4 screws at the front)
3. Place module in slot (D-SUB connector)
4. Tighten fastening screws of the module
5. Open ESD shielding cap (covering terminals 2 and 8)
6. Connect sensor cable.  
To avoid interferences, the cable shielding must be completely covered by the ESD shielding cap.
7. Close ESD shielding cap (covering terminals 2 and 8)
8. Close device, tighten screws at the front
9. Switch on power supply
10. Set parameters

# Wiring Example

InPro 6900 trace sensor, VP cable

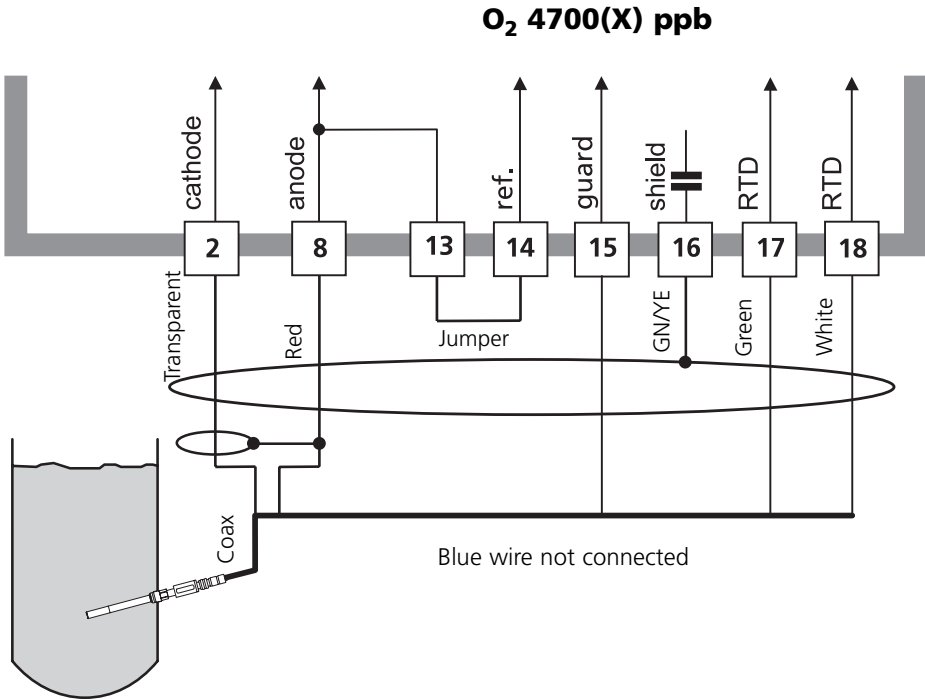


## Caution!

Sensocheck is switched off when trace sensor with guard is used.


---

# Menu Selection

After switching on, the analyzer performs an internal test routine and automatically detects the number and type of modules installed. Then, the analyzer goes to measuring mode.

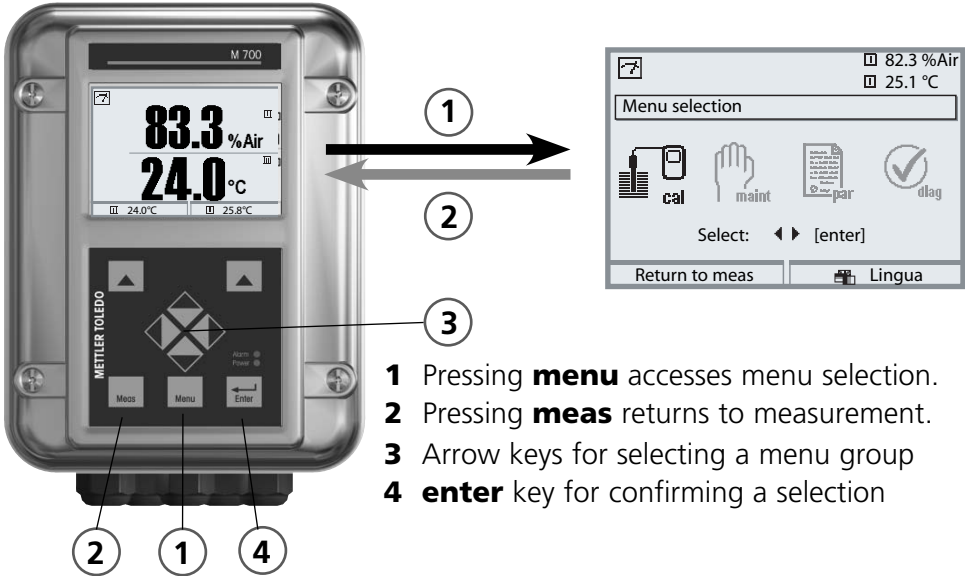

# Menu Structure

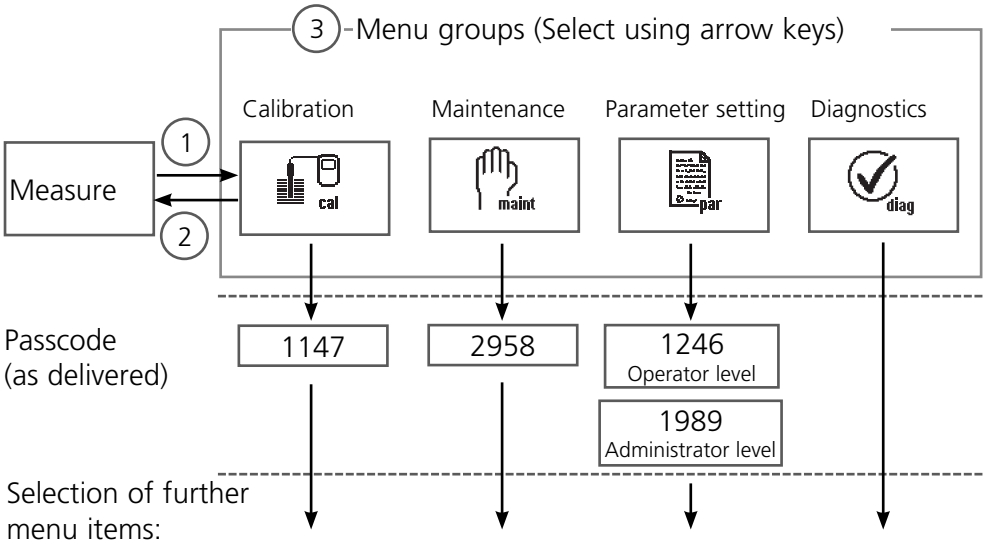



# Passcode Entry


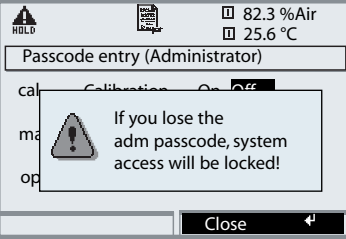
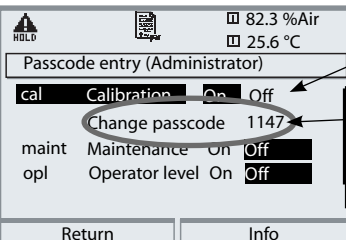
## To enter a passcode

Select the position using the left/right keys, then edit the number using the up/down keys.

When all numbers have been entered, confirm with **enter**.

## To change a passcode

- Open the menu selection (**menu**)
- Select parameter setting
- Administrator level, enter passcode
- Select System control: Passcode entry

| Menu   | Display  | System control:<br>Passcode entry  |             |      |             |      |                |      |                     |      |
|--|--|--|-------------|------|-------------|------|----------------|------|---------------------|------|
|  | <br> | <h3>Changing a passcode</h3> <h4>“Passcode entry” menu</h4> <p>When this menu is opened, the analyzer displays a warning (Fig.). Passcodes (factory settings):</p> <table border="0"> <tr> <td>Calibration</td> <td>1147</td> </tr> <tr> <td>Maintenance</td> <td>2958</td> </tr> <tr> <td>Operator level</td> <td>1246</td> </tr> <tr> <td>Administrator level</td> <td>1989</td> </tr> </table> <p><b>If you lose the passcode</b> for the Administrator level, system access will be locked! Please consult our technical support!</p> <p><b>To change a passcode</b> Select “On” using arrow keys, confirm with <b>enter</b>.<br/>Select the position using the <b>left/right</b> keys, then edit the number using the <b>up/down</b> keys. When all numbers have been entered, confirm with <b>enter</b>.</p> | Calibration | 1147 | Maintenance | 2958 | Operator level | 1246 | Administrator level | 1989 |
| Calibration  | 1147   |  |             |      |             |      |                |      |                     |      |
| Maintenance  | 2958   |  |             |      |             |      |                |      |                     |      |
| Operator level   | 1246   |  |             |      |             |      |                |      |                     |      |
| Administrator level  | 1989   |  |             |      |             |      |                |      |                     |      |

# Configuring the Measurement Display

Select menu: Parameter setting/Module FRONT/Measurement display

Pressing **meas** (1) returns the analyzer to the measuring mode from any function.

All process variables coming from the modules can be displayed. The table on the next page describes how to configure the measurement display.



## Measurement display



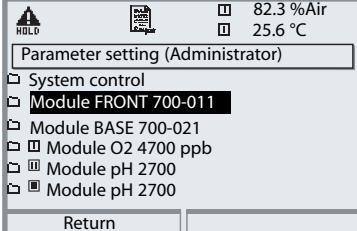
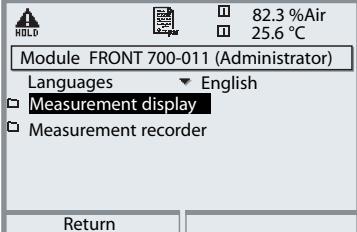
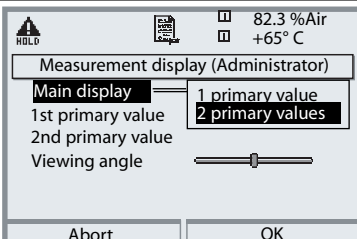
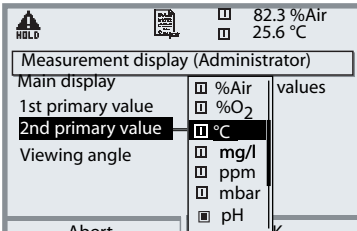
Typical measurement display

## Secondary displays

Additional values, also date and time, can be displayed depending on the modules installed.

## Softkeys

In measuring mode, the softkeys allow selection of values for the secondary displays or control of functions (user defined).
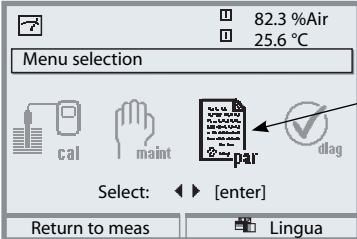
| Menu   | Display   | Configure measurement display   |
|--|---|---|
|  |    | <p><b>Configure measurement display</b><br/> Press <b>menu</b> key to Menu selection<br/> Select parameter setting using arrow keys, confirm with <b>enter</b>. Select:<br/> “Administrator level”: Passcode 1989<br/> (default setting).</p>           |
|  |    | <p>Parameter setting:<br/> Select “Module FRONT”</p>  |
|  |    | <p>Front module:<br/> Select “Measurement display”</p>  |
|  |   | <p>Measurement display:<br/> Set the number of primary values<br/> (large display) to be displayed</p>  |
|  |  | <p>Select process variable(s) to be displayed and confirm with <b>enter</b>.<br/> Note: Automatic range selection<br/> ppm &lt;--&gt; % and ppm &lt;--&gt; ppb;<br/> only suitable unit can be selected!<br/> To return to measurement: <b>meas</b></p> |

# Calibration / Adjustment

---

**Note:** HOLD mode active for the currently calibrated module  
Current outputs and relay contacts behave as configured

- **Calibration:** Detecting deviations without readjustment
- **Adjustment:** Detecting deviations with readjustment

## **Attention:**

Without adjustment every dissolved oxygen meter delivers an imprecise or wrong output value! After replacing the sensor, the electrolyte, or the sensor membrane, you must perform a calibration.

The resulting values must be taken over by an adjustment for calculating the measured variables (measured value display, output signals)!

## **Procedure**

Every dissolved oxygen sensor has its individual slope and zero point. Both values are altered, for example, by aging. For sufficiently high accuracy of oxygen measurement, the meter must be regularly adjusted for the sensor data (calibration + adjustment).

## **Sensor Replacement (First Calibration)**

After replacement of the sensor, electrolyte or sensor membrane, a "First Calibration" should be performed. During First Calibration, the sensor data are stored as reference values for the statistics.

The "Statistics" menu of Diagnostics shows the deviations of zero, slope, calibration temperature, calibration pressure, and response time of the last three calibrations with respect to the reference values of the First Calibration. This allows evaluation of the drift behavior and aging of the sensor.

## **Calibration/Adjustment Methods**

- Automatic calibration in water/air
- Product calibration (saturation/concentration)
- Data entry
- Zero correction

# Adjustment


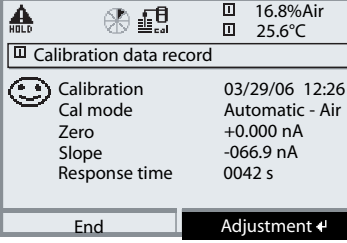
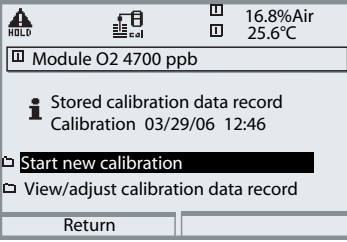
Adjustment means that the values determined by a calibration are taken over. The values determined for zero and slope are entered in the calibration record. (Cal record can be called up in the Diagnostics menu for the module.)

These values are only effective for calculating the measured variables when the calibration has been terminated with an adjustment.

A passcode ensures that an adjustment can only be performed by an authorized person (Administrator).

The Operator can check the current sensor data by a calibration and inform the Administrator when there are deviations.

You can use the additional function SW 700-107 for granting access rights (passcodes) and for Audit Trail (continuous data recording and backup according to FDA 21 CFR Part 11).

| Menu   | Display   | Adjustment after calibration   |
|--|---|--|
|  |   | <p><b>Administrator</b></p> <p>With the corresponding access rights, the device can immediately be adjusted after calibration. The calibration values are taken over for calculating the measured variables.</p>   |
|  |  | <p><b>Operator</b> (without administrator rights)</p> <p>After calibration, change to measuring mode. Inform Administrator. When opening the menu (Calibration, respective module), the Administrator sees all data of the last calibration and can take over the values or perform a new calibration.</p> |

# Adjustment

---

## Recommendations for Calibration

It is always recommended to calibrate in air. Compared to water, air is a calibration medium which is easy to handle, stable, and thus safe. In the most cases, however, the sensor must be dismounted for a calibration in air. In certain processes the sensor cannot be removed for calibration. Here, calibration must be performed directly in the process medium (e.g. with aeration). For applications where concentration is measured, calibration in air has proved to be useful.


## Common Combination: Process Variable / Calibration Mode

| Measurement   | Calibration |
|---------------|-------------|
| Saturation    | Water       |
| Concentration | Air         |

If there is a temperature difference between the calibration medium and the measured medium, the sensor must be kept in the respective medium for several minutes before and after calibration in order to deliver stable measured values. The type of calibration pressure detection is preset during parameter setting.



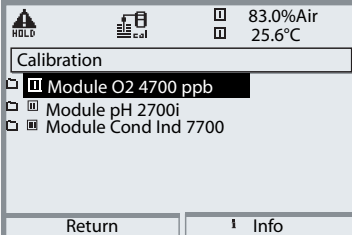
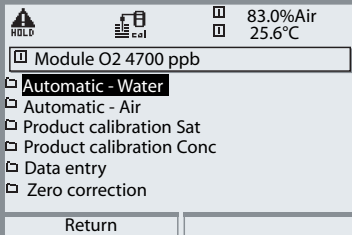
# Calibration / Adjustment

## Selecting a Calibration Method

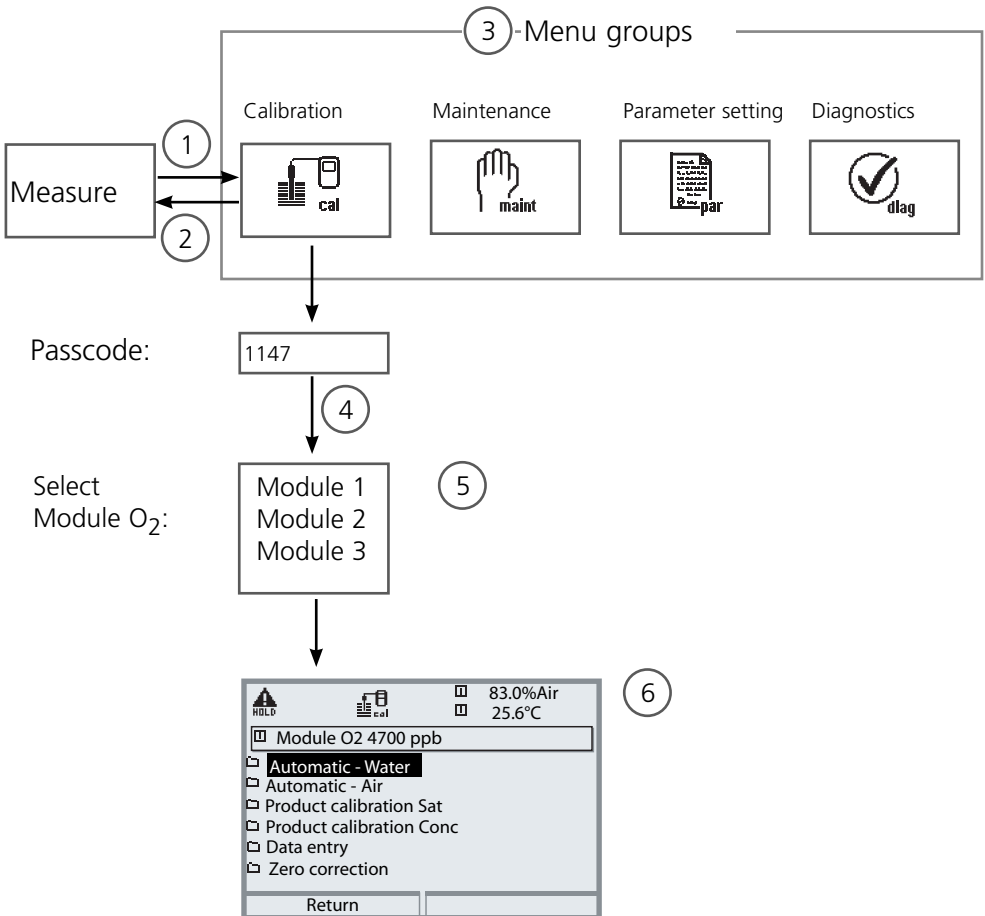

O<sub>2</sub> module calibration: Select a calibration method

- (1) Press **menu** key to access menu selection
- (2) Pressing the **meas** key returns to measurement
- (3) Select Calibration menu group using the arrow keys
- (4) Press **enter** to confirm, enter passcode
- (5) Select O<sub>2</sub> module, confirm with **enter**.
- (6) Select calibration method
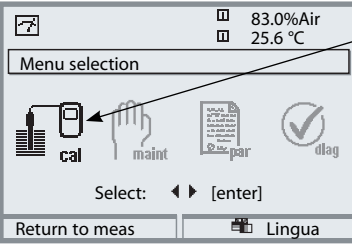
| Menu   | Display  | Select a calibration method   |
|--|--|---|
|  |  <p>The screenshot shows the main menu with a status bar at the top right displaying '83.0% Air' and '25.6 °C'. Below the status bar is a 'Menu selection' field. There are four icons: a bar chart labeled 'cal', a hand labeled 'maint', a document labeled 'pair', and a checkmark labeled 'diag'. Below the icons is a 'Select:' prompt with left and right arrow keys and '[enter]'. At the bottom are two buttons: 'Return to meas' and 'Lingua'.</p> | <p><b>Call up calibration</b></p> <p>Press <b>menu</b> key to select menu. Select calibration using arrow keys, confirm with <b>enter</b>, passcode 1147 (To change passcode, select: Parameter setting / System control / Passcode entry).</p> <p>After passcode entry, the module is in HOLD mode: Current outputs and relay contacts of the currently calibrated module behave as configured (BASE) until the Calibration menu is exited.</p>          |
|  |  <p>The screenshot shows the 'Calibration' menu with a 'HOLD' indicator at the top left. The status bar shows '83.0% Air' and '25.6 °C'. The menu lists three options: 'Module O2 4700 ppb' (highlighted), 'Module pH 2700i', and 'Module Cond Ind 7700'. At the bottom are 'Return' and 'Info' buttons.</p>  | <p>Calibration:<br/>Select "Module O<sub>2</sub>"</p>   |
|  |  <p>The screenshot shows the 'Calibration' menu with 'Automatic - Water' selected. The status bar shows '83.0% Air' and '25.6 °C'. The menu lists several options: 'Automatic - Water' (highlighted), 'Automatic - Air', 'Product calibration Sat', 'Product calibration Conc', 'Data entry', and 'Zero correction'. At the bottom is a 'Return' button.</p>   | <p>Select a calibration method:</p> <ul style="list-style-type: none"> <li>• Automatic - Water</li> <li>• Automatic - Air</li> <li>• Product calibration: Saturation</li> <li>• Product calibration: Concentration</li> <li>• Data entry</li> <li>• Zero correction</li> </ul> <p>When you call up calibration, the analyzer automatically proposes the previous calibration method. If you do not want to calibrate, "Return" with the left softkey.</p> |



# Calibration / Adjustment

## Automatic Calibration in Water

### Automatic Calibration in Water


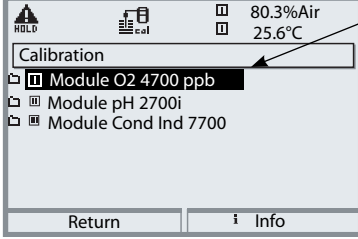
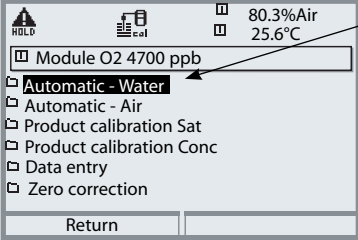
The slope is corrected using the saturation value (100 %) related to air saturation.


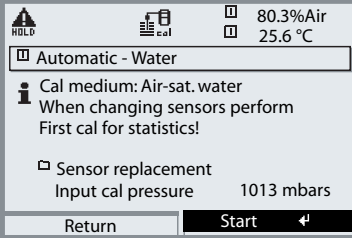
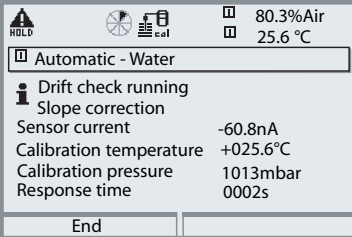
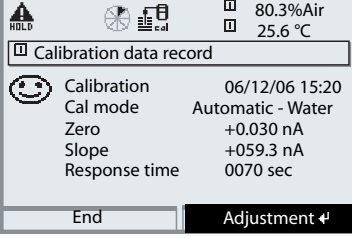
### During calibration the module is in HOLD mode.

Current outputs and relay contacts of the module behave as configured (BASE module).

### Caution!

Ensure sufficient medium flow to the sensor (see Specifications of dissolved oxygen sensors)! The calibration medium must be in equilibrium with air. Oxygen exchange between water and air is very slow. Therefore, it takes a relatively long time until water is saturated with atmospheric oxygen. If there is a temperature difference between calibration medium and measured medium, the sensor must be kept in the respective medium for several minutes before and after calibration.

| Menu  | Display   | Select calibration mode   |
|---|---|---|
|  |  <p>Display content: HOLD, 80.3% Air, 25.6°C, Calibration menu with 'Module O2 4700 ppb' selected. Buttons: Return, Info.</p> | <p><b>Select module:</b> O<sub>2</sub> 4700 ppb</p> <p>The module is in HOLD mode. Current outputs and relay contacts of the currently calibrated module behave as configured (BASE). Confirm with <b>enter</b></p> |
|   |  <p>Display content: HOLD, 80.3% Air, 25.6°C, 'Automatic - Water' selected. Buttons: Return.</p>                             | <p>Select "Automatic - Water" calibration method</p> <p>Remove sensor and immerse it in cal medium (air-saturated water), ensure sufficient medium flow to the sensor. Confirm with <b>enter</b></p>                |

| Menu   | Display   | Automatic calibration in water   |
|--|---|--|
|  |  <p>80.3%Air<br/>25.6 °C</p> <p>Automatic - Water</p> <p>Cal medium: Air-sat. water<br/>When changing sensors perform<br/>First cal for statistics!</p> <p>Sensor replacement<br/>Input cal pressure 1013 mbars</p> <p>Return Start ↵</p>  | <p>Display of selected calibration medium (Air-sat. water)<br/>Enter cal pressure if "manual" has been configured.<br/>Start with softkey or <b>enter</b></p>  |
|  |  <p>80.3%Air<br/>25.6 °C</p> <p>Automatic - Water</p> <p>Drift check running<br/>Slope correction<br/>Sensor current -60.8nA<br/>Calibration temperature +025.6°C<br/>Calibration pressure 1013mbar<br/>Response time 0002s</p> <p>End</p> | <p>Drift check.<br/>Display during calibration</p> <ul style="list-style-type: none"> <li>• Sensor current</li> <li>• Calibration temperature</li> <li>• Calibration pressure</li> <li>• Response time</li> </ul> <p>Waiting time can be reduced by pressing <b>enter</b> (without drift check: reduced accuracy of calibration values!). From the response time, you see how long it takes the sensor to deliver a stable signal. If the signal or the measured temperature fluctuate greatly, the calibration procedure is aborted after 2 min. Calibration must be re-started. If successful, place sensor in process, end calibration with softkey or <b>enter</b></p> |
|  |  <p>80.3%Air<br/>25.6 °C</p> <p>Calibration data record</p> <p>☺ Calibration 06/12/06 15:20<br/>Cal mode Automatic - Water<br/>Zero +0.030 nA<br/>Slope +059.3 nA<br/>Response time 0070 sec</p> <p>End Adjustment ↵</p>                 | <p><b>Adjustment</b><br/>Press "Adjust" to take over the values determined during calibration for calculating the measured variables.</p>  |

# Calibration / Adjustment

## Automatic Calibration in Air


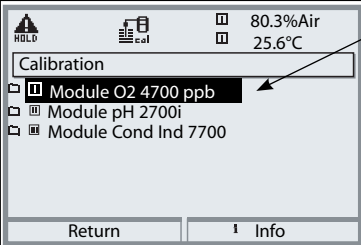
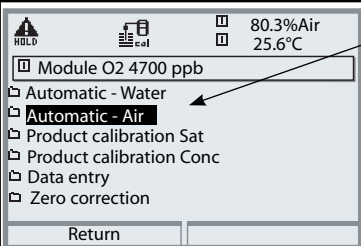
### Automatic Calibration in Air


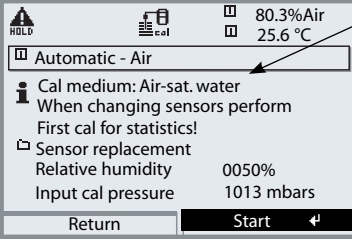
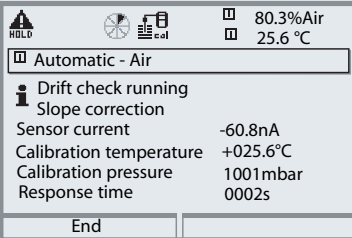
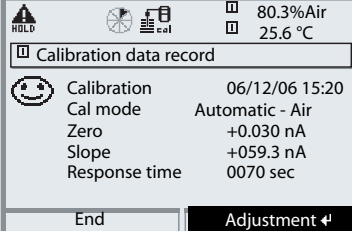
The slope is corrected using the saturation value (100 %), similar to air saturation of water. Since this analogy only applies to water-vapor saturated air (100 % relative humidity) and often the calibration air is less humid, the relative humidity of the calibration air must also be specified. If you do not know the exact value of the relative humidity of the calibration air, you can take the following reference values for a sufficiently precise calibration:

- Ambient air: 50 % rel. humidity (average)
- Bottled gas (synthetic air): 0 % rel. humidity

### Caution!

The sensor membrane must be dry. Be sure to keep temperature and pressure constant during calibration. If there is a temperature difference between calibration medium and measured medium, the sensor must be kept in the respective medium for several minutes before and after calibration.

| Menu  | Display  | Select calibration mode   |
|---|--|---|
|  |  <p>The screenshot shows the 'Calibration' menu with the following options: 'Module O2 4700 ppb', 'Module pH 2700i', and 'Module Cond Ind 7700'. The 'Module O2 4700 ppb' option is highlighted. At the top, it displays '80.3% Air' and '25.6°C'. At the bottom, there are 'Return' and 'Info' buttons.</p>   | <p><b>Select module:</b> O<sub>2</sub> 4700 ppb</p> <p>The module is in HOLD mode. Current outputs and relay contacts of the currently calibrated module behave as configured (BASE). Confirm with <b>enter</b></p> |
|   |  <p>The screenshot shows the 'Automatic - Air' calibration method selected. The menu options are: 'Automatic - Water', 'Automatic - Air', 'Product calibration Sat', 'Product calibration Conc', 'Data entry', and 'Zero correction'. The 'Automatic - Air' option is highlighted. At the top, it displays '80.3% Air' and '25.6°C'. At the bottom, there is a 'Return' button.</p> | <p>Select "Automatic - Air" calibration method</p> <p>Remove sensor and place it in air.</p> <p>Confirm with <b>enter</b>.</p>  |

| Menu   | Display   | Automatic calibration in air   |
|--|---|--|
|  |    | <p>Cal medium: Air<br/>         Select: First calibration<br/>         Enter relative humidity, e.g.:</p> <ul style="list-style-type: none"> <li>• Ambient air: 50 %</li> <li>• Bottled gas: 0 %</li> </ul> <p>Enter cal pressure if "manual" has been configured.<br/>         Start with softkey or <b>enter</b></p>   |
|  |    | <p>Drift check.<br/>         Display during calibration</p> <ul style="list-style-type: none"> <li>• Sensor current, calibration temp, cal pressure and response time.</li> </ul> <p>Waiting time can be reduced by pressing "End" (without drift check: reduced accuracy of calibration values!). From the response time, you see how long it takes the sensor to deliver a stable signal. If the signal or the measured temperature fluctuate greatly, the calibration procedure is aborted after about 2 min. Calibration must be re-started.<br/>         If successful, replace sensor in the process. End calibration with softkey or <b>enter</b></p> |
|  |  | <p><b>Adjustment</b><br/>         Press "Adjust" to take over the values determined during calibration for calculating the measured variables.</p>   |

# Calibration / Adjustment

Product Calibration: Saturation

## Product Calibration: Saturation (Calibration with Sampling)


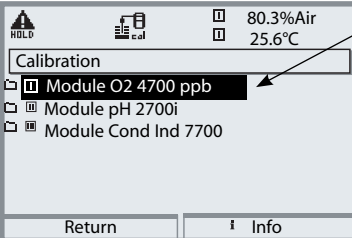
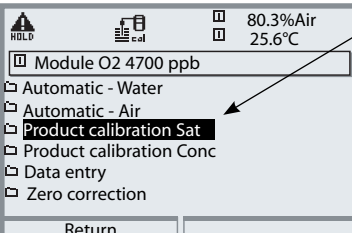
When the sensor cannot be removed – e.g. for sterility reasons – its slope can be determined with “sampling”. To do so, the currently measured saturation value of the process is stored by the M 700. Directly afterwards, a reference value is determined using a portable meter, for example. The reference value is entered into the measuring system. From the difference between measured value and reference value, the M 700 calculates the sensor slope. With low saturation values, the M 700 corrects the zero point, with high values the slope.


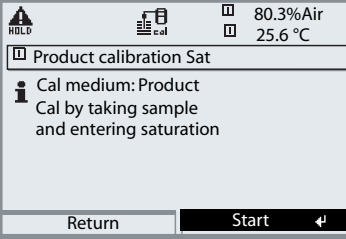
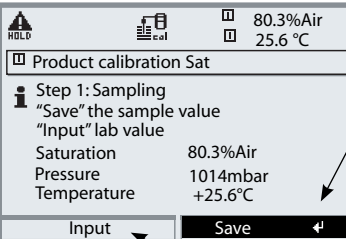
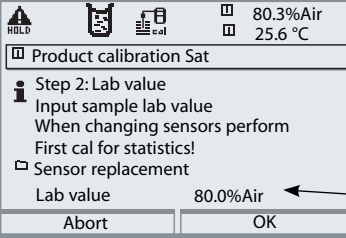
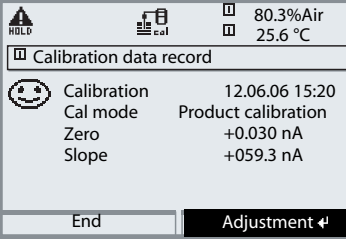
### During calibration the module is in HOLD mode.

Current outputs and relay contacts of the module behave as configured (BASE module).

### Caution!

The reference value must be measured at temperature and pressure conditions similar to those of the process.

| Menu  | Display   | Product calibration: Saturation   |
|---|---|---|
|  |   | <p><b>Select module:</b> O<sub>2</sub> 4700 ppb</p> <p>The module is in HOLD mode. Current outputs and relay contacts of the currently calibrated module behave as configured (BASE). Confirm with <b>enter</b></p> |
|   |  | <p>Select “Product calibration Sat” calibration method</p> <p>Confirm with <b>enter</b>.</p>  |

| Menu   | Display   | Product calibration: Saturation  |
|--|---|--|
|  |   | <p><b>Product calibration Sat</b></p> <p>Product calibration is performed in 2 steps.</p> <p>Prepare reference measurement (e.g. with portable meter), start with softkey or <b>enter</b></p> <p><b>Step 1</b></p> <p>Take sample.</p> <p>Store measured value and temperature at the moment of sampling ("Save" softkey or <b>enter</b>)</p> <p>Press <b>meas</b> to return to measurement.</p> <p><b>Exception:</b></p> <p>Sample value can be measured on the site and be entered immediately. To do so, press "Input" softkey.</p> |
|  |   | <p><b>Step 2</b></p> <p>Lab value has been measured.</p> <p>When you open the Product calibration menu again, the display shown on the left appears:</p> <p>Enter reference value ("Lab value"). Confirm with "OK".</p>  |
|  |    | <p><b>Adjustment</b></p> <p>Press "Adjust" to take over the values determined during calibration for calculating the measured variables.</p>   |

# Calibration / Adjustment

Product Calibration: Concentration

## Product Calibration: Concentration (Calibration with Sampling)


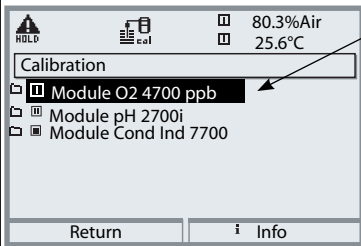
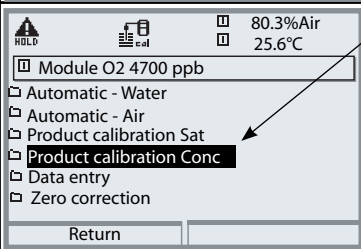
When the sensor cannot be removed – e.g. for sterility reasons – its slope can be determined with “sampling”. To do so, the currently measured concentration value of the process is stored by the M 700. Directly afterwards, a reference value is determined using a portable meter, for example. The reference value is entered into the measuring system. From the difference between measured value and reference value, the M 700 calculates the sensor slope. With low concentration values, the M 700 corrects the zero point, with high concentrations the slope.


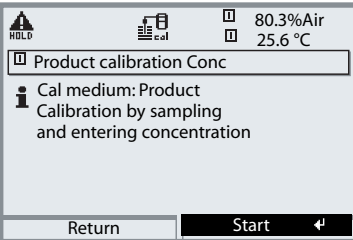
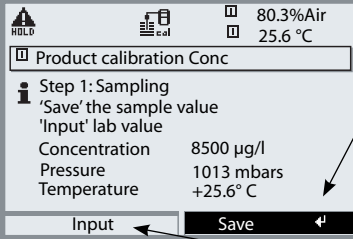
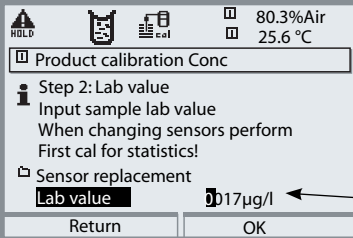
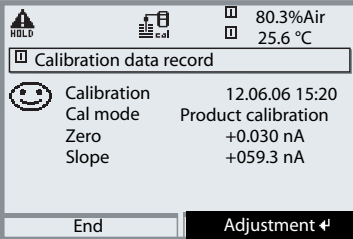
### During calibration the module is in HOLD mode.

Current outputs and relay contacts of the module behave as configured (BASE module).

### Caution!

The reference value must be measured at temperature and pressure conditions similar to those of the process.

| Menu  | Display   | Product calibration: Concentration  |
|---|---|---|
|  |   | <b>Select module:</b> O <sub>2</sub> 4700 ppb<br>The module is in HOLD mode. Current outputs and relay contacts of the currently calibrated module behave as configured (BASE). Confirm with <b>enter</b> |
|   |  | Select “Product calibration Conc” calibration method<br>Confirm with <b>enter</b>   |

| Menu   | Display   | Product calibration:<br>Concentration  |
|--|---|--|
|  |  <p>Product calibration Conc</p> <p>Cal medium: Product<br/>Calibration by sampling<br/>and entering concentration</p> <p>Return    Start ↵</p>  <p>Product calibration Conc</p> <p>Step 1: Sampling<br/>'Save' the sample value<br/>'Input' lab value</p> <p>Concentration    8500 µg/l<br/>Pressure        1013 mbars<br/>Temperature    +25.6° C</p> <p>Input ←    Save ↵</p>  | <p><b>Product calibration Conc</b></p> <p>Product calibration is performed in 2 steps.</p> <p>Prepare reference measurement (e.g. with portable meter), start with softkey or <b>enter</b></p> <p><b>Step 1</b></p> <p>Take sample.<br/>Store measured value and temperature at the moment of sampling ("Save" softkey or <b>enter</b>)<br/>Press <b>meas</b> to return to measurement.</p> <p><b>Exception:</b><br/>Sample value can be measured on the site and be entered immediately. To do so, press "Input" softkey.</p> |
|  |  <p>Product calibration Conc</p> <p>Step 2: Lab value<br/>Input sample lab value<br/>When changing sensors perform<br/>First cal for statistics!</p> <p>Sensor replacement<br/>Lab value    17µg/l</p> <p>Return    OK</p>  <p>Calibration data record</p> <p>Calibration        12.06.06 15:20<br/>Cal mode        Product calibration<br/>Zero                +0.030 nA<br/>Slope               +059.3 nA</p> <p>End    Adjustment ↵</p> | <p><b>Step 2</b></p> <p>Enter reference value ("Lab value"). When you open the Product calibration menu again, the display shown on the left appears:<br/>Enter reference value ("Lab value"). Confirm with "OK".</p> <p><b>Adjustment</b></p> <p>Press "Adjust" to take over the values determined during calibration for calculating the measured variables.</p>   |



# Calibration / Adjustment

## Data Entry of Premeasured Sensors


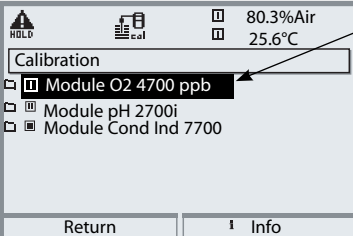
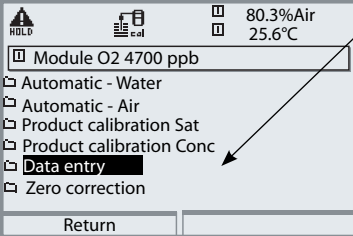
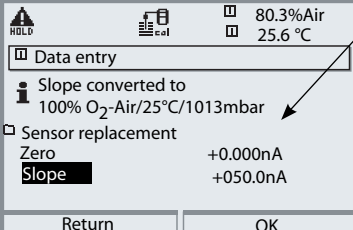
### Data Entry of Premeasured Sensors

Entry of values for slope and zero point of a sensor, related to 25°C, 1013 mbars.

#### During calibration the module is in HOLD mode.

Current outputs and relay contacts of the module behave as configured (BASE module).

Slope = Sensor current at 100 % atmospheric oxygen, 25 °C, 1013 mbars

| Menu   | Display  | Data entry of premeasured sensors   |
|--|--|---|
|  |  <p>The display shows the 'Calibration' menu with options: Module O2 4700 ppb (selected), Module pH 2700i, and Module Cond Ind 7700. The top status bar shows 'HOLD' mode and '80.3% Air 25.6°C'.</p>   | <p><b>Select module:</b> O<sub>2</sub> 4700 ppb<br/>           The module is in HOLD mode. Current outputs and relay contacts of the currently calibrated module behave as configured (BASE). Confirm with <b>enter</b></p> |
|  |  <p>The display shows the 'Data entry' menu for 'Module O2 4700 ppb' with options: Automatic - Water, Automatic - Air, Product calibration Sat, Product calibration Conc, Data entry (selected), and Zero correction. The top status bar shows 'HOLD' mode and '80.3% Air 25.6°C'.</p> | <p>Select "Data entry" calibration method<br/>           Confirm with <b>enter</b></p>  |
|  |  <p>The display shows the 'Data entry' screen for 'Slope converted to 100% O<sub>2</sub>-Air/25°C/1013mbar'. It has input fields for 'Zero' (+0.000nA) and 'Slope' (+050.0nA). The top status bar shows 'HOLD' mode and '80.3% Air 25.6°C'.</p>                                       | <p>Enter the values for</p> <ul style="list-style-type: none"> <li>• Slope</li> <li>• Zero</li> </ul> <p>of premeasured sensor<br/>           Confirm with "OK".</p>  |


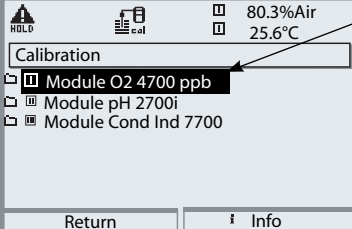
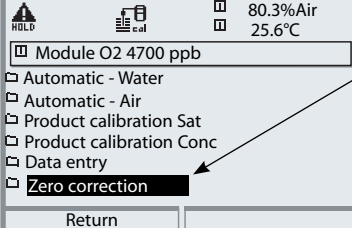
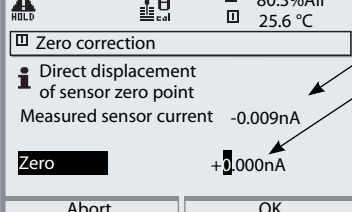
# Calibration / Adjustment

## Zero Correction

### Zero Correction

The series InPro 6xxx sensors have a very low zero current. For trace measurements below 500 ppb, the zero point should be calibrated.


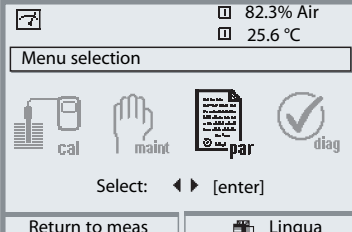
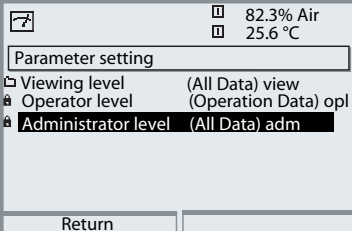
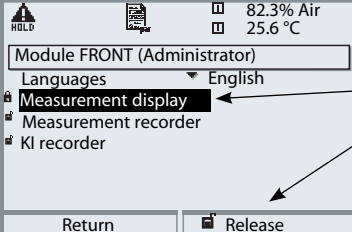
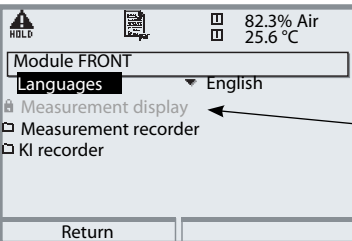
If a zero correction is performed, the sensor should remain for at least 10 to 60 minutes in the calibration medium (media containing CO<sub>2</sub> at least 120 min) to obtain stable, non-drifting values. During zero correction, a drift check is not performed.

| Menu   | Display   | Zero correction   |
|--|---|---|
|  |  <p>Calibration</p> <ul style="list-style-type: none"><li>Module O2 4700 ppb</li><li>Module pH 2700i</li><li>Module Cond Ind 7700</li></ul> <p>Return Info</p>   | <p><b>Select module:</b> O<sub>2</sub> 4700 ppb</p> <p>The module is in HOLD mode. Current outputs and relay contacts of the currently calibrated module behave as configured (BASE). Confirm with <b>enter</b></p> |
|  |  <p>Module O2 4700 ppb</p> <ul style="list-style-type: none"><li>Automatic - Water</li><li>Automatic - Air</li><li>Product calibration Sat</li><li>Product calibration Conc</li><li>Data entry</li><li>Zero correction</li></ul> <p>Return</p> | <p>Select "Zero correction" calibration method</p> <p>Confirm with <b>enter</b></p>   |
|  |  <p>Zero correction</p> <p>Direct displacement of sensor zero point</p> <p>Measured sensor current -0.009nA</p> <p>Zero +0.000nA</p> <p>Abort OK</p>   | <p>Zero correction:</p> <p>Display of measured sensor current.</p> <ul style="list-style-type: none"><li>Enter input current for zero point</li></ul> <p>Confirm with "OK".</p>                                     |

# Parameter Setting: Operating Levels

Viewing level, Operator level, Administrator level


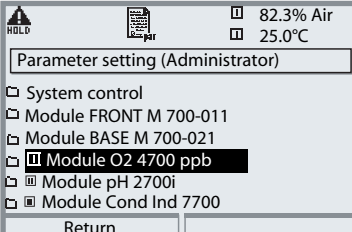
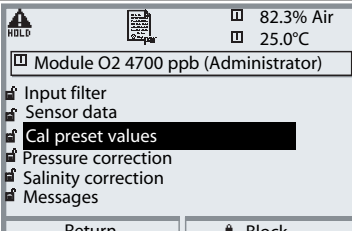
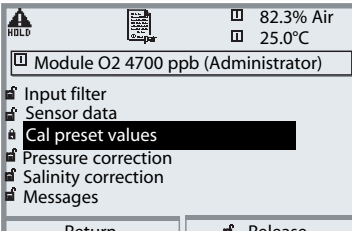

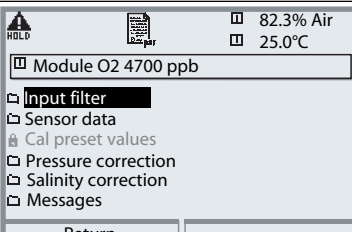
**Note:** HOLD mode (Setting: BASE module)

| Menu   | Display   | Viewing level, Operator level, Administrator level   |
|--|---|--|
|  |    | <p><b>Call up parameter setting</b></p> <p>From the measuring mode:<br/>Press <b>menu</b> key to select menu.<br/>Select parameter setting using arrow keys, confirm with <b>enter</b>.</p>  |
|  |    | <p><b>Administrator level</b></p> <p>Access to all functions, also passcode setting.<br/>Releasing or blocking a function for access from the Operator level.</p>  |
|  |   | <p>Functions which can be blocked for the Operator level are marked with the "lock" symbol.<br/>The functions are released or blocked using the softkey.</p>   |
|  |  | <p><b>Operator level</b></p> <p>Access to all functions which have been released at the Administrator level. Blocked functions are displayed in gray and cannot be edited (Fig.).</p> <p><b>Viewing level</b></p> <p>Display of all settings.<br/>No editing possible!</p> |

# Parameter Setting: Lock Functions


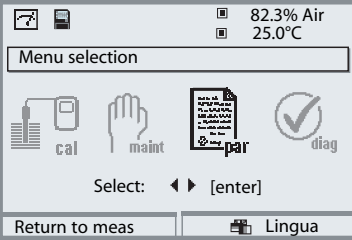
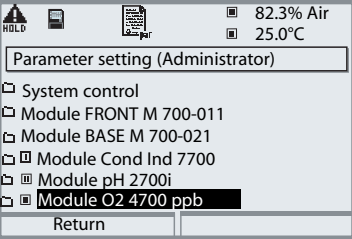
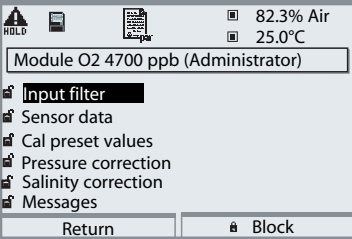
Administrator level: Enable / lock functions for Operator level

**Note:** HOLD mode (Setting: BASE module)

| Menu   | Display   | Administrator level:<br>Enable / lock functions  |
|--|---|--|
|    |    | <p><b>Example:</b> Blocking access to the calibration adjustments from the Operator level</p> <p><b>Call up parameter setting</b><br/>Select Administrator level.<br/>Enter passcode (1989).<br/>Select "Module O<sub>2</sub>" (e.g.) using arrow keys,<br/>confirm with <b>enter</b>.</p> |
|  |    | <p>Select "Cal preset values" using arrow keys.<br/>"Block" with softkey.</p>  |
|  |   | <p>Now, the "Cal preset values" line is marked with the "lock" icon. This function cannot be accessed from the Operator level any more. The softkey function changes to "Release".</p>   |
|  |  | <p><b>Call up parameter setting</b><br/>Select <u>Operator level</u>, passcode (1246).<br/>Select "Module O<sub>2</sub>". Now, the locked function is displayed in gray and marked with the "lock" icon.</p>   |

# Activating Parameter Setting

Call up parameter setting

| Menu   | Display  | Parameter setting  |
|--|--|--|
|  |   | <p><b>Call up parameter setting</b></p> <p>From the measuring mode:<br/>           Press <b>menu</b> key to select menu.<br/>           Select parameter setting using arrow keys, confirm with <b>enter</b>.<br/>           Passcode as delivered: 1989</p> |
|  |   | <p>Select module,<br/>confirm with <b>enter</b>.</p> <p>(In the Figure, the "O<sub>2</sub>" module is selected, for example.)</p>  |
|  |  | <p>Select parameter using arrow keys,<br/>confirm with <b>enter</b>.</p>   |

**During parameter setting the analyzer is in HOLD mode:**

Current outputs and relay contacts behave as configured (BASE module).

# Documenting Parameter Setting

---

You must reproducibly document all parameter settings in the device to achieve a high level of system and device security according to GLP. For that purpose, an Excel file is provided (on the CD-ROM shipped with the basic device or as download at [www.mt.com/pro](http://www.mt.com/pro)) to enter the parameter settings.

The Excel file provides one worksheet for each module with columns for the following parameters: Factory settings, parameter set A, parameter set B. Enter your settings as parameter set A or B.

The gray cells in the parameter set B column cannot be modified since they contain sensor-specific values which cannot be changed by parameter set switchover. Here, the values listed under parameter set A apply.

# Documenting Parameter Setting

|    | A     | B                                | C                       | D                      | E                      | F   |
|----|-------|----------------------------------|-------------------------|------------------------|------------------------|---|
| 1  |       |                                  |                         |                        |                        |   |
| 2  | 1.    | <b>Meßstelle:</b>                |                         |                        |                        | Zugriff über Menüpunkt:                             |
| 3  |       | <b>M 700</b>                     |                         |                        |                        |   |
| 4  | 1.1.  | parametrier am / von:            |                         |                        |                        |   |
| 5  |       |                                  |                         |                        |                        |   |
| 6  |       |                                  |                         |                        |                        |   |
| 7  | 2.    | <b>Gerätebeschreibung</b>        | <b>Hardware</b>         | <b>Software</b>        | <b>Seriennummer</b>    | Diagnose / Gerätebeschreibung                       |
| 8  | 2.1.  | Bedienfront 700-011 :            |                         |                        |                        | Diagnose / Gerätebeschreibung / Front               |
| 9  | 2.2.  | M 700 Base 700-021 :             |                         |                        |                        | Diagnose / Gerätebeschreibung / Base                |
| 10 | 2.3.  | Modul Steckplatz [ I ] :         |                         |                        |                        | Diagnose / Gerätebeschreibung / I                   |
| 11 | 2.4.  | Modul Steckplatz [ II ] :        |                         |                        |                        | Diagnose / Gerätebeschreibung / II                  |
| 12 | 2.5.  | Modul Steckplatz [ III ] :       |                         |                        |                        | Diagnose / Gerätebeschreibung / III                 |
| 13 |       |                                  |                         |                        |                        |   |
| 14 |       |                                  |                         |                        |                        |   |
| 15 |       | <b>M 700 Front</b>               |                         |                        |                        |   |
| 16 | 3.    | <b>M 700 Front Einstellungen</b> | <b>Werkseinstellung</b> | <b>Parametersatz A</b> | <b>Parametersatz B</b> |   |
| 17 | 3.1.  | Sprache:                         | Deutsch                 |                        |                        | Parametrierung (Spezialist) / Modul Front ...       |
| 18 |       |                                  |                         |                        |                        |   |
| 19 | 3.1.1 | Meßwertanzeige:                  |                         |                        |                        |   |
| 20 |       | Hauptanzeige:                    | 2 Hauptmeßwerte         |                        |                        | Parametrierung (Spezialist) / Modul Front ... / Meß |
| 21 |       | 1. Hauptmeßwert (Modul/Wert):    | modulabhängig           |                        |                        |   |
| 22 |       | 2. Hauptmeßwert (Modul/Wert):    | modulabhängig           |                        |                        |   |
| 23 |       | Anzeigeformat (pH)               | xx.xx pH                |                        |                        |   |
| 24 |       | Blickwinkel                      | Mitte                   |                        |                        |   |
| 25 |       |                                  |                         |                        |                        |   |
| 26 | 3.3.  | Nebenanzeige                     |                         |                        |                        | Einstellung erfolgt über Softkeys, wenn in Matrixfu |
| 27 |       | Anzeigewert, links               | -                       |                        |                        |   |
| 28 |       | Anzeigewert, rechts              | -                       |                        |                        |   |
| 29 |       |                                  |                         |                        |                        |   |
| 30 | 3.4   | Meßwertrecorder:                 | Option SW700-103        |                        |                        | Parametrierung (Spezialist) / Modul Front ... / Meß |
| 31 |       | Zeitbasis (t / Pixel)            | 1 min                   |                        |                        |   |
| 32 |       | Zeitlupe (10x)                   | Aus                     |                        |                        |   |
| 33 |       | Min / Max anzeigen               | Ein                     |                        |                        |   |
| 34 | 3.4.1 | Kanal 1: Meßgröße                | modulabhängig           |                        |                        |   |
| 35 |       | Anfang                           | 0.00                    |                        |                        |   |
| 36 |       | Ende                             | 14.00                   |                        |                        |   |
| 37 | 3.4.2 | Kanal 2: Meßgröße                | modulabhängig           |                        |                        |   |
| 38 |       | Anfang                           | -50.0                   |                        |                        |   |
| 39 |       | Ende                             | 150.0                   |                        |                        |   |

From the application window of the Excel file, select the worksheet for the module the parameter settings of which you want to document. Set the parameters of the respective module and enter the selected values in the corresponding cells of the module worksheet.


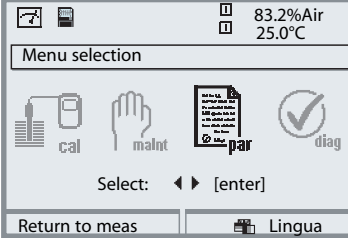

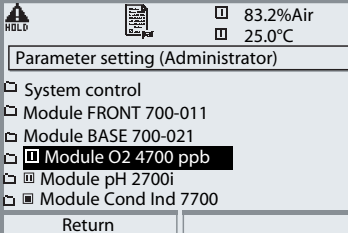
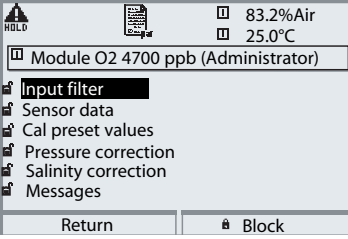
## Caution!

|                |   |
|----------------|---|
| <b>Display</b> | <b>During parameter setting the "HOLD" mode is active.</b>  |
|                | <p><b>HOLD.</b> The NAMUR "function check" contact is active (factory setting: Module BASE, Contact K2, N/O contact). Current output response is user-defined:</p> <ul style="list-style-type: none"> <li>• Current meas.: The currently measured value appears at the current output</li> <li>• Last usable value: The last measured value is held at the current output</li> <li>• Fixed 22 mA: The output current is at 22 mA</li> </ul> |

# Module Configuration: Operating Mode

Call up parameter setting

**Note:** HOLD mode


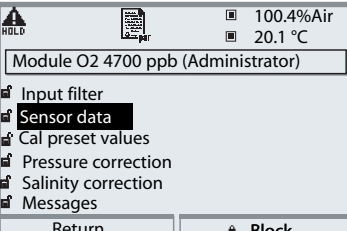
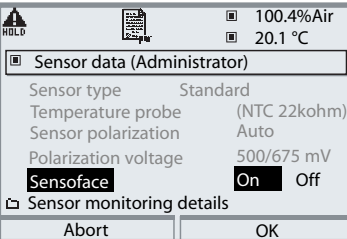
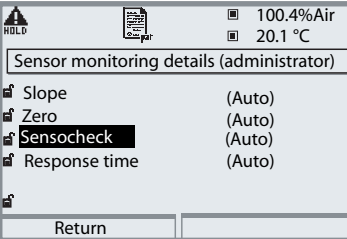
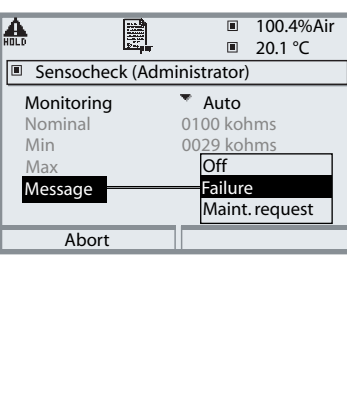
| Menu   | Display  | Parameter setting  |
|--|--|--|
|  |   | <p><b>Call up parameter setting</b></p> <p>From the measuring mode:<br/>Press <b>menu</b> key to select menu.<br/>Select parameter setting using arrow keys, confirm with <b>enter</b>.<br/>Passcode 1989 (To change passcode: Parameter setting/System control/Passcode entry).</p> |
|  |   | <p><b>HOLD</b></p> <p>During parameter setting the analyzer is in "HOLD" mode. Current outputs and relay contacts behave as configured.</p> <p>Select "Module O<sub>2</sub> 4700 ppb".<br/>Confirm with <b>enter</b></p>   |
|  |   | <p>Select "Operating mode" using arrow keys, confirm with <b>enter</b>.</p>  |



# Setting the Sensor Data Parameters

Sensor data: Sensor monitoring details

**Note:** HOLD mode active

| Menu   | Display   | Parameter selection   |
|--|---|---|
|  |    | <p><b>Sensor data</b><br/>(see following page)</p> <p>Sensor data are preset depending on the sensor type.</p> <p>Gray display lines cannot be edited.</p>  |
|  |    | <p><b>Sensoface</b> provides information on the sensor condition (evaluating the sensor data). Great deviations are signaled. Sensoface can be switched off.</p>  |
|  |   | <p><b>Sensor monitoring details</b></p> <p>The following parameters are monitored: zero, slope, response time. For "Auto", the tolerance limits are displayed in gray. For "Individual", the settings can be specified by the user.</p> |
|  |  | <p><b>Message</b></p> <p>Sensochek can generate a message for failure or maintenance request. It can be seen in the Message list of the Diagnostics menu.</p>   |

| Parameter  | Default   | Selection / Range  |
|--|---|--|
| Input filter <ul style="list-style-type: none"> <li>Pulse suppression</li> </ul>   | Off   | Off, On  |
| Sensor data <ul style="list-style-type: none"> <li>Measure in</li> <li>Sensor type</li> <li>Temperature probe **</li> <li>Sensor **</li> <li>Reference electrode **</li> <li>Polarization voltage</li> <li>Sensocheck</li> </ul> | Liquids<br>A Standard<br><br>NTC 22 kohms<br>Without guard<br>Off<br>0675 mV<br>Off | Liquids, Gases (Vol%), Gases (ppm)<br>A Standard, B Trace Sensor (with guard) *,<br>C Trace sensor (without guard), Others<br>NTC 30 kohms, NTC 22 kohms<br>With guard, Without guard<br>On, Off<br>xxxx mV (entry)<br>Off, failure, maintenance request |
| Cal preset values <ul style="list-style-type: none"> <li>Cal saturation</li> <li>Cal concentration</li> <li>Cal timer</li> </ul>   | %AIR<br>mg/l<br>0000 h  | %Air<br>µg/l, mg/l, ppb, ppm<br>xxxx h (entry)   |
| Pressure correction <ul style="list-style-type: none"> <li>Pressure during meas</li> <li>Pressure during cal</li> </ul>  | Auto<br>Auto  | Auto, Manual (default value 1013 mbars)<br>Auto, Manual (default value 1013 mbars)   |
| Salinity correction <ul style="list-style-type: none"> <li>Input</li> </ul>  | Salinity  | Salinity, Chlorinity, Conductivity (00.00 g/kg or 0.000 µS/cm, depending on selection)   |


\* Sensocheck not possible for trace sensor with guard, therefore disabled

\*\* Can only be set with "Sensor type Others" selected

# Sensoface 😊

Sensoface is a graphic indication of the sensor condition.

Prerequisite: Sensocheck must have been activated during parameter setting.

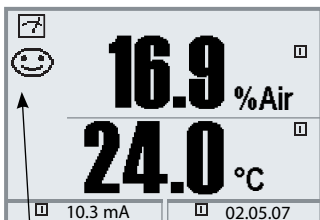

## Sensocheck:

Automatic monitoring of membrane and electrolyte

The “smileys” provide information on wear and required maintenance of the sensor (“friendly” - “neutral” - “sad”).

## Sensoface Criteria (adjustable - see Sensor monitoring)

| Parameter                      | Critical range  |                       |
|--------------------------------|---|-----------------------|
|                                | Sensor Type A   | Sensor Type B         |
| Slope*                         | < -30 nA or > 110 nA  | < -225 nA or > 525 nA |
| Zero                           | < -0.6 nA or > 0.6 nA   | < -1 nA or > 1 nA     |
| Sensocheck<br>(Ref. impedance) | 0.3*R or > 3.5*R<br>however always R < 20 kohms or > 4 Mohms, resp. |                       |
| Response time                  | > 600 sec   |                       |
| Calibration timer              | when 80 % expired   |                       |

\* “Slope”: Sensor current value with oxygen saturation (referred to air), 25°C, and 1013 mbars normal pressure (nA /100 %) The display only indicates the “nA” symbol. From the technical point of view, it is no “slope” but a calibration point. This value shall allow comparing the sensor with the specifications in the datasheet.


# Calculation Blocks

Select menu: Parameter setting/System control/Calculation Blocks  
Calculation of new variables from measured variables


## Calculation Blocks

Two measuring modules with all their measured values serve as input for the calculation block. In addition, the general device status (NAMUR signals) is taken into account. The difference between the existing values is calculated: These output variables are then available in the system and can be assigned to the outputs (current, limit values, display ...)

## Functionality of Measuring Module

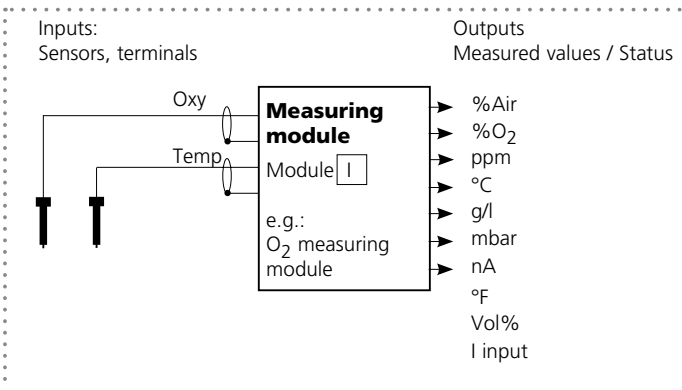


## Functionality of Calculation Block

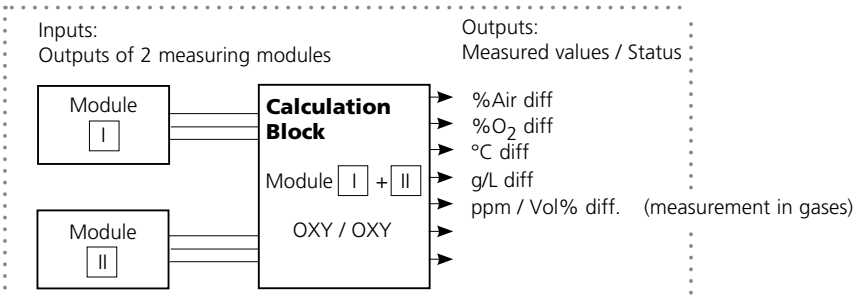

# Activating Calculation Blocks

Select menu: Parameter setting/System control/Calculation Blocks  
 Combining measuring modules to Calculation Blocks

## Combining Measuring Modules


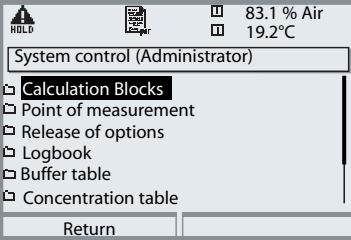
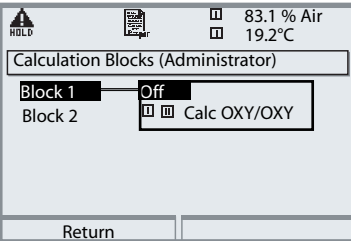
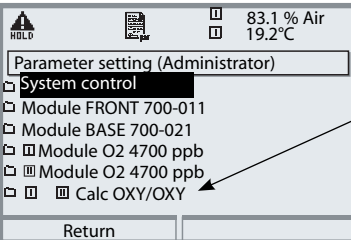
With three measuring modules the following Calculation Block combinations are possible:  +  ,  +  ,  + 

Up to two Calculation Blocks can be activated.

All current outputs can be set to output the new process variables formed by the Calculation Blocks.

All new process variables can be displayed as primary or as secondary value.


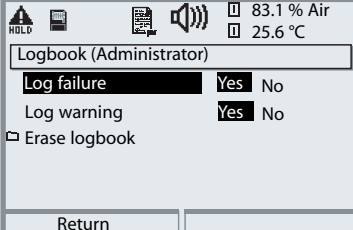
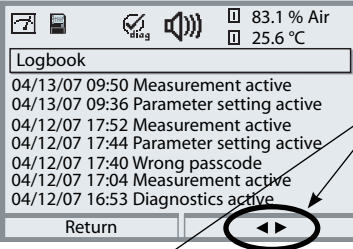
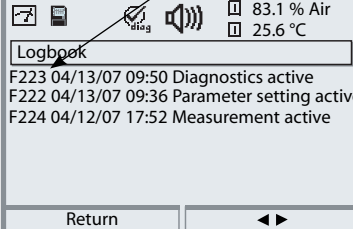
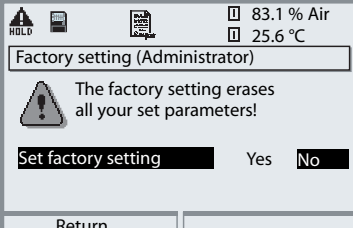
Controller functions are not supported.

| Menu   | Display   | Activating Calculation Blocks   |
|--|---|---|
|  |    | <p><b>Calculation Blocks</b></p> <ul style="list-style-type: none"> <li>• Call up parameter setting</li> <li>• System control</li> <li>• Select "Calculation Blocks"</li> </ul> |
|  |   | <p>Depending on the modules installed, the possible combinations for Calculation Blocks are offered.</p>  |
|  |  | <p>During parameter setting the Calculation Blocks are displayed like modules.</p>  |

# Logbook, Factory Setting

Parameter setting/System control/Logbook

**Note:** HOLD mode

| Menu   | Display   | Logbook, factory setting  |
|--|---|---|
|  |    | <p><b>Logbook</b></p> <p>Select which messages are to be logged in the logbook. The last 50 events are recorded with date and time. This permits quality management documentation to ISO 9000 et seq.</p> |
|  |    | <p>The logbook can be called up from the diagnostics menu (Fig.). Pressing the right softkey displays the message identifier.</p>   |
|  |   | <p>Additional function SW 700-104: Extended logbook for recording data on SmartMedia card (TAN).</p>  |
|  |  | <p><b>Factory setting</b></p> <p>Allows resetting the parameters to their factory setting. When this menu is opened, the analyzer displays a warning (Fig.).</p>  |

# Parameter Setting

Messages: Default settings and selection range


**Note:** HOLD mode (Setting: BASE module)

| Parameter   | Default                         | Selection / Range   |
|---|---------------------------------|---|
| <b>Messages Gas</b> <ul style="list-style-type: none"> <li>• Concentration</li> <li>• Partial pressure</li> <li>• Air pressure</li> </ul>   | Off<br>Off<br>Off               | Off, variable limits*<br>Off, variable limits*<br>Off, device limits max., variable limits*   |
| <b>Messages Liquid</b> <ul style="list-style-type: none"> <li>• Saturation %Air</li> <li>• %O<sub>2</sub> saturation</li> <li>• Concentration</li> <li>• Partial pressure</li> <li>• Air pressure</li> </ul>                        | Off<br>Off<br>Off<br>Off<br>Off | Off, variable limits*<br>Off, variable limits*<br>Off, variable limits*<br>Off, variable limits*<br>Off, device limits max., variable limits* |
| * With "Variable limits" selected, the following parameters can be edited: <ul style="list-style-type: none"> <li>• Failure Limit Lo</li> <li>• Warning Limit Lo</li> <li>• Warning Limit Hi</li> <li>• Failure Limit Hi</li> </ul> |                                 |   |

## Device limits

- Device limits max. Maximum measurement range of device
- Variable limits: Range limits specified


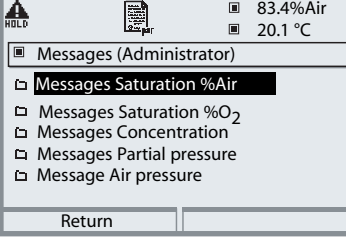
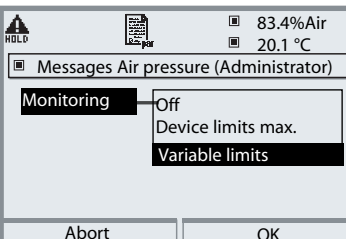
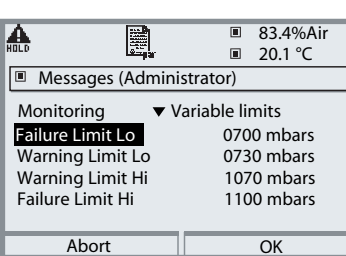


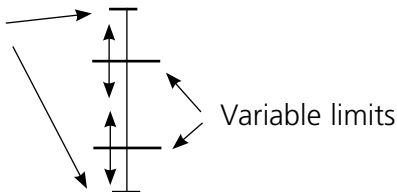
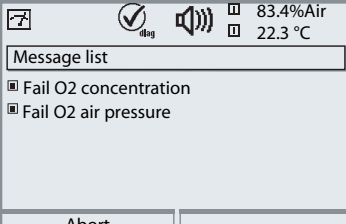
### Device limits max.



# Setting the Message Parameters

Messages

**Note:** HOLD mode (setting: BASE module)


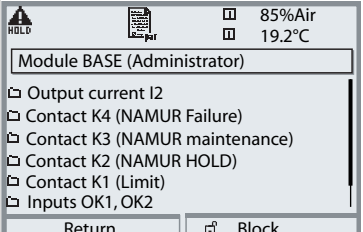
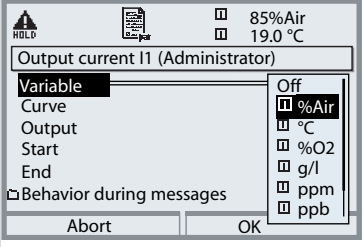
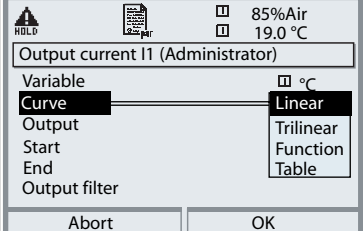
| Menu   | Display  | Messages  |
|--|--|---|
|    |    | <h2>Messages</h2> <p>All parameters determined by the measuring module can generate messages.</p> <ul style="list-style-type: none"> <li> <b>Device limits max:</b><br/>           Messages are generated when the process variable (e.g. air pressure) is outside the measurement range. The "Failure" icon is displayed, the NAMUR failure contact is activated (BASE module, factory setting: contact K4, N/C contact). The current outputs can signal a 22 mA message (user defined).         </li> <li> <b>Variable limits:</b><br/>           For the "failure" and "warning" messages you can define upper and lower limits for message generation.         </li> <li> <b>Message icons:</b><br/>  Failure (Failure limit HiHi/LoLo)<br/>  Maintenance (Warning limit Hi/Lo)         </li> </ul> |
|  |   | <h2>Diagnostics menu</h2> <p>When the "Maintenance" or "Failure" icons are flashing in the display, you should call up the Diagnostics menu. The messages are displayed in the "Message list".</p>  |



# Current Outputs, Contacts, OK Inputs


Select menu: Parameter setting/Module BASE

**Note:** HOLD mode (Setting: BASE module)

| Menu   | Display  | Parameter setting<br>BASE module  |
|--|--|---|
|  |   | <p>To configure current output</p> <ul style="list-style-type: none"> <li>• Call up parameter setting</li> <li>• Enter passcode</li> <li>• Select "Module BASE"</li> <li>• Select "Output current ..."</li> </ul>   |
|  |   | <ul style="list-style-type: none"> <li>• Select process variable<br/>Gas measurement in %/ppm (Liquids: ppm/ppb)<br/>Start and end of current output can be set to the other process variable because also the measured value switches automatically.<br/>The decimal point can be moved using the arrow keys.</li> </ul> |
|  |  | <ul style="list-style-type: none"> <li>• Select Curve,<br/>e.g. "linear": The measured variable is represented by a linear output current curve. The desired range of the measured variable is specified by the values for "Start" and "End".</li> </ul>  |


## Assignment of Measured Values: Start (4 mA) and End (20 mA)

Example 1: Range %Air 50 ... 100

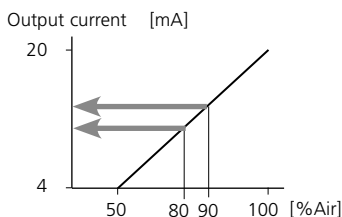

Example 2: Range %Air 80 ... 90

Advantage: Higher resolution in range of interest

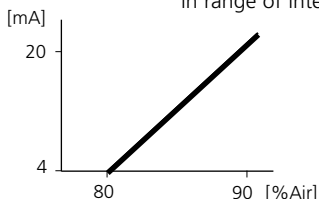


# Current Outputs: Characteristics

---

Select menu: Parameter setting/Module BASE


## • Linear characteristic

The measured variable is represented by a linear output current curve.

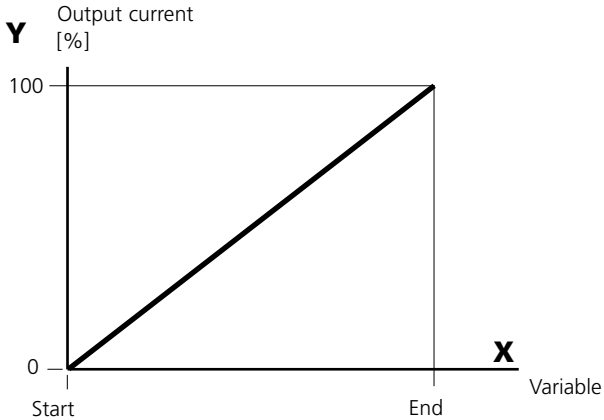

## • Trilinear characteristic

Two additional corner points must be entered:

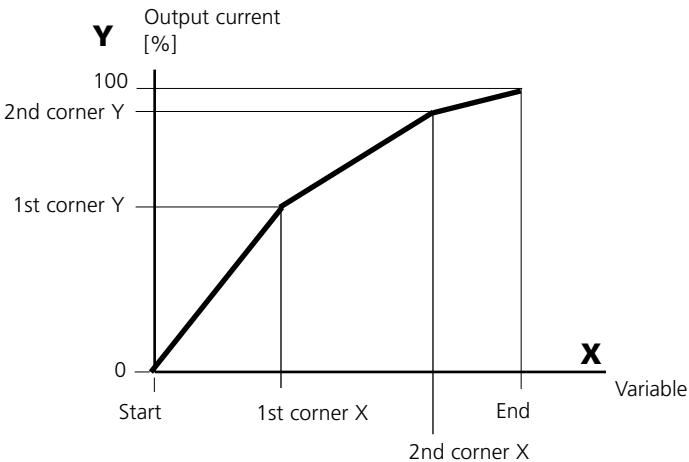


## • Note: Bilinear characteristic

For a bilinear characteristic, identical parameters are entered for the two corner points (1st corner, 2nd corner).

## • Function characteristic

Nonlinear output current characteristic: allows measurements over several decades, e.g. measuring very low values with a high resolution and high values with a low resolution.

Required: Entering a value for 50 % output current.

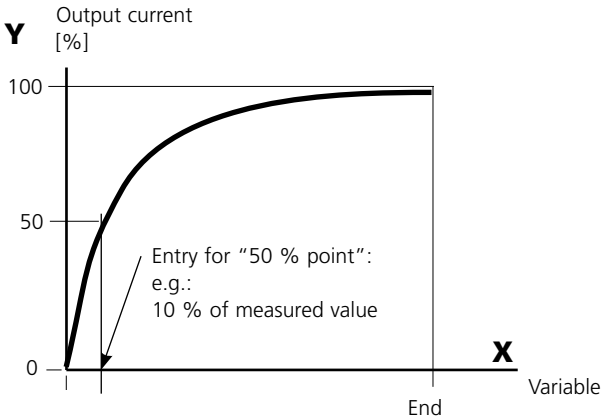

## Equation

$$\text{Output current (4 ... 20 mA)} = \frac{(1+K)x}{1+Kx} 16 \text{ mA} + 4 \text{ mA}$$

$$K = \frac{E + S - 2 * X50\%}{X50\% - S} \qquad x = \frac{M - S}{E - S}$$

S: Start value at 4 mA

X50%: 50% value at 12 mA (output current range 4 to 20 mA)

E: End value at 20 mA

M: Measured value

### Logarithmic output curve over one decade:

S: 10 % of maximum value

X50%: 31.6 % of maximum value

E: Maximum value

### Logarithmic output curve over two decades:

S: 1 % of maximum value

X50%: 10 % of maximum value

E: Maximum value

# Output Filter

---

## Time Constant

### Time Constant of Output Filter

To smoothen the current output, a low-pass filter with adjustable time constant can be switched on. When there is a jump at the input (100 %), the output level is at 63 % after the time constant has been reached.

The time constant can be set from 0 to 120 sec. If the time constant is set to 0 sec, the current output follows the input.

### Notice:

The filter only acts on the current output and the current value of the secondary display, not on the measurement display, the limit values, or the controller!




Time constant 0 to 120 sec

# NAMUR Signals: Current Outputs

Behavior during messages: HOLD, 22 mA signal


## Behavior During Messages

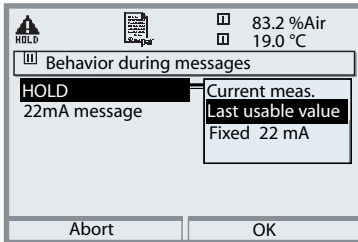

Depending on the parameter setting ("Messages") the current outputs switch to:

- Currently measured value
- Last measured value (HOLD function)
- Fixed value (22 mA)

In the case of a fault a 22 mA signal can be generated for the selected process variable (1st primary value).

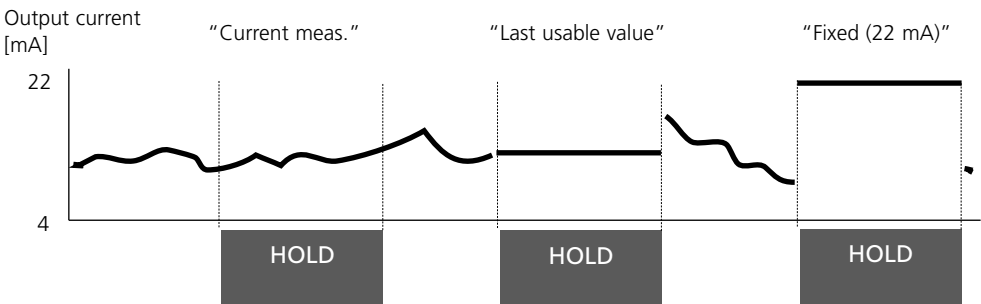

## Message when the Current Range is Exceeded

As delivered, the "Maintenance request" (Warn) message is generated when the current range is exceeded (< 3.8 mA or > 20.5 mA).

This setting can be changed in the Parameter setting menu of the respective measuring module at "Messages".

To generate a "Failure" message, the limit value monitoring must be set to "Variable limits":

Parameter setting - <measuring module> - Messages - Variable limits - Failure limit ...

Enter the same values for the failure limits as for the current output:

Parameter setting - Module BASE - Output current - Variable Start / End.


# NAMUR Signals: Relay Contacts

---

Failure, Maintenance Request, HOLD (Function Check)

As delivered, the floating relay outputs of the BASE module are assigned to the NAMUR signals:

|                       |  |
|-----------------------|--|
| <b>Failure</b>        | Contact K4, normally closed<br>(signaling current failure) |
| <b>Maint. request</b> | Contact K3, normally open contact                          |
| <b>HOLD</b>           | Contact K2, normally open contact                          |

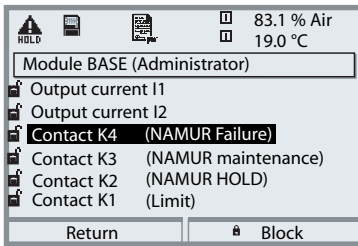

**NAMUR signals:** Factory setting of contacts

- Select parameter setting:
  - Administrator level
  - Select "Module BASE" (Fig.)
- You can define a delay time for "Maintenance request" and "Failure", resp. If an alarm message is released, the contact will only be activated after expiry of this delay time.

**Failure** is active

when a value has exceeded (or fallen below, resp.) a preset "Failure Limit Hi" or "Failure Limit Lo", when the measured value is out of range, or in the event of other failure messages. That means that the equipment no longer operates properly or that process parameters have reached a critical value. Failure is disabled during "HOLD" (Function check).

**Maintenance request** is active

when a value has exceeded (or fallen below, resp.) a preset "Warning Limit Hi" or "Warning Limit Lo", or when other warning messages have been activated. That means that the equipment is still operating properly but should be serviced, (or that process parameters have reached a value requiring intervention).

Failure is disabled during "HOLD" (function check).

**HOLD** is active:


- during calibration
- during maintenance (current source, meas. point maintenance)
- during parameter setting at the Operator level and the Administrator level
- during an automatic rinsing cycle.

# Relay Contacts: Protective Wiring

---

## Protective Wiring of Relay Contacts

Relay contacts are subjected to electrical erosion. Especially with inductive and capacitive loads, the service life of the contacts will be reduced. For suppression of sparks and arcing, components such as RC combinations, nonlinear resistors, series resistors and diodes should be used.

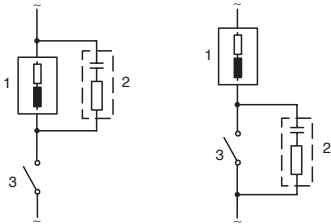

### Typical AC applications with inductive load

- 1 Load
- 2 RC combination, e.g. RIFA PMR 209  
Typical RC combinations  
e.g.  
Capacitor 0.1  $\mu\text{F}$ ,  
Resistor 100 ohms / 1 W
- 3 Contact

## Caution!


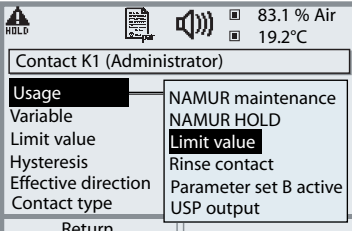
Make sure that the maximum ratings of the relay contacts are not exceeded even during switching!


## Information Concerning Relay Contacts

As delivered, the relay contacts are suitable for low signal currents (down to approx. 1mA). If currents above approx. 100 mA are switched, the gold plating is destroyed during the switching process. After that, the contacts will not reliably switch low currents.

# Relay Contacts

Parameter setting/Module BASE/Relay contacts

| Menu   | Display   | Setting the relay contacts  |
|--|---|---|
|  |  | <p><b>Relay contacts, usage</b></p> <ul style="list-style-type: none"> <li>• Call up parameter setting</li> <li>• Enter passcode</li> <li>• Select "Module BASE"</li> <li>• Select "Contact ..."</li> <li>• "Usage" (Fig.)</li> </ul> |

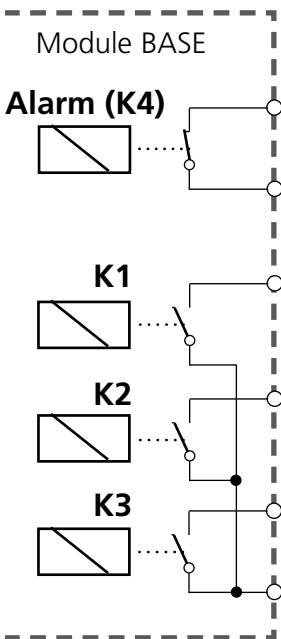

## Contact assignment:

See terminal plate of  
BASE module

The BASE module provides 4 relay contacts (max. AC/DC rating 30 V / 3 A each). Contact K4 is provided for failure message. The switching behavior (normally open or normally closed), as well as a switch-on or switch-off delay can be defined.

## Default settings of the user-definable relay contacts of the BASE module:

K3: NAMUR maintenance request  
K2: NAMUR HOLD (function check)  
K1: Limit


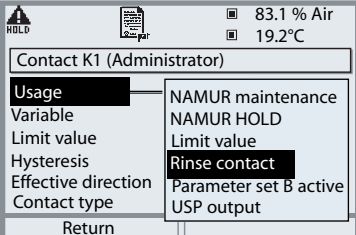
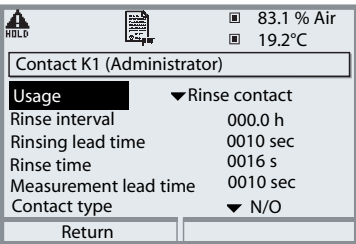
## K1-K3 are user definable ("Usage"):

- NAMUR maintenance
- NAMUR HOLD
- Limit value
- Rinse contact
- Parameter set B active
- USP output (Cond module only)
- K1 rec. active
- Sensoface
- Controller alarm



# Rinse Contact


Parameter setting/Module BASE/Relay contacts/Usage/Rinse contact

| Menu   | Display   | Configuring the rinse contact  |
|--|---|--|
|  |  | <h3>Relay contacts, usage</h3> <ul style="list-style-type: none"> <li>• Call up parameter setting</li> <li>• Enter passcode</li> <li>• Select "Module BASE"</li> <li>• Select contact e.g. K1)</li> <li>• "Rinse contact" (Fig.)</li> </ul>                  |
|  |  | <h3>Configuring the rinse contact</h3> <ul style="list-style-type: none"> <li>• Set rinse interval</li> <li>• Set rinse duration</li> <li>• During the defined "lead time" the "HOLD" mode is active.</li> <li>• Select contact type (e.g. "N/O")</li> </ul> |

## Please note when configuring the "Rinse contact" function

- "HOLD" mode (e.g. during parameter setting) delays the execution of the "Rinse contact" function.
- Up to 3 rinse functions (contacts K1 ... K3) can be configured independently.
- The individual rinse functions are not synchronized with each other.

## Time Response

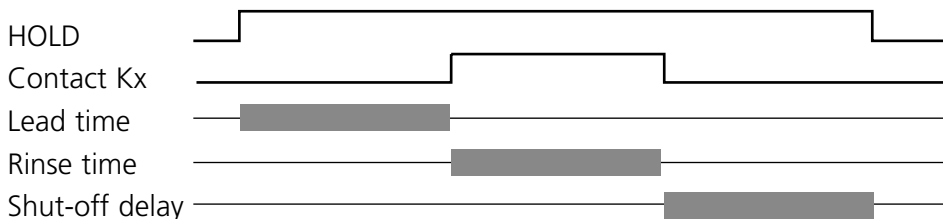


# Limit Value, Hysteresis, Contact Type

Parameter setting/Module BASE/Relay contacts/Usage

| Menu | Display | Usage as limit value  |
|------|---------|---|
|      |         | <b>Relay output: Limit</b> <ul style="list-style-type: none"> <li>• Call up parameter setting</li> <li>• Enter passcode</li> <li>• Select "Module BASE"</li> <li>• Select "Contact ..."</li> <li>• "Usage: Limit" (Fig.)</li> </ul> |


## Limit Value ▾

Effective direction min

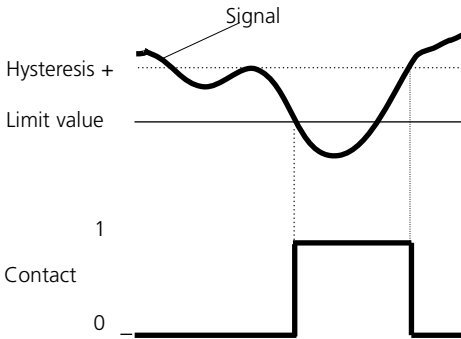

## Limit Value ▲

Effective direction max

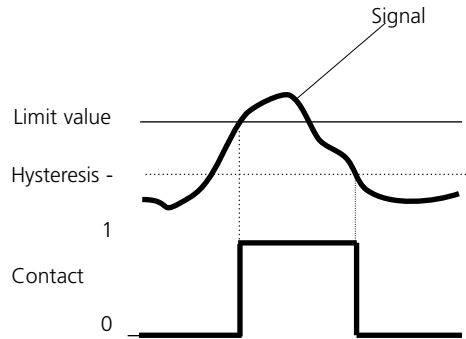

## Icons in the measurement display:

Measured value exceeds limit: ▲ Measured value falls below limit: ▾

## Hysteresis

Tolerance band around the limit value, within which the contact is not actuated. Serves to obtain appropriate switching behavior at the output and suppress slight fluctuations of the measured variable (Fig.)


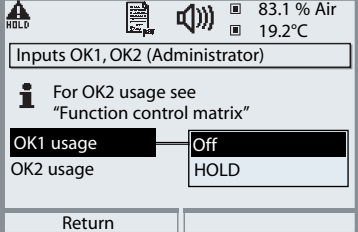
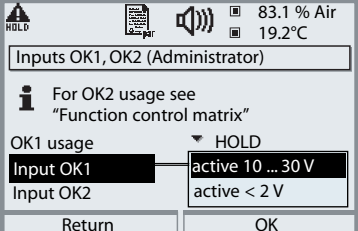
## Contact Type

Specifies whether the active contact is closed (N/O) or open (N/C).

# OK1, OK2 Inputs: Specify Level

Parameter setting/Module BASE/Inputs OK1, OK2


**Note:** HOLD mode (setting: BASE module)

| Menu   | Display   | Setting the OK inputs  |
|--|---|--|
|  |  | <p><b>OK1 usage</b></p> <ul style="list-style-type: none"> <li>• Call up parameter setting</li> <li>• Enter passcode</li> <li>• Select "Module BASE"</li> <li>• Select "Inputs OK1/OK2"</li> <li>• Select "OK1 usage"</li> </ul>                           |
|  |  | <p><b>OK1/OK2 switching level</b></p> <ul style="list-style-type: none"> <li>• Call up parameter setting</li> <li>• Enter passcode</li> <li>• Select "Module BASE"</li> <li>• Select "Inputs OK1/OK2"</li> <li>• Specify active switching level</li> </ul> |

The BASE module provides 2 digital inputs (OK1, OK2). The following functions (depending on the parameter setting) can be started via a control signal:

- OK1: "Off" or "HOLD" (Function check)
- OK2: Select: System control / Function control matrix ("Off", "Parameter set A/B", "Start KI recorder")

The switching level for the control signal must be specified:  
(active 10...30 V or active < 2 V).

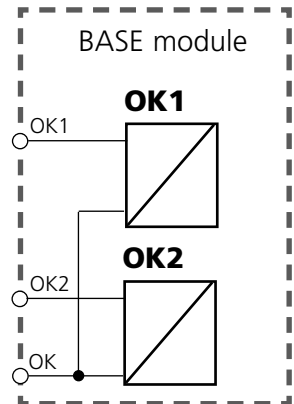

# Switching Parameter Sets via OK2

Parameter setting / System control / Function control matrix

**Note:** HOLD mode (setting: BASE module)


## Parameter sets


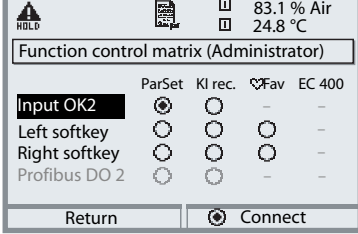
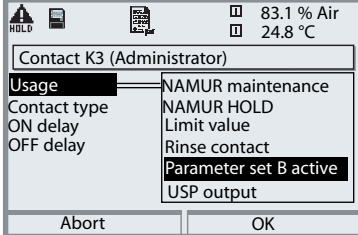
2 complete parameter sets (A, B) can be stored in the analyzer.

You can switch between the parameter sets using the OK2 input.

The currently activated set can be signaled by a relay contact.

An icon in the measurement display shows which parameter set is active:



| Menu   | Display  | Parameter sets  |
|--|--|---|
|  |   | <b>Selecting parameter set (A, B) via OK2 input</b> <ul style="list-style-type: none"> <li>• Call up parameter setting</li> <li>• System control</li> <li>• Function control matrix</li> <li>• Select “OK2”</li> <li>• Connect “Parameter set A/B”</li> </ul> |
|  |  | <b>Signaling active parameter set via relay contact</b> <ul style="list-style-type: none"> <li>• Call up parameter setting</li> <li>• BASE module</li> <li>• Select contact</li> <li>• Usage: “Parameter set ...”.</li> </ul>                                 |











## Notice

The selection has no effect when working on SmartMedia card with SW 700-102.

# Maintenance



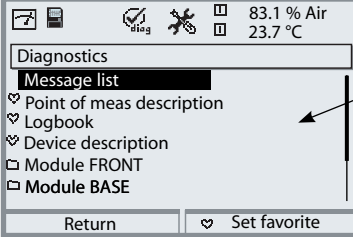
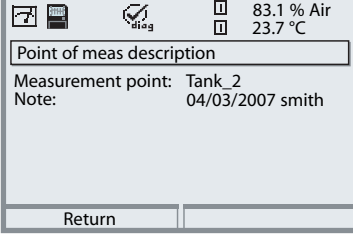
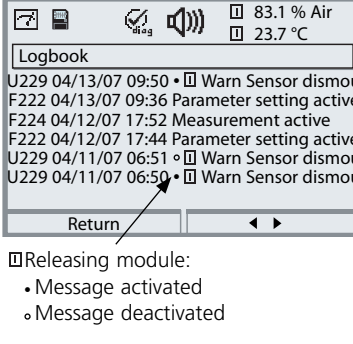
Sensor monitor / Temp probe adjustment


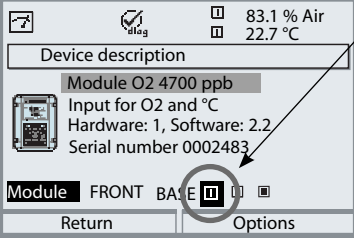
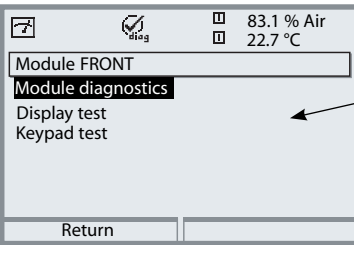
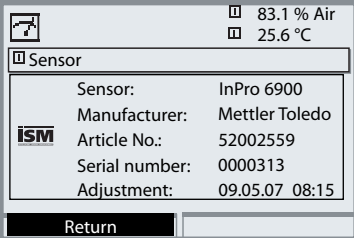
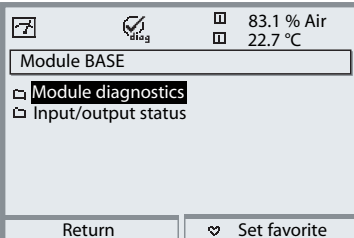
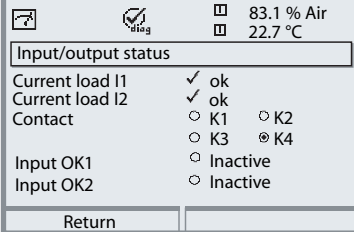
**Note:** HOLD mode (setting: BASE module)

| Menu   | Display  | Maintenance |
|--|--|-------------|
|  | <div data-bbox="180 363 532 608">  <span>80.7%Air<br/>25.6°C</span> <p>Menu selection</p> <div style="display: flex; justify-content: space-around;">     </div> <p>Select: ◀ ▶ [enter]</p> <div style="display: flex; justify-content: space-between;"> <span>Return to meas</span> <span>Lingua</span> </div> </div> <div data-bbox="180 699 532 938">   <span>80.7%Air<br/>25.6°C</span> <p>Sensor monitor</p> <p>Sensor current -60.2 nA<br/>           Sensor current (25°C) -58.5 nA<br/>           Air pressure 1014 mbars<br/>           Ext. pressure transmitter 0 mbars<br/>           RTD 22.0 kΩ<br/>           Temperature 25.1 °C</p> <p>Return</p> </div> <div data-bbox="180 949 532 1189">   <span>16.4%Air<br/>25.6°C</span> <p>Adjust temp probe</p> <p>Probe tolerance and lead adjustment<br/>           Enter measured process temp</p> <p>Installation adjustment <b>On</b> Off<br/>           Process temperature <b>+0</b>25.0°C</p> <div style="display: flex; justify-content: space-between;"> <span>Abort</span> <span>OK</span> </div> </div> |             |

# Diagnostics Functions



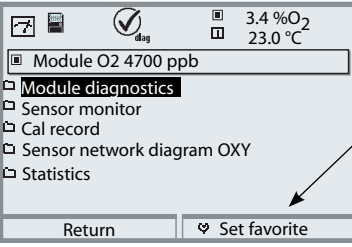
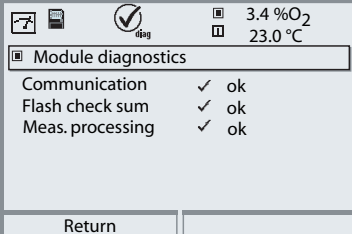
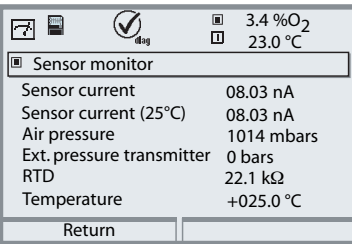
General status information of the measuring system  
 Select menu: Diagnostics
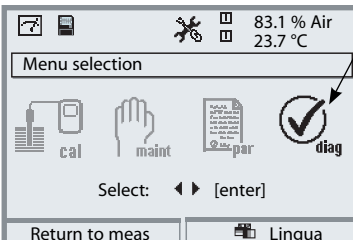
| Menu   | Display   | Diagnostics functions   |
|--|---|---|
|  |    | <p><b>Call up diagnostics</b></p> <p>From the measuring mode:<br/>       Press <b>menu</b> key to select menu.<br/>       Select diagnostics using arrow keys,<br/>       confirm with <b>enter</b>.</p>  |
|  |    | <p>The “Diagnostics” menu gives an overview of all functions available. Functions which have been set as “Favorite” can be directly accessed from the measuring mode.</p>   |
|  |   | <p><b>Point of meas description</b></p> <p>Allows entering a tag number and a note. Select position: left/right arrow key, select character: up/down arrow key. Confirm the entry with <b>enter</b>.</p>  |
|  |  | <p><b>Logbook</b></p> <p>Shows the last 50 events with message identifier, date, time, module concerned, and plaintext of the message. This permits quality management documentation to ISO 9000 et seq. Extended logbook: SmartMedia card (SW 700-104)</p> |

| Menu   | Display  | Diagnostics functions  |
|--|--|--|
| <br>diag |  <p>83.1 % Air<br/>22.7 °C</p> <p>Device description</p> <p>Module O2 4700 ppb</p> <p>Input for O2 and °C<br/>Hardware: 1, Software: 2.2<br/>Serial number 0002483</p> <p>Module FRONT BASE</p> <p>Return Options</p>   | <p><b>Device description</b></p> <p>Select module using arrow keys:<br/>Provides information about all modules installed: Function, serial number, hardware and software version, and device options.</p>                        |
|  |  <p>83.1 % Air<br/>22.7 °C</p> <p>Module FRONT</p> <p>Module diagnostics</p> <p>Display test<br/>Keypad test</p> <p>Return</p>  | <p><b>FRONT module</b></p> <p>The module contains the display and keypad control. Test possibilities:</p> <ul style="list-style-type: none"> <li>• Module diagnostics</li> <li>• Display test</li> <li>• Keypad test</li> </ul>  |
|  |  <p>83.1 % Air<br/>25.6 °C</p> <p>Sensor</p> <p>Sensor: InPro 6900<br/>Manufacturer: Mettler Toledo<br/>Article No.: 52002559<br/>Serial number: 0000313<br/>Adjustment: 09.05.07 08:15</p> <p>Return</p>               | <p><b>ISM sensor description*</b></p> <p>Information on sensor type, manufacturer, article no., serial number, date of last adjustment</p> <p>* Menu is only displayed for ISM modules when a valid ISM sensor is connected.</p> |
|  |  <p>83.1 % Air<br/>22.7 °C</p> <p>Module BASE</p> <p>Module diagnostics</p> <p>Input/output status</p> <p>Return Set favorite</p>  | <p><b>BASE module</b></p> <p>The module generates the standard output signals. Test possibilities:</p> <ul style="list-style-type: none"> <li>• Module diagnostics</li> <li>• Input/output status</li> </ul>                     |
|  |  <p>83.1 % Air<br/>22.7 °C</p> <p>Input/output status</p> <p>Current load I1 ✓ ok<br/>Current load I2 ✓ ok<br/>Contact ○ K1 ○ K2<br/>○ K3 ⊗ K4</p> <p>Input OK1 ○ Inactive<br/>Input OK2 ○ Inactive</p> <p>Return</p> | <p>Example:<br/>Module BASE, input/output status.</p>  |

# Module Diagnostics

Module diagnostics/Sensor monitor/Cal record/Sensor network diagram/Statistics
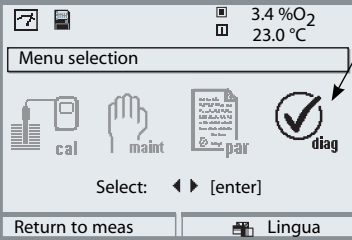
| Menu   | Display   | Module diagnostics / Sensor monitor   |
|--|---|---|
|  |    | <p><b>Call up diagnostics</b></p> <p>From the measuring mode:<br/>Press <b>menu</b> key to select menu.<br/>Select diagnostics using arrow keys, confirm with <b>enter</b>.<br/>Then select "Module O<sub>2</sub>".</p>   |
|  |    | <p>The Diagnostics menu gives an overview of all diagnostics functions available. Messages set as "Favorite" can be called up directly from the measuring mode using a softkey.<br/>Select:<br/>Parameter setting / System control / Function control matrix.</p> |
|  |   | <p><b>Module diagnostics</b></p> <p>Function test of internal components:</p> <ul style="list-style-type: none"> <li>- Internal device communication</li> <li>- Check of firmware (module)</li> <li>- Factory settings, measured value processing</li> </ul>      |
|  |  | <p><b>Sensor monitor</b></p> <p>Shows the current directly measured by the sensor, the barometric pressure, and temperature. Important function for diagnostics and validation!</p>   |



**Menu Display**

**Cal record / Sensor network diagram / Statistics**



3.4 %O<sub>2</sub>  
 23.0 °C

**Cal record**

|                   |                   |
|-------------------|-------------------|
| Last calibration  | 09.06.06 10:29    |
| Cal mode          | Automatic - Water |
| Zero              | +0.010 nA         |
| Slope             | -050.0 nA         |
| Impedance         | 998.3 kΩ          |
| Relative humidity | 0051 %            |

Return

**Cal record**

Data of last calibration, suitable for documentation to ISO 9000 and GLP (Date, time, calibration method, sensor zero and slope, rel. humidity for calibration in air)

3.4 %O<sub>2</sub>  
 23.0 °C


**Sensor network diagram**

- 1 - Slope
- 2 - Zero point
- 3 - Sensocheck
- 4 - Not in use
- 5 - Response time
- 6 - Cal timer
- 7 - Sensor wear

Return      Info

**Sensor network diagram**

The measured values are continuously monitored during the measurement process. The sensor network diagram provides at-a-glance information about critical parameters. If a tolerance limit has been exceeded, the respective parameter is flashing.

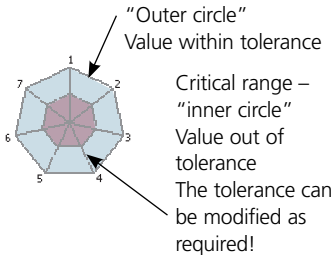

Values in gray: Monitoring switched off.

3.4 %O<sub>2</sub>  
 23.0 °C

**Sensor wear monitor**

|                       |        |
|-----------------------|--------|
| Sensor wear           |        |
| Sensor operating time | 635 d  |
| Autoclaving cycles    | 1 of 2 |
| CIP cycles            | 1 of 5 |
| SIP cycles            | 0 of 3 |

Return

**Sensor wear monitor (ISM)**

In addition to the current sensor wear, the sensor operating time as well as the number of executed autoclaving, CIP, or SIP cycles can be seen at a glance.

\* Menu is only displayed for ISM modules when a valid ISM sensor is connected.

3.4 %O<sub>2</sub>  
 22.7 °C

**Statistics**

|         |                         |
|---------|-------------------------|
| Zero    |                         |
| 1st Cal | +0.000nA 07/01/05 10:20 |
| Diff    | +0.010nA 07/11/05 12:34 |
| Diff    | -0.020nA 07/12/05 10:35 |
| Diff    | +0.900nA 07/18/05 10:42 |
| Slope   |                         |

Return

**Statistics**

Indication of sensor data for the First Calibration and the last 3 calibrations.

(Date and time of First Calibration, sensor zero and slope, temperature, pressure, response time)

# Setting Diagnostics Messages as Favorite

Select menu: Parameter setting/System control/Function control matrix

## Secondary Displays (1)

Here, additional values are displayed in the measuring mode according to the factory setting. When the respective softkey (2) is pressed, the process variables measured by the modules plus date or time are displayed. In addition, you can use the **softkeys (2)** to control functions.

To assign a function to a softkey, select

## Parameter setting/System control/ Function control matrix


Function which can be controlled by softkeys:

- Parameter set selection
- KI recorder Start/Stop
- Favorites
- EC 400 (fully automated probe controller)

## Favorites

Selected Diagnostics functions can be called up directly from the measuring mode using a softkey.

The table on the next page explains how to select favorites.

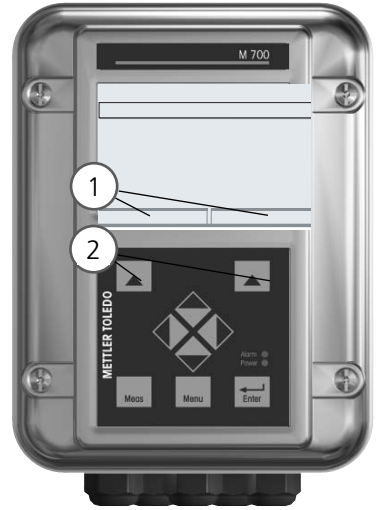

|                     | ParSet                | KI rec.               | Fav                              | EC 400 |
|---------------------|-----------------------|-----------------------|----------------------------------|--------|
| Input OK2           | <input type="radio"/> | <input type="radio"/> | <input type="radio"/>            | -      |
| <b>Left softkey</b> | <input type="radio"/> | <input type="radio"/> | <input type="radio"/>            | -      |
| Right softkey       | <input type="radio"/> | <input type="radio"/> | <input checked="" type="radio"/> | -      |
| Profibus DO 2       | <input type="radio"/> | <input type="radio"/> | <input type="radio"/>            | -      |

Return       Connect

Example:



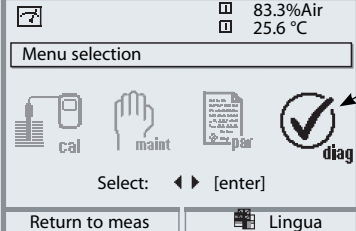
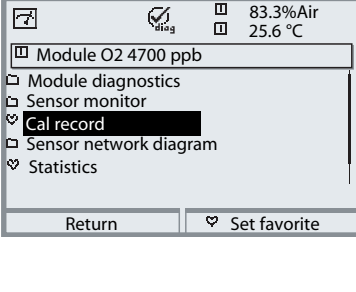
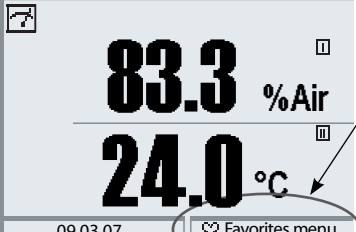
"Favorites" to be selected with "Right softkey"

To select a softkey function:

Select desired function using arrow keys, press "Connect" softkey and confirm with **enter**.

To deselect a function:

Press "Disconnect" softkey, confirm with **enter**.

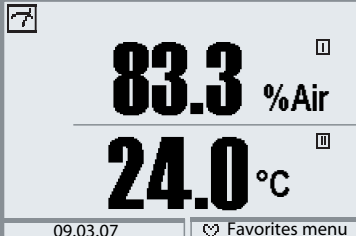

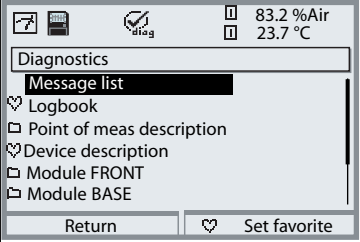
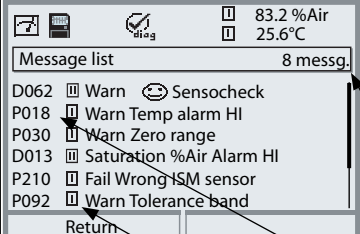
| Menu   | Display   | Select favorites  |
|--|---|---|
|  |    | <p><b>Favorites menu</b></p> <p>Diagnostics functions can be called up directly from the measuring mode using a softkey. The "Favorites" are selected in the Diagnostics menu.</p>                |
|  |    | <p><b>Select favorites</b></p> <p>Press <b>menu</b> key to Menu selection. Select diagnostics using arrow keys, confirm with <b>enter</b>. Then select module and confirm with <b>enter</b>.</p>  |
|  |   | <p>Set/delete favorite:</p> <p>"Set favorite" allows activation of the selected diagnostic function directly from the measuring mode via softkey. The menu line is marked with a heart icon.</p>  |
|  |  | <p>Pressing the <b>meas</b> key returns to measurement. When the softkey has been assigned to "Favorites", "Favorites menu" is read in the secondary display (see "Function control matrix").</p> |

**Notice:**

When one of the softkeys has been assigned to the "Favorites menu" function, diagnostic functions which have been set as "Favorite" can be directly called up from the measuring mode.

# Diagnostics Functions

General status information of the measuring system  
 Select menu: Diagnostics - Message list
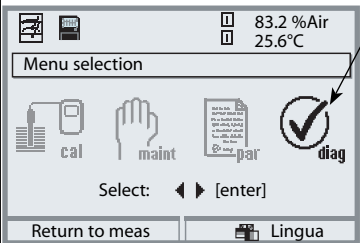
| Menu   | Display  | Diagnostics functions   |
|--|--|---|
|  |   | <p><b>Call up diagnostics</b><br/>       From the measuring mode:<br/>       Press <b>menu</b> key to select menu.<br/>       Select diagnostics using arrow keys,<br/>       confirm with <b>enter</b>.</p>  |
|  |   | <p>The “Diagnostics” menu gives an overview of all functions available. Functions which have been set as “Favorite” can be directly accessed from the measuring mode.</p>   |
|  |  | <p><b>Message list</b><br/>       Shows the currently activated warning or failure messages in plain text.</p> <p><b>Number of messages</b><br/>       When there are more than 7 messages, a vertical scrollbar appears. Scroll with the up/down arrow keys.</p> <p><b>Message identifier</b><br/>       See message list for description.</p> <p><b>Module identifier</b><br/>       Specifies the module that has generated the message.</p> |

# Messages

---

## O<sub>2</sub> 4700(X) ppb Module

| No.  | O <sub>2</sub> Messages                   | Message type |
|------|---|--------------|
| D008 | Meas. processing (factory settings)       | FAIL         |
| D009 | Module failure (Firmware Flash check sum) | FAIL         |
| D010 | Saturation %Air Range                     | FAIL         |
| D011 | Saturation %Air Alarm LO_LO               | FAIL         |
| D012 | Saturation %Air Alarm LO                  | WARN         |
| D013 | Saturation %Air Alarm HI                  | WARN         |
| D014 | Saturation %Air Alarm HI_HI               | FAIL         |
| D015 | Temperature range                         | FAIL         |
| D016 | Temperature Alarm LO_LO                   | FAIL         |
| D017 | Temperature Alarm LO                      | WARN         |
| D018 | Temperature Alarm HI                      | WARN         |
| D019 | Temperature Alarm HI_HI                   | FAIL         |
| D020 | Concentration range                       | FAIL         |
| D021 | Concentration Alarm LO_LO                 | FAIL         |
| D022 | Concentration Alarm LO                    | WARN         |
| D023 | Concentration Alarm HI                    | WARN         |
| D024 | Concentration Alarm HI_HI                 | FAIL         |
| D025 | Part. press. range                        | FAIL         |
| D026 | Part. press. Alarm LO_LO                  | FAIL         |
| D027 | Part. press. Alarm LO                     | WARN         |
| D028 | Part. press. Alarm HI                     | WARN         |
| D029 | Part. press. Alarm HI_HI                  | FAIL         |
| D030 | Zero range                                | WARN         |
| D035 | Slope range                               | WARN         |
| D040 | Air pressure range                        | WARN         |

# Messages

---

| <b>No.</b> | <b>O<sub>2</sub> Messages</b>           | <b>Message type</b> |
|------------|---|---------------------|
| D041       | Air pressure Alarm LO_LO                | FAIL                |
| D042       | Air pressure Alarm LO                   | WARN                |
| D043       | Air pressure Alarm HI                   | WARN                |
| D044       | Air pressure Alarm HI_HI                | FAIL                |
| D045       | Saturation %O2 Range                    | FAIL                |
| D046       | Saturation %O2 Alarm LO_LO              | FAIL                |
| D047       | Saturation %O2 Alarm LO                 | WARN                |
| D048       | Saturation %O2 Alarm HI                 | WARN                |
| D049       | Saturation %O2 Alarm HI_HI              | FAIL                |
| D050       | Air pressure Manual range               | WARN                |
| D060       | SAD SENSOFACE: Slope                    | WARN                |
| D061       | SAD SENSOFACE: Zero                     | WARN                |
| D062       | SAD SENSOFACE: Sensocheck               | User-defined        |
| D063       | SAD SENSOFACE: Response time            | WARN                |
| D064       | Calibration timer                       | WARN                |
| D070       | SAD SENSOFACE: Sensor wear              | User-defined        |
| D080       | Range (sensor current)                  | WARN                |
| D090       | Vol% range (measurement in gases)       | WARN                |
| D091       | Vol% Alarm LO_LO (measurement in gases) | FAIL                |
| D092       | Vol% Alarm LO (measurement in gases)    | WARN                |
| D093       | Vol% Alarm HI (measurement in gases)    | WARN                |
| D094       | Vol% Alarm HI_HI (measurement in gases) | FAIL                |
| D095       | ppm range (measurement in gases)        | FAIL                |
| D096       | ppm Alarm LO_LO (measurement in gases)  | FAIL                |
| D097       | ppm Alarm LO (measurement in gases)     | WARN                |
| D098       | ppm Alarm HI (measurement in gases)     | WARN                |
| D099       | ppm Alarm HI_HI (measurement in gases)  | FAIL                |
| D110       | CIP counter                             | User-defined        |
| D111       | SIP counter                             | User-defined        |
| D112       | Autoclaving counter                     | User-defined        |

# Messages

---

| No.  | O <sub>2</sub> Messages                                | Message type |
|------|--|--------------|
| D113 | Sensor operating time (duration of use)                | User-defined |
| D114 | Membrane body changes                                  | User-defined |
| D115 | Inner body changes                                     | User-defined |
| D120 | Wrong ISM sensor                                       | FAIL         |
| D121 | ISM sensor (error in factory settings/characteristics) | FAIL         |
| D122 | ISM sensor memory (error in cal data records)          | WARN         |
| D123 | New sensor, adjustment required                        | WARN         |
| D130 | SIP cycle counted                                      | Text         |
| D131 | CIP cycle counted                                      | Text         |
| D200 | Temp O <sub>2</sub> conc/SAT                           | WARN         |
| D201 | Cal temp   | Text         |
| D203 | Cal: Identical media                                   | Text         |
| D204 | Cal: Media interchanged                                | Text         |
| D205 | Cal: Sensor unstable                                   | Text         |
| D254 | Module reset   | Text         |

| No.  | Messages Calculation Blocks O <sub>2</sub> / O <sub>2</sub> | Message type |
|------|---|--------------|
| H010 | %AIR-Diff Range   | FAIL         |
| H011 | %AIR-Diff Alarm LO_LO                                       | FAIL         |
| H012 | %AIR-Diff Alarm LO  | WARN         |
| H013 | %AIR-Diff Alarm HI  | WARN         |
| H014 | %AIR-Diff Alarm HI_HI                                       | FAIL         |
| H015 | Temperature-Diff Range                                      | FAIL         |
| H016 | Temperature-Diff Alarm LO_LO                                | FAIL         |
| H017 | Temperature-Diff Alarm LO                                   | WARN         |
| H018 | Temperature-Diff Alarm HI                                   | WARN         |
| H019 | Temperature-Diff Alarm HI_HI                                | FAIL         |
| H020 | Concentration-Diff Range                                    | FAIL         |
| H021 | Concentration-Diff Alarm LO_LO                              | FAIL         |

# Messages

---

| No.  | Messages Calculation Blocks O <sub>2</sub> / O <sub>2</sub> | Message type |
|------|---|--------------|
| H022 | Concentration-Diff Alarm LO                                 | WARN         |
| H023 | Concentration-Diff Alarm HI                                 | WARN         |
| H024 | Concentration-Diff Alarm HI_HI                              | FAIL         |
| H045 | %O <sub>2</sub> Diff Range                                  | FAIL         |
| H046 | %O <sub>2</sub> Diff Alarm LO_LO                            | FAIL         |
| H047 | %O <sub>2</sub> Diff Alarm LO                               | WARN         |
| H048 | %O <sub>2</sub> Diff Alarm HI                               | WARN         |
| H049 | %O <sub>2</sub> Diff Alarm HI_HI                            | FAIL         |
| H090 | Vol%-Diff range (measurement in gases)                      | WARN         |
| H091 | Vol%-Diff Alarm LO_LO (measurement in gases)                | FAIL         |
| H092 | Vol%-Diff Alarm LO (measurement in gases)                   | WARN         |
| H093 | Vol%-Diff Alarm HI (measurement in gases)                   | WARN         |
| H094 | Vol%-Diff Alarm HI_HI (measurement in gases)                | FAIL         |
| H095 | ppm-Diff range (measurement in gases)                       | FAIL         |
| H096 | ppm-Diff Alarm LO_LO (measurement in gases)                 | FAIL         |
| H097 | ppm-Diff Alarm LO (measurement in gases)                    | WARN         |
| H098 | ppm-Diff Alarm HI (measurement in gases)                    | WARN         |
| H099 | ppm-Diff Alarm HI_HI (measurement in gases)                 | FAIL         |



# Specifications

---

## Specifications M 700 O<sub>2</sub> 4700(X) ppb

---

### Oxy input

(EEx ia IIC)

Standard applications with the Mettler-Toledo InPro 6900 Series sensors

Measuring current

0 ... 600 nA, resolution 10 pA

Saturation (-10 ... 80 °C)

0.0 ... 199.9 / 200 ... 600 % Air

0.0 ... 29.9 / 30 ... 120 % O<sub>2</sub>

Measurement error\*\*

< 0.5 % meas.val. + 0.005 mg/l or 0.005 ppm

Concentration (-10 ... 80 °C)

0000 ... 9999 µg/l

(overrange during calibration up to 19.99 mg/l)

0000 ... 9999 ppb

(overrange during calibration up to 19.99 ppm)

0.00 ... 200.00 mg/l

0.00 ... 200.00 ppm

Measurement error\*\*

< 0.5 % meas.val. +0.05 mg/l or 0.05 ppm

Polarization voltage

0 ... -1000 mV, default -675 mV, Ri approx. 10 kohms

Partial pressure

0 ... 2000 mbars

Air pressure

700 ... 1100 mbars

Manual

0 ... 9999 mbars

Salinity correction

0.0 ... 45.0 g/kg

Adm. guard current

≤ 20 µA

Ref voltage

± 500 mV (voltage across ref connection and anode)

---

### Measurement in gases

0 ... 2000 mbars

0 ... 9999 ppm

0.00 ... 29.9 / 30.0 .... 120.0 %vol (display only)

0.00 ... 120.0 %vol (current, limit values)

( 1%vol = 10,000 ppm)

Current start / end

As desired within range

Calibration methods

Automatic - Air

- with the following default settings:

rH = 50 %, p 0 measured barometric pressure,

calibration medium air (dry air = 20.95 %vol)

# Specifications

---

(Calibration methods)

Product calibration  
(select ppm or Vol%)  
Data entry  
Zero correction

---

## Sensor monitoring \*

---

Sensocheck  
Monitoring of membrane and electrolyte

---

## Sensoface

### Sensor network diagram

---

Provides information on the sensor condition  
Zero, slope, response time, calibration interval,  
Sensocheck

---

## Sensor monitor

---

Direct display of measured values from sensor for validation  
of sensor current / barometric pressure / temperature / I input

---

## Sensor standardization \*

---

Operating modes  
- Automatic calibration in air-saturated water  
- Automatic calibration in air  
- Product calibration: Saturation  
- Product calibration: Concentration  
- Data entry zero/slope  
- Zero correction

---

Calibration record/statistics

---

Recording of:  
Zero, slope, response time, calibration method,  
with date and time of the last three calibrations  
and the First Calibration

---

## Temperature input

(EEx ia IIC)

Temperature probe \*

Measurement range (MR)

Resolution

Measurement error \*\*

---

NTC 22 k $\Omega$  / NTC 30 k $\Omega$ , 2-wire connection, adjustable

-20 ... +150 °C (-4 ... 302 °F)

0.1 °C

0.2 % meas.val. + 0.5 K

\* User-defined

\*\* To IEC 746 Part 1, at nominal operating conditions,  $\pm 1$  count, plus sensor error

---

# Specifications

---

## General Data

---

### Explosion protection

(IS module only)

---

ATEX: See rating plate: KEMA 03 ATEX 2056  
II 2 (1) GD EEx ib [ia] IIC T4 T 70 °C

FM: NI, Class I, Div 2, GP A, B, C, D T4  
with IS circuits extending into Division 1  
Class I, Zone 2, AEx nA, Group IIC, T4  
Class I, Zone 1, AEx me ib [ia] IIC, T4

CSA: NI, Class I, Div 2, Group A, B, C, D  
with IS circuits extending into Division 1  
AIS, Class I, Zone 1, Ex ib [ia] IIC, T4  
NI, Class I, Zone 2, Ex nA [ia] IIC

---

### EMC

Emitted interference  
Immunity to interference

---

NAMUR NE 21 and  
EN 61326 VDE 0843 Part 20 /01.98  
EN 61326/A1 VDE 0843 Part 20/A1 /05.99  
Class B  
Industry

---

### Lightning protection

---

EN 61000-4-5, Installation Class 2

---

### Nominal operating conditions

---

Ambient temperature:  
-20 ... +55 °C (Ex: max. +50 °C)  
Rel. humidity: 10 ... 95 % not condensing

---

### Transport/Storage temperature

---

-20 ... +70 °C

---

### Screw clamp connector

---

Single wires and flexible leads up to 2.5 mm<sup>2</sup>

# Appendix:

---

## Minimum Spans for Current Outputs

The O<sub>2</sub> 4700(X) ppb module is a measuring module. It does not provide current outputs. Current outputs are provided by the BASE module (basic device) or by communication modules (e.g. Out, PID). The corresponding parameters must be set there.

The minimum current span shall prevent that the resolution limit of the measurement technology ( $\pm 1$  count) is seen in the current.

### O<sub>2</sub> 4700(X) ppb Module

|                 |                            |
|-----------------|----------------------------|
| %Air            | 10.0                       |
| %O <sub>2</sub> | 2.0                        |
| °C              | 10.0                       |
| mbar            | 20.0 (barometric pressure) |
| nA              | 10 % min. 1.00 nA          |
| mg/l            | 10 % min. 20.0 µg/l        |
| ppm             | 10 % min. 20.0 ppb         |
| mbar            | 20.0 (partial pressure)    |
| Vol%            | 2.0                        |
| ppm             | 1000                       |
| °F              | 10.0                       |

### Calculation Block OXY/OXY

|                      |                    |
|----------------------|--------------------|
| Diff %Air            | 10.0               |
| Diff-%O <sub>2</sub> | 2.0                |
| Diff mg/l            | 10 % min. 2.0 µg/l |
| Diff ppm             | 10 % min. 2.0 ppb  |
| Diff °C              | 10.0               |
| Diff Vol%            | 2.0                |
| Diff ppm             | 1000               |

# **Dissolved Oxygen Measurement in Carbonated Beverages (SW 700-011)**

---

Application-specific additional function for breweries

## **Recommended only for InPro 6900 series sensors!**

This additional function simplifies parameter setting since all steps not required for dissolved oxygen measurement in carbonated beverages are omitted. It simultaneously acts on all installed O<sub>2</sub> modules (module software version 2.2 and higher).

Function principle:

The following processes are automated by the additional function, i.e. all parameters required for the respective program step are set automatically.

During the filling process, for example, it must be ensured that as little oxygen as possible is dissolved in the beer to extent its shelf life.

During oxygen trace measurement the sensor is operated with a very low polarization voltage (-500 mV). This results in low cross-sensitivity to CO<sub>2</sub>.


For a calibration in air, this polarization voltage is too low.

It must be set to -675 mV and afterwards be reduced again to -500 mV for measuring in the trace range.

Be sure to wait long enough for the sensor to stabilize.

Opening and closing of valves causes pressure variations in the beer pipes which momentarily falsify the O<sub>2</sub> signal. Therefore the input signal must be attenuated correspondingly to suppress transient interferences.

# Overview of Parameter Setting

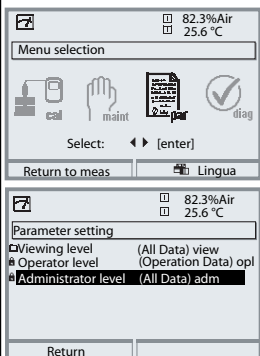

## Parameter setting

Activated from measuring mode: Press **menu** key to select menu.

Select parameter setting using arrow keys, confirm with **enter**.

### Administrator level

Access to all functions, also passcode setting.

Releasing or blocking a function for access from the Operator level.

### Operator level

Access to all functions which have been released at the Administrator level. Blocked functions are displayed in gray and cannot be edited.

### Viewing level

Only display, no editing possible!

## System Control

### Memory card (Option)

- Record logbook
- Register recorder
- Decimal separator
- Card full
- Format

Menu only appears with SmartMedia Card inserted.

Make sure that it is a memory card, not an update card.

Commercially available SmartMedia cards must be formatted before they can be used as memory card.

### Copy configuration

The complete configuration of an analyzer can be written on a SmartMedia card. This allows transferring all device settings to other devices with identical equipment (exception: options and passcodes).

### Parameter sets

- Load
- Save

2 parameter sets (A,B) are available in the analyzer.

The currently active parameter set is read on the display.

Parameter sets contain all settings except:

Sensor type, Options, System control settings

Up to 5 parameter sets (1, 2, 3, 4, 5) are available when a SmartMedia card (Option) is used.

### Function control matrix

- Input OK2
- Left softkey
- Right softkey

Selecting the control element for the following functions:

- Parameter set selection
- KI recorder (Start/Stop)
- Favorites menu (selected diagnostics functions)
- EC 400 (fully automated probe controller)

Time/date

Selecting the display format, entry

Point of meas description

Can be called up in the diagnostics menu.

Release of options

A TAN is required to release an Option.

Software update

Software update from SmartMedia card (update card)

Logbook

Selecting events to be recorded

Buffer table

Entering own buffer set for automatic calibration

Factory setting

Resetting all parameters to factory setting

Passcode entry

Editing the passcodes

# Parameter Setting Menu



## Display Settings: FRONT Module

### Languages

|   |   |
|---|---|
| Measurement display   | Representation of measured values on the display:   |
| <ul style="list-style-type: none"> <li>• Main display</li> <li>• Display format</li> <li>• Viewing angle</li> </ul> | <ul style="list-style-type: none"> <li>- Selecting the number of primary values displayed (one or two)</li> <li>- Decimal places</li> </ul> |
| Measurement recorder  | Option: 2-channel, selection of process variable, start and end   |
| <ul style="list-style-type: none"> <li>• Time base</li> <li>• Zoom function</li> <li>• Min/Max display</li> </ul>   |   |
| KI recorder   | Option: See more detailed "Options" manual  |

## Signal Outputs and Inputs, Contacts: BASE Module

|   |   |
|---|---|
| Output current I1, I2   | 2 current outputs, separately adjustable  |
| <ul style="list-style-type: none"> <li>• Variable</li> <li>• Curve</li> <li>• Output (0/4 - 20 mA)</li> <li>• Output filter</li> <li>• Behavior during messages             <ul style="list-style-type: none"> <li>- HOLD</li> <li>--- Current meas.</li> <li>--- Last meas. value</li> <li>--- Fixed 22 mA</li> <li>- 22 mA message</li> </ul> </li> </ul>   | <p>Behavior during messages</p> <p>Output current [mA]</p>  |
| Contact K4  | NAMUR Failure   |
| <ul style="list-style-type: none"> <li>• Contact type</li> <li>• ON delay</li> <li>• OFF delay</li> </ul>   |   |
| Contacts K3, K2, K1   | Factory setting:  |
| <ul style="list-style-type: none"> <li>• Usage             <ul style="list-style-type: none"> <li>- Maintenance request</li> <li>- HOLD (function check)</li> <li>- Limit value (adjustable)</li> <li>- Rinse contact (adjustable)</li> <li>- Parameter set B active</li> <li>- USP output</li> <li>- KI recorder active</li> <li>- Sensoface</li> </ul> </li> <li>• Conoller alarm (alarm output EC 400)</li> <li>• Contact type / ON/OFF delay</li> </ul> | <ul style="list-style-type: none"> <li>K3: Maintenance request, K2: HOLD, K1: Limit</li> <li>- Variable, limit value, hysteresis, effective direction, ...</li> <li>- Rinsing interval, lead times, rinse duration, logbook entry, ...</li> </ul> |
| Inputs OK1, OK2   | Optocoupler - signal inputs   |
| <ul style="list-style-type: none"> <li>• OK1 usage             <ul style="list-style-type: none"> <li>- Signal level</li> </ul> </li> </ul>   | <ul style="list-style-type: none"> <li>Off, HOLD (function check)</li> <li>active level switchable from 10 to 30 V or &lt; 2 V, resp.</li> <li>For OK2 see System control/Function control matrix</li> </ul>                                      |

# Parameter Setting Menu



## O<sub>2</sub> 4700(X) ppb Module

### Input filter

#### Sensor data

- Sensor type
- Temperature probe
- Sensor
- Reference electrode
- Sensor polarization
- Polarization voltage
- Sensoface
- Details
  - Slope
  - Zero point
  - Sensocheck
  - Response time

Representation of measured values on the display:

- Select
- Selection for Measurement / Calibration

#### Cal preset values

- Cal saturation
- Cal concentration
  - mg/l
  - µg/l
  - ppm
  - ppb
- Calibration timer

#### Pressure correction

- Pressure during meas
- Pressure during cal

#### Salinity correction

- Entry
  - Salinity
  - Chlorinity
  - Conductivity
- Salinity

#### Messages

- Saturation %Air
- Saturation %O<sub>2</sub>
- Concentration
- Partial pressure
- Temperature
- Air pressure



# Calibration Menu



## O<sub>2</sub> 4700(X) ppb Module

Automatic - Water  
 Automatic - Air  
 Product calibration Sat  
 Product calibration Conc  
 Data entry  
 Zero correction

# Maintenance Menu



## BASE Module

Current source                      Output current definable 0 ... 22 mA

## O<sub>2</sub> 4700(X) ppb Module

Sensor monitor                      Sensor current, air pressure, RTD, temperature, impedance  
 Temp probe adjustment              Compensating for lead length

# Diagnostics Menu



Message list                      List of all warning and failure messages  
 Point of meas description  
 Logbook  
 Device description                      Hardware version, Serial no., (Module) Firmware, Options

## FRONT Module

Module diagnostics  
 Display test  
 Keypad test

## BASE Module

Module diagnostics  
 Input/output status

## O<sub>2</sub> 4700(X) ppb Module

Module diagnostics                      Internal function test  
 Sensor monitor                      Shows the values currently measured by the sensor  
 Cal record                      Data of last adjustment / calibration  
 Sensor network diagram Oxy              Graphical representation of the sensor parameters  
 Statistics                      Displays first calibration and deviations of last 3 calibrations

# Index

---

## A

- Adjustment 29
- Administrator level 43
- Application in hazardous locations 12
- Attaching the terminal plates 20
- Automatic calibration in air 35
- Automatic calibration in water 33

## B

- BASE module 19
- Behavior during messages 61

## C

- Cable glands 16
- Calculation Blocks 52
- Calibration 28
- Calibration method 31
- Calibration with sampling 37, 39
- Call up parameter setting 45
- Cal record 73
- Change passcode 25
- Configure measurement display 26
- Configuring the module 48
- Contacts 57
- Contact type 66
- Current output curves 58
- Current outputs 57, 61
- Current outputs, minimum spans 84

## D

- Data entry of premeasured sensors 41
- Device limits max. 56
- Diagnostics 70
- Diagnostics functions 70

# Index

---

Diagnostics messages as favorite 74  
Disposal 2  
Dissolved oxygen measurement in carbonated beverages (SW 700-011) 85  
Documenting the settings 46

## **E**

EC Declaration of Conformity 3  
EMC 83

## **F**

Factory setting 54  
Failure 62  
Favorites 74  
FDA 21 CFR Part 11 11  
FRONT module 18  
Function check 62

## **G**

Graphic display 16

## **H**

Hardware and software version 13  
HOLD 62  
Hysteresis 66

## **I**

Inserting the module 21  
Intended use 11

## **L**

LED 16  
Limit value 66  
Limit value, icons in the measurement display 66  
Linear characteristic 58  
Lock functions 44  
Lock icon 44

# Index

---

Logarithmic output curve 59

Logbook 54, 70

## M

Maintenance 69

Menu selection 24

Menu structure 17, 24

Message icons 56

Message list 76

Messages 56

Messages, behavior of current outputs 61

Messages Calculation Blocks O2 / O2 79

Messages O2 77

Message when the current range is exceeded 61

Modular concept 15

Module diagnostics 72

Module equipment 19

Modules 18

## O

OK1,OK2 inputs 67

OK1/OK2 switching level 67

OK1 usage 67

OK2, selecting parameter set (A, B) 68

OK inputs 57

Operating levels 43

Operator level 43

Output filter 60

Overview of parameter setting 86

## P

Parameter set selection 68

Parameter setting 46

Parameter setting, overview 86

Parameter setting documentation 46

# Index

---

Passcode entry 25  
Passcode lost 25  
Product calibration: Concentration 39  
Product calibration: Saturation 37  
Protective wiring 63

## Q

Query actual device/module software 13

## R

Relay contacts 62  
Relay contacts, usage 64, 65  
Release (softkey function) 44  
Replacing the front module 18  
Return of products 2  
Rinse contact 65

## S

Safety information 12  
Screw clamp connector 83  
Sealing 18  
Secondary displays 16, 26  
Select a calibration method 31  
Sensocheck 51  
Sensoface 49  
Sensoface criteria 51  
Sensor data 49  
Sensor data parameters 49  
Sensor monitor 72  
Sensor monitoring details 49  
Sensor network diagram 73  
Serial number 13  
Shield 21  
Short description 16  
Signaling active parameter set via relay contact 68

# Index

---

Slope 51  
Slot for SmartMedia card 18  
SmartMedia card 18  
Softkeys 16, 26  
Software version 13  
Specifications 81  
Start (4 mA) and end (20 mA) 57  
Statistics 73  
Switching parameter sets via OK2 68

## T

Table of contents 7  
Terminal compartment 19  
Terminal plate 18  
Terminal plates 20  
Trademarks 2

## V




















Variable limits 56  
Viewing level 43

## W

Warranty 2  
Wiring examples 22

## Z

Zero correction 42

| Icon  | Explanation of Icons Important for this Module   |
|---|--|
|    | The device is in measuring mode.   |
|    | The device is in calibration mode. HOLD mode active for currently calibrated module.   |
|    | The device is in maintenance mode. HOLD mode active.   |
|    | The device is in parameter setting mode. HOLD mode active.   |
|    | The device is in diagnostics mode.   |
| <b>NAMUR signals</b><br><br><br> | <p>HOLD. The NAMUR “function check” contact is active (factory setting: Module BASE, Contact K2, N/O contact). Current outputs as configured:</p> <ul style="list-style-type: none"> <li>• Current meas.: The currently measured value appears at the current output</li> <li>• Last usable value: The last measured value is held at the current output</li> <li>• Fixed 22 mA: The output current is at 22 mA</li> </ul> <p>Failure. The NAMUR “failure” contact is active (factory setting: Module BASE, Contact K4, N/C contact). To view error message, call up: Diagnostics menu/Message list</p> <p>Maintenance request. The NAMUR contact is active (factory setting: Module BASE, Contact K2, N/O contact). To view error message, call up: Diagnostics menu/Message list</p> |
|   | Limit indication: Lower / upper range limit exceeded   |
|  man   | Temperature detection by manual input  |
|    | Calibration is performed   |
|    | Calibration - Step 1 of product calibration has been executed. The analyzer is waiting for the sample values.  |
|    | In the plaintext display in front of a menu line:<br>Access to next menu level with enter  |
|    | In the plaintext display in front of a menu line when it has been blocked by the Administrator against access from the Operator level.   |
|    | Designates the module slot (1, 2 or 3), allowing the clear assignment of measured-value/parameter displays in the case of identical module types.  |
|  B   | Indicates the active parameter set. (The analyzer provides two parameter sets A and B. Up to 5 sets can be added using additional functions and SmartMedia card.)  |

# Menu Selection O<sub>2</sub> 4700(X) ppb Module

---



|   |           |
|---|-----------|
| <b>Calibration and adjustment.....</b>  | <b>28</b> |
| Automatic calibration in water.....     | 33        |
| Automatic calibration in air.....       | 35        |
| Product calibration: Saturation.....    | 37        |
| Product calibration: Concentration..... | 39        |
| Data entry of premeasured sensors.....  | 41        |
| Zero correction .....                   | 42        |

---



|  |           |
|--|-----------|
| <b>Parameter setting.....</b>                  | <b>43</b> |
| Documenting.....                               | 46        |
| Sensor data .....                              | 49        |
| Sensoface .....                                | 51        |
| Calculation Blocks.....                        | 52        |
| Logbook .....                                  | 54        |
| Factory setting .....                          | 54        |
| Messages.....                                  | 55        |
| BASE module.....                               | 57        |
| Current outputs.....                           | 57        |
| Current outputs: Behavior during messages..... | 61        |
| HOLD.....                                      | 62        |
| Relay contacts.....                            | 64        |
| Rinse contact .....                            | 65        |
| Limit .....                                    | 66        |

---



|                         |           |
|-------------------------|-----------|
| <b>Maintenance.....</b> | <b>69</b> |
|-------------------------|-----------|

---



|   |           |
|---|-----------|
| <b>Diagnostics.....</b>                             | <b>70</b> |
| Logbook .....                                       | 70        |
| Module diagnostics, Sensor monitor, Cal record..... | 73        |
| Sensor network diagram, Statistics .....            | 73        |
| Setting diagnostics messages as favorite .....      | 74        |
| Message list.....                                   | 76        |
| Logbook .....                                       | 76        |