

# M 700®(X)

Instruction Manual



52121216

METTLER TOLEDO



76457

## **Warranty**

Defects occurring within 1 year from delivery date shall be remedied free of charge at our plant (carriage and insurance paid by sender). Sensors, fittings, and accessories: 1 year.

©2008 Subject to change without notice

## **Return of products under warranty**

Please contact our Service Team before returning a defective device. Ship the cleaned device to the address you have been given. If the device has been in contact with process fluids, it must be decontaminated/disinfected before shipment. In that case, please attach a corresponding certificate, for the health and safety of our service personnel.

## **Disposal**

Please observe the applicable local or national regulations concerning the disposal of "waste electrical and electronic equipment".

---

## **Trademarks**

The following registered trademarks are used in this instruction manual without further marking

SMARTMEDIA®

is a registered trademark of Toshiba Corp., Japan

FOUNDATION FIELDBUS™

is a trademark of Fieldbus Foundation, Austin, USA

---

Mettler-Toledo AG,  
Process Analytics, Industrie Nord, CH-8902 Urdorf,  
Tel. +41 (44) 729 62 11 Fax +41 (44) 729 26 36  
Subject to technical changes.



# EC Declaration of Conformity

M 700(X) Modular Process Analysis System

## Mettler-Toledo GmbH

### Process Analytics

Adresse: Im Hackacker 15 (Industrie Nord), CH-8902 Urdorf, Schweiz  
Branche: Produktion  
Telefon: 01-736 22 11  
Telefax: 01-736 28 96  
Internet: [www.mt.com](http://www.mt.com)  
Bank: Credit Suisse First Boston, Zürich (Acc. 0836-370501-21-90)

## Declaration of conformity Konformitätserklärung Déclaration de conformité



### We/Wir/Nous

Mettler-Toledo GmbH, Process Analytics  
Im Hackacker 15  
8902 Urdorf  
Switzerland

declare under our sole responsibility that the product,  
erklären in alleiniger Verantwortung, dass dieses Produkt,  
déclarons sous notre seule responsabilité que le produit,

### Description Beschreibung/Description

M 700 C / M 700 S  
to which this declaration relates is in conformity with the following standard(s) or other  
normative document(s),  
auf welches sich diese Erklärung bezieht, mit der/den folgenden Norm(en) oder  
Richtlinie(n), bereinstimmt,  
auquel se réfère cette déclaration est conforme à la (aux) norme(s) ou au(x)  
document(s) normatif(s).

### Low-voltage directive/Nieder- spannungs-Richtlinie/ Directive basse tension

73/23/EWG

### Norm/Standard/Standard

EN 60529 / 10.91	/ VDE 0470 Teil 1:	1992-11
EN 61010 Teil 1 / 03.93	/ VDE 0411 Teil 1:	1994-03
EN 61010-1 / A2 / 07.95	/ VDE 0411 Teil 1 / A1:	1996-05

### EMC Directive/EMV- Richtlinie/ Directive concernant la CEM

89/336/EWG

### Norm/Standard/Standard

EN 61326	/ VDE 0843 Teil 20:	1998-01
EN 61326 / A1	/ VDE 0843 Teil 20 / A1:	1999-05

### Place and Date of issue Ausstellungsort/- Datum Lieu et date d'émission

Urdorf, August 28, 2003

Mettler-Toledo GmbH, Process Analytics

Waldemar Rauch  
General Manager PO Urdorf

ArtikelNr.: 52960320KE-M700-internet.doc

Christian Zwicky  
Head of Marketing

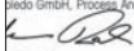
52960320KE-M700-internet.doc

Sitz der Gesellschaft: Mettler-Toledo GmbH, Im Langacher, CH-8606 Greifensee

**METTLER TOLEDO**

# EC Declaration of Conformity

M 700(X) Modular Process Analysis System

Konformitätserklärung Déclaration de conformité		CE 0344
ous	Mettler-Toledo GmbH, Process Analytics Im Hackacker 15 8902 Urdorf Switzerland	
	declare under our sole responsibility that the product, erklären in alleiniger Verantwortung, dass dieses Produkt, déclarons sous notre seule responsabilité que le produit,	
nung/Description	M 700XC / M 700XS	
	to which this declaration relates is in conformity with the following standard(s) or other normative document(s). auf welches sich diese Erklärung bezieht, mit den/den folgenden Norm(en) oder Richtlinie(n) übereinstimmt. auquel se réfère cette déclaration est conforme à la (aux) norme(s) ou au(x) document(s) normatif(s).	
n protection nschutzrichtlinie tre les explosions	94/9/EÜ KEMA 04 ATEX 2056 NL-6812 AR Arnhem, KEMA 0344	
age directive ionnungs-Richtlinie à basse tension	73/23/EWG	
ective Richtlinie concernant la CEM	89/336/EWG	
d Date of Issue ungsort / - Datum site d'émission	Urdorf, July 16, 2004	
Mettler-Toledo GmbH, Process Analytics  Michael Rauch Manager Ingold		
 Christopher Zeilick Head of Marketing		
KE M 700XC M 700XS-b.doc Mettler-Toledo GmbH, Im Langacher, CH-8606 Greifensee		
1/2		

# Contents

---

Warranty .....	2
Return of products under warranty.....	2
Disposal.....	2
Trademarks .....	2
EC Declaration of Conformity .....	3
Intended use.....	9
Package contents.....	10
Safety information .....	11
Information on commissioning/start-up.....	12
Conformity with FDA 21 CFR Part 11 .....	13
Product line .....	14
Device software M 700(X): Version 8.x.....	17
System overview .....	19
Modular concept .....	21
<b>Short description .....</b>	<b>22</b>
Short description: FRONT module .....	22
Short description: Menu structure.....	23
Short description: BASE module.....	25
<b>Connection of power supply .....</b>	<b>26</b>
1. BASE 700-021 module (non-IS).....	27
2. BASE 700X-025/VPW module (IS)	28
3. BASE 700X-026/24V module (IS) .....	29
<b>IS connection of M 700 X .....</b>	<b>30</b>
Hazardous-area components (example).....	31
<b>Panel mounting .....</b>	<b>32</b>
<b>Wall mounting, post mounting .....</b>	<b>33</b>
<b>Operation (FRONT module) .....</b>	<b>34</b>
Menu structure .....	34
Menu selection .....	35
Mode indicators in the display .....	36
Entry of numbers and text .....	38
Configuring the measurement display.....	39
Softkey function (function control).....	41
<b>Parameter setting .....</b>	<b>43</b>
Documenting parameter setting .....	43
Parameter setting: Operating levels.....	45

# Contents

---

Parameter setting: Lock functions .....	46
Function control matrix, time/date .....	47
Point of measurement, passcodes, release of options.....	48
Factory setting, logbook .....	49
Language, measurement display, viewing angle .....	50
Calculation Blocks (system control) .....	51
Calculation of new variables from measured variables .....	51
Activating Calculation Blocks .....	52
Overview of Calculation Blocks.....	53
Calculation formulas.....	54
Configuring a Calculation Block.....	55
Logbook .....	56
Factory setting .....	56
Switching between parameter sets A, B.....	57
Configuring the current output.....	58
Current outputs: Characteristics.....	59
Output filter .....	61
NAMUR signals: Current outputs .....	62
NAMUR signals: Relay contacts .....	63
Relay contacts: Protective wiring .....	64
Relay contacts, usage.....	65
Relay contacts: Sensoface messages .....	66
Set contact parameters .....	66
Set rinse contact parameters.....	67
Icons in the measurement display .....	68
Limit value, hysteresis, contact type .....	68
OK1, OK2 inputs: Specify level.....	69
Switching parameter sets via OK2.....	70
Signaling active parameter set via relay contact .....	70
<b>Inserting the SmartMedia card .....</b>	<b>71</b>
SmartMedia card: Types .....	72
SmartMedia card: Display icons.....	72
Memory card (SW 700-102 ... 1xx) .....	72
Software Update Card (additional function SW 700-106) .....	72
SmartMedia card: Memory cards .....	73
File structure of a memory card .....	73
Save / load device configuration .....	74
Transferring the complete device configuration from one device to further devices	74

# Contents

---

Using the memory card.....	75
Formatting the update card .....	76
Remove memory card .....	77
<b>SW 700-102: Loadable parameter sets.....</b>	<b>78</b>
Parameter set as file on a memory card .....	78
Saving a parameter set on SmartMedia card.....	78
<b>SW 700-106: Software update .....</b>	<b>80</b>
<b>Maintenance.....</b>	<b>83</b>
<b>Diagnostics functions.....</b>	<b>84</b>
Overview .....	84
Sensoface .....	85
Access diagnostics .....	86
Point of meas description .....	86
Logbook .....	86
<b>SW 700-104: Extended logbook.....</b>	<b>87</b>
Device description.....	88
FRONT module .....	88
BASE module .....	88
Access diagnostics .....	91
Message list .....	91
<b>Messages .....</b>	<b>92</b>
<b>Specifications .....</b>	<b>114</b>
<b>Glossary .....</b>	<b>121</b>
<b>Index .....</b>	<b>126</b>
<b>Menu structure of basic unit .....</b>	<b>131</b>
<b>Configuring the system control .....</b>	<b>132</b>
<b>SmartMedia card features .....</b>	<b>132</b>

# **Contents**

---

## **Intended Use**

---

The M 700(X) modular process analysis system is preferably used to measure and process electrochemical quantities in liquids. It has a modular design and consists of the BASE power supply unit, the FRONT door and different measuring and communication modules.

M 700 X is intended for operation in locations subject to explosion hazards which require equipment of Group II, device category 2(1), gas/dust.

M 700(X) is a flexible measuring system for continuous measurements in the field of liquid analysis. Thanks to its modular design, it can be easily adapted to your measuring task. Flexible use of plug-in modules allows combined measurements as well as later expansions or modifications. The measured variables depend on the measuring modules installed. Communication modules are available for further processing of the output signals. The sturdy enclosure (IP 65) can be wall or pipe mounted or fixed into a control panel. The version with hygienic, polished stainless steel enclosure allows application in the field of biotechnology, food processing, and in the pharmaceutical industry. The Protos version with coated steel enclosure – extremely corrosion resistant – has been developed for application in the chemical industry, environmental engineering, water and waste-water treatment, and for application in power plants.

### **Caution!**

Never expose the display to direct sunlight!

At ambient temperatures below 0°C, the legibility of the LC display may be reduced. This does not impair the device functions.

## **Package Contents**

---

- M 700(X) basic unit (FRONT and BASE modules)
- Wall-mount kit
- Test Certificate
- This instruction manual
- CD-ROM with complete documentation (German, English, French)
  - Instruction manuals for all available modules  
incl. EC Declarations of Conformity
  - Excel files for documenting your individual parameter settings
  - Driver files (bus connection)
- For IS devices (M 700 X):  
EC-Type-Examination Certificate (ATEX),  
FM and CSA incl. Control Drawings

Modules as ordered (each in a separate package with Installation Instructions, Test Certificate, EC Declaration of Conformity)

# **Safety Information**

---

## Application in Hazardous Locations

### **M 700 X Modular Process Analysis System**

The M 700 X modular process analysis system is intended for operation in specific environments and specific fields of application. These are listed in the instruction manual as specifications for environment, installation and commissioning, intended use (= application), assembly and dismantling, and maintenance.

Observe the influences of humidity, ambient temperature, chemicals, and corrosion. If the specifications in the instruction manual are not sufficient for assessing the safety of operation, e.g. because your specific applications are not described, please contact the manufacturer to make sure that the application is possible and safe.

Prerequisite to safe use of the equipment is the observance of the specified ambient conditions and temperature ranges.

When using the M 700 X modular process analysis system, the stipulations for electrical installations in hazardous areas (EN 60079-14) must be observed.

When installing the device outside the range of applicability of the 94/9/EC directive, the appropriate standards and regulations in the country of use must be observed.

The M 700 X modular process analysis system has been developed and manufactured in compliance with the applicable European guidelines and standards. Compliance with the European Harmonized Standards for use in hazardous locations is confirmed by the EC-Type-Examination Certificate. Compliance with the European guidelines and standards is confirmed by the EC Declaration of Conformity.

The EC Declaration of Conformity and the EC-Type-Examination Certificate are included in the instruction manual.

There is no particular direct hazard caused by the operation of the device in the specified environment.

During operation, the M 700 X modular process analysis system may

# Safety Information

---

be opened briefly to replace the SmartMedia card. The mains terminal cover must be opened only when the unit is de-energized.

## Installation:

The power supply must be disconnectable near the device by a two-poled switch incorporated in the building installation. This switch must meet the requirements of EN 60947-1 and EN 60947-3, be marked as disconnect device for M 700(X), and be easily accessible by the user.



## Information on Commissioning/Start-up

---

### Caution!

- Before commissioning it must be proved that the device may be connected with other equipment.
- Commissioning must only be performed by trained personnel authorized by the operating company!
- The combination of hazardous-area and safe-area modules (mixed configuration) is not permitted.

Whenever it is likely that protection has been impaired, the device shall be made inoperative and secured against unintended operation. The protection is likely to be impaired if, for example:

- the device shows visible damage
- the device fails to perform the intended measurements
- after prolonged storage at temperatures above 70 °C
- after severe transport stresses

Before recommissioning the device, a professional routine test in accordance with EN 61010-1 must be performed. This test should be carried out at the manufacturer's factory.

# **Conformity with FDA 21 CFR Part 11**

---

In their directive "Title 21 Code of Federal Regulations, 21 CFR Part 11, Electronic Records; Electronic Signatures" the US American health agency FDA (Food and Drug Administration) regulates the production and processing of electronic documents for pharmaceutical development and production. This results in requirements for measuring devices used for corresponding applications. The following features ensure that the M 700(X) modular process analysis system meets the demands of FDA 21 CFR Part 11:

## **Electronic Signature**

Access to the device functions is regulated and limited by individually adjustable codes – "Passcodes". This prevents unauthorized modification of device settings or manipulation of the measurement results. Appropriate use of these passcodes makes them suitable as electronic signature.

## **Audit Trail Log**

Every change of device settings can be automatically recorded and documented in the Audit Trail Log on the SmartMedia card. The recording can be encrypted.

# Product Line

---

## Standard Version

Device (Standard Version)		Order No.
M 700 S	Basic unit, stainless steel enclosure	52121174
M 700 C	Basic unit, coated steel enclosure	52121171
pH 2700	Module: pH	52121182
pH 2700i	Module: pH (ISM sensors)	52121161
Cond 7700	Module: Conductivity	52121184
Cond Ind 7700	Module: Electrodeless cond.	52121185
O <sub>2</sub> 4700	Module: Oxygen (standard)	52121188
O <sub>2</sub> 4700ppb	Module: Oxygen (traces)	52121190
O <sub>2</sub> 4700i	Module: Oxygen (ISM, standard)	52121163
O <sub>2</sub> 4700i ppb	Module: Oxygen (ISM, traces)	52121165
O <sub>2</sub> 4700i traces	Module: Oxygen (ISM, traces)	52121294
Out 700	Module: Output expansion	52121177
PA 700	Module: Profibus PA	52121210
FF 700	Module: Foundation Fieldbus	52121280
EC 700	Module: EC 400 control module	52121259
PID 700	Module: PID controller	52121179
CO <sub>2</sub> 5700i	Module: CO <sub>2</sub>	52121267
i700	Module: (radio, InduCon, EC 400)	52121296

# Product Line

---

## Hazardous-Area Version

Device (Hazardous-Area Version)		Order No.
M 700X S/VPW	Basic unit, stainless steel enclosure with VariPower power supply unit	52121175
M 700X S/24V	Basic unit, stainless steel enclosure with 24 V power supply unit	52121176
M 700X C/VPW	Basic unit, coated stainless steel, with VariPower power supply unit, AC	52121172
M 700X C/24V	Basic unit, standard enclosure with 24 V power supply unit, AC/DC	52121173
pH 2700X	Module: pH	52121183
pH 2700iX	Module: pH (ISM sensors)	52121162
Cond 7700	Module: Conductivity	52121185
Cond Ind 7700	Module: Electrodeless cond.	52121187
O <sub>2</sub> 4700X	Module: Oxygen (standard)	52121189
O <sub>2</sub> 4700X ppb	Module: Oxygen (traces)	52121191
O <sub>2</sub> 4700iX	Module: Oxygen (ISM, standard)	52121164
O <sub>2</sub> 4700iX ppb	Module: Oxygen (ISM, traces)	52121166
O <sub>2</sub> 4700iX traces	Module: Oxygen (ISM, traces)	52121295
Out 700X	Module: Output expansion	52121178
PA 700X	Module: Profibus PA	52121181
FF 700X	Module: Foundation Fieldbus	52121281
EC 700X	Module: EC 400 control module	52121260
PID 700	Module: PID controller	52121180
CO <sub>2</sub> 5700iX	Module: CO <sub>2</sub>	52121268
i700X	Module: (radio, InduCon, EC 400)	52121297

# Product Line

## Additional Functions and Accessories

<b>Additional Functions</b>		<b>Order No.</b>
KI recorder	TAN SW700-001	52121198
Buffer sets to be entered (pH)	TAN SW700-002	52121199
ServiceScope (pH)	TAN SW700-004	52121201
Tolerance band recorder (pH)	TAN SW700-005	52121202
Current characteristic definable	TAN SW700-006	52121203
TC ultrapure water (Cond)	TAN SW700-008	52121204
Concentration determination (Cond)	TAN SW700-009	52121205
Dissolved oxygen measurement in carbonated beverages	TAN SW700-011	52121250
ISFET for pH 2700i module	TAN SW700-012	52121274
2nd channel for i700	TAN SW700-014	52121325
i700: O <sub>2</sub> standard measurement	TAN SW700-015	52121326
i700: O <sub>2</sub> trace measurement	TAN SW700-016	52121327
5 loadable parameter sets	TAN SW700-102	52121192
Measurement recorder	TAN SW700-103	52121193
Extended logbook	TAN SW700-104	52121194
Software update	TAN SW500-106	52121195
AuditTrail to FDA 21 CFR Part 11	AuditTrail card/TAN SW700-107	52121196
<b>Accessories</b>		<b>Order No.</b>
SmartMedia card	ZU 0543	52121207
Pipe-mount kit	ZU 0544	52121208
Panel mounting kit	ZU 0545	52121209
Wall-mount kit	ZU 0546	
VP input socket for VP extension cable		52201114

# **Device Software M 700(X):**

## **Version 8.x**

### **Modules**

(For modules which are not listed here, refer to corresponding module instruction manual.)

Module	Software version
pH 2700(X)	2.0
pH 2700i	1.1
Cond 7700	2.0
Cond Ind 7700	2.0
O <sub>2</sub> 4700	2.2
O <sub>2</sub> 4700 ppb	2.2
O <sub>2</sub> 4700i	2.1
O <sub>2</sub> 4700i ppb	2.1
O <sub>2</sub> 4700i traces	1.0
Out 700	1.1
PA 700	2.2
FF 700	1.0
EC 700	2.0
PID 700	1.1
CO <sub>2</sub> 5700i	1.1
i700	1.0

### **Query Actual Device/Module Software**

When the analyzer is in measuring mode:

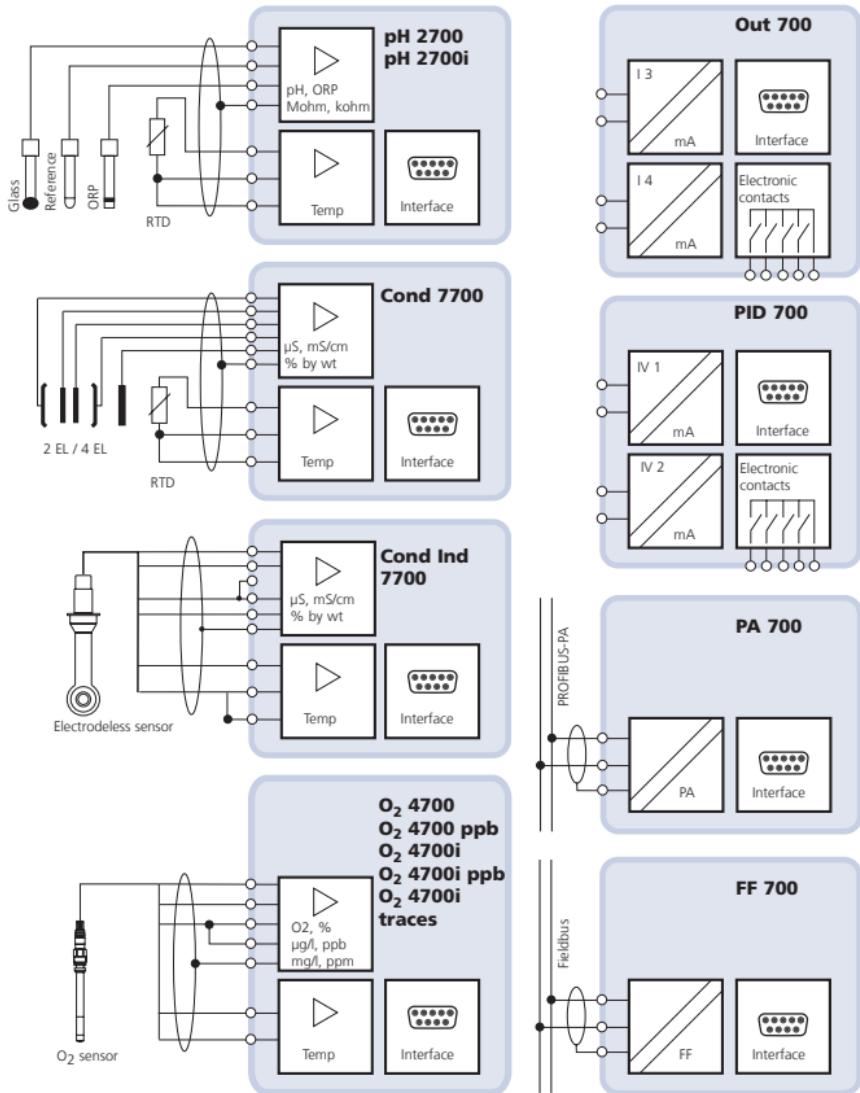
Press **menu** key, open Diagnostics menu.

Menu	Display	Device description
		Provides information about all modules installed: Module type and function, serial number, hardware and software version and device options. Select the different modules (FRONT, BASE, slots 1 - 3) using the arrow keys.






# System Overview

M 700(X) Modular Process Analysis System:  
Measuring Modules and Communication Modules



# System Overview

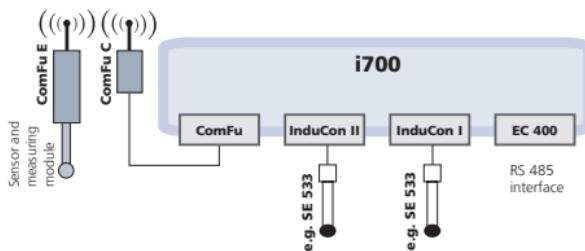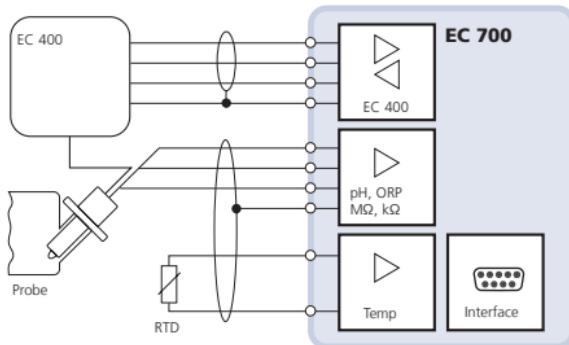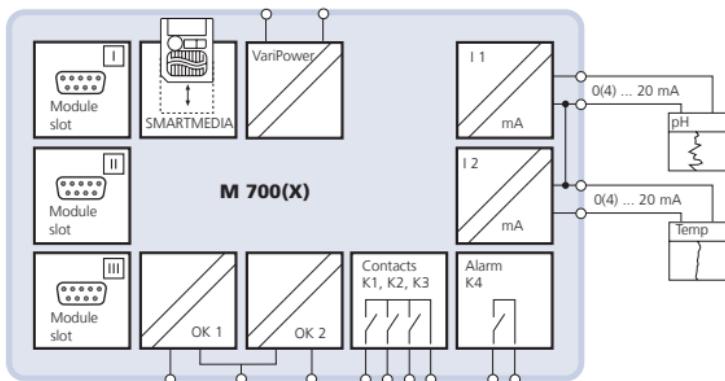M 700(X) Modular Process Analysis System:  
Basic Unit and Controller Module for Retractable Probes




# Modular Concept

Basic Unit, Measuring Module, Additional Functions

The M 700(X) is an expandable modular process analysis system.

The basic unit (FRONT and BASE modules) provides three slots which can be equipped by the user with any combination of measuring or communication modules. The software capabilities can be expanded by additional functions (options). Additional functions must be ordered separately. They are supplied with a device-specific TAN for function release.
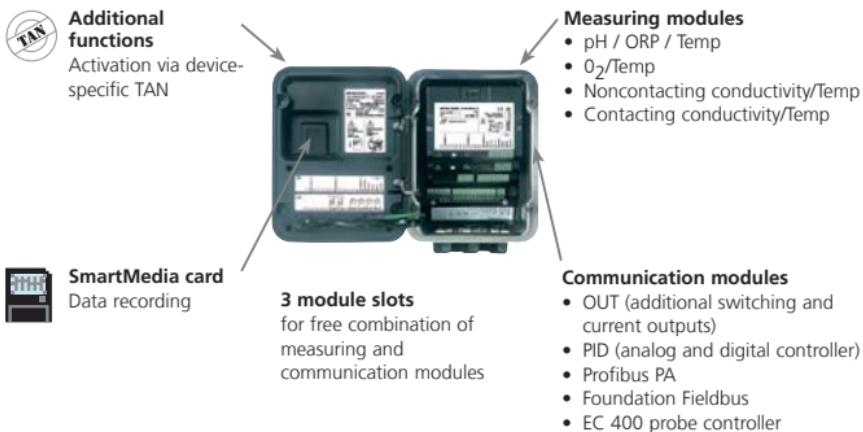
## M 700(X) Modular Process Analysis System



## Documentation

The basic unit is accompanied by a CD-ROM containing the complete documentation.

Latest product information as well as instruction manuals for earlier software releases are available at [www.mtpro.com](http://www.mtpro.com).

# Short Description

Short Description: FRONT Module

## 4 captive screws

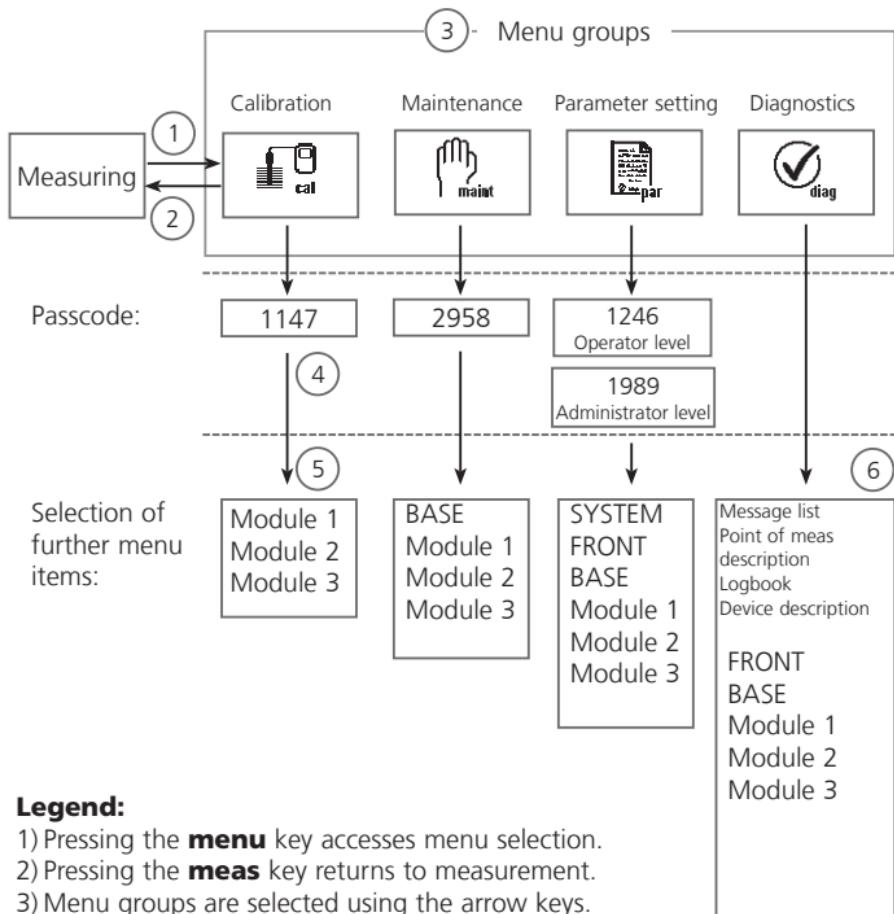
for opening the analyzer

(**Caution!** Make sure that the gasket between FRONT and BASE is properly seated and clean!)



# Short Description: Menu Structure

Basic Functions: Calibration, Maintenance, Parameter Setting, Diagnostics



## Legend:

- 1) Pressing the **menu** key accesses menu selection.
- 2) Pressing the **meas** key returns to measurement.
- 3) Menu groups are selected using the arrow keys.
- 4) Press **enter** to confirm, enter passcode.
- 5) Further menu items are displayed.
- 6) Selected functions of the Diagnostics menu can be recalled via softkey even when in measuring mode.

# Short Description: FRONT Module

View into the open device (FRONT module)

## Slot for SmartMedia card

- Data recording

The SmartMedia card expands the measurement recorder capacity to > 50000 records.

- Exchange of parameter sets

5 parameter sets can be stored on the SmartMedia card. The 2 internal parameter sets can be switched by remote control.

Configurations can be transmitted from one analyzer to the other.

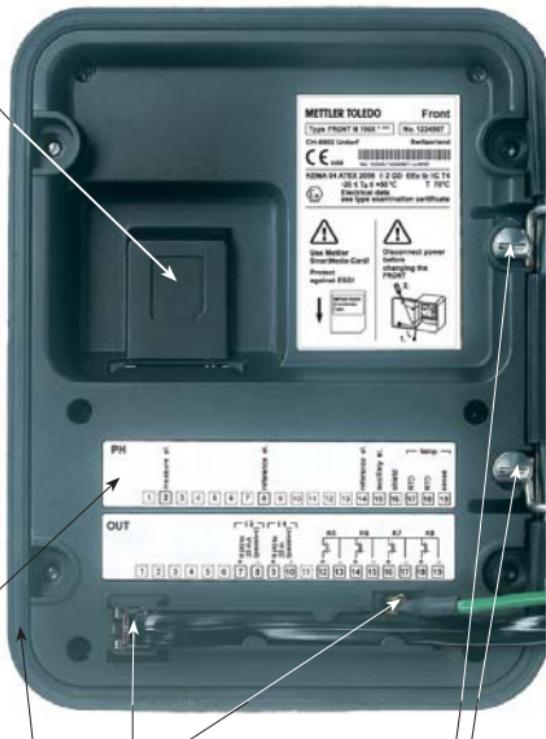
- Function expansions

are possible with additional software modules, which are released using transaction numbers (TAN)

- Software updates

## Terminal plates of "hidden" modules

Each module comes with an adhesive label containing the contact assignments. This label should be stucked to the inner side of the front (as shown). Then, the terminal assignments remain visible even if further modules are inserted.



## Replacing the front module

Pull off power cord and ground wire. To separate the FRONT module from the BASE module, turn the retaining screws of the pivot hinge by 90°.

## The circumferential sealing

guarantees IP 65 protection and allows spray cleaning / disinfection.

**Caution!** Keep clean!

# Short Description: BASE Module

View into the open device (BASE module, 3 function modules installed)



## Module equipment

Module identification: Plug & Play.

Up to 3 modules can be combined as desired. Several input and communication modules are available.



## Notice

Only one module can be connected in addition to a i700 module.

## BASE module

2 current outputs (free assignment of process variable) and 4 relay contacts, 2 digital inputs.

VariPower broad-range power supply, 20 ... 265 V AC/DC, suitable for all public mains supplies in the world.

## Power supply units, IS version:

100 ... 230 V AC or  
24 V AC/DC



**Warning!**  
**Do not touch the terminal compartment, there may be dangerous contact voltages!**

## Important notice concerning SmartMedia card

The SmartMedia card may be inserted or replaced with the power supply switched on. Before a memory card is removed, it must be "closed" in the maintenance menu. When closing the device, make sure that the sealing is properly seated and clean.

# Connection of Power Supply

BASE 700-021 Module (Non-IS)



## Connection of Power Supply (BASE 700-021 Module, non-IS)

The M 700(X) comes in three different versions.

The terminal plates and wirings are shown on the following pages.

### 1. BASE 700-021 module (standard version, non-IS)

VariPower broad-range power supply unit,  
24 (-15 %) ... 230 (+15 %) V AC/DC

### 2. BASE 700X-025/VPW module (IS version)

VariPower broad-range power supply unit

### 3. BASE 700X-026/24V module (IS version)

24 V power supply unit

# 1. BASE 700-021 Module (Non-IS)

Standard Version. Not suitable for hazardous-area applications!

## Installation Instructions



### Caution!

- Installation may only be carried out by trained and qualified personnel in accordance with the instruction manual and as per applicable standards and regulations.
- Be sure to observe the technical specifications and input ratings during installation.
- Be sure not to notch the conductor when stripping the insulation.
- All parameters must be set by a system administrator prior to commissioning.

## Connection of Power Supply

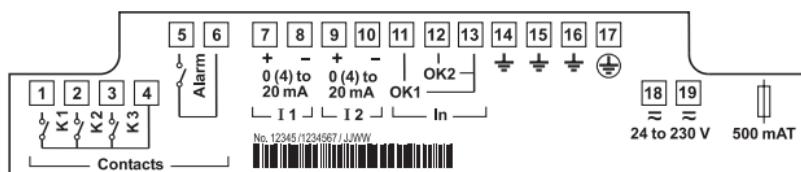
With the VariPower broad-range power supply unit, the analyzer can be operated with a power supply of 24 (-15 %) to 230 (+15 %) V AC/DC making it suitable for all public mains supplies in the world.

The terminals are suitable for single wires and flexible leads up to 2.5 mm<sup>2</sup> (AWG 14).

## Terminal Plate BASE 700-021 Module

Standard version. Not suitable for hazardous-area applications!

Connection of power supply. Contact assignment of inputs/outputs.



## 2. BASE 700X-025/VPW Module (IS)

IS Version with VariPower Power Supply Unit

### Installation instructions

When using the M 700 X modular process analysis system, the stipulations for electrical installations in hazardous areas (EN 60079-14) must be observed. When installing the device outside the range of applicability of the 94/9/EC directive, the appropriate standards and regulations in the country of use must be observed.



#### Caution!

- Installation may only be carried out by trained and qualified personnel in accordance with the instruction manual and as per applicable standards and regulations.
- Be sure to observe the technical specifications and input ratings during installation.
- Be sure not to notch the conductor when stripping the insulation.
- All parameters must be set by a system administrator prior to commissioning.

### Connection of Power Supply

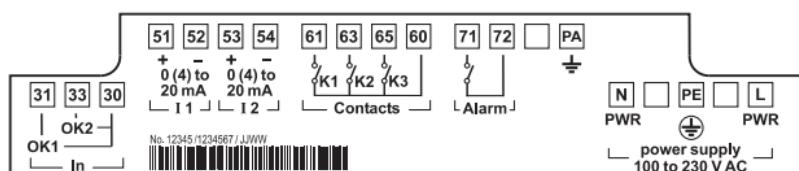
With the VariPower broad-range power supply unit, the analyzer can be operated with a power supply of 100 to 230 V AC (-15 %, +10 %) (Ex em IIC).

The terminals are suitable for single wires and flexible leads up to 2.5 mm<sup>2</sup> (AWG 14).

### Terminal Plate BASE 700X-025/VPW Module

(IS version with VariPower power supply unit)

Connection of power supply. Contact assignment of inputs/outputs.



### 3. BASE 700 X-026/24V Module (IS)

IS Version with 24 V Power Supply Unit

#### Installation instructions

When using the M 700 X modular process analysis system, the stipulations for electrical installations in hazardous areas (EN 60079-14) must be observed. When installing the device outside the range of applicability of the 94/9/EC directive, the appropriate standards and regulations in the country of use must be observed.



#### Caution!

- Installation of the analyzer may only be carried out by trained experts in accordance with this instruction manual and as per applicable local and national codes.
- Be sure to observe the technical specifications and input ratings during installation.
- Be sure not to notch the conductor when stripping the insulation.
- All parameters must be set by a system administrator prior to commissioning.

#### Connection of Power Supply

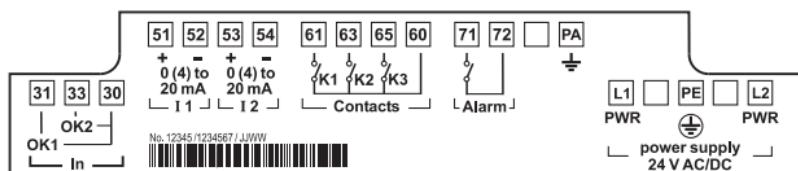
With the power supply unit, the analyzer can be operated with a power supply of 24 V AC (-15 %, +10%) or 24 V DC (-15 %, +20%).

The terminals are suitable for single wires and flexible leads up to 2.5 mm<sup>2</sup> (AWG 14).


#### Terminal Plate BASE 700X-026/24V Module

(IS version with 24 V power supply unit)

Connection of power supply. Contact assignment of inputs/outputs.



# Hazardous-Area Connection to M 700X

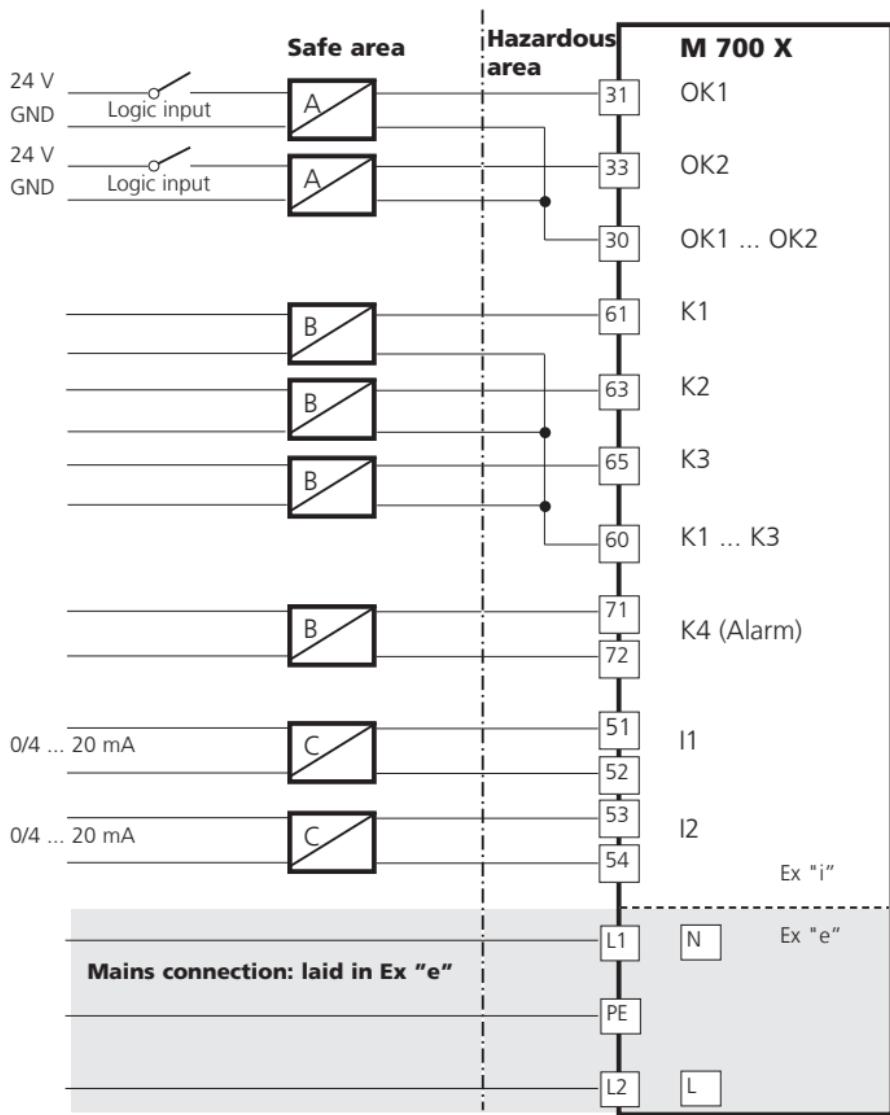


## Hazardous-Area Components (Example)

---


	<b>Designation</b>	<b>Model</b>	<b>Manufacturer</b>
A	Valve control module	KFD2-SL-Ex 1.48****	Pepperl + Fuchs
	Valve control module	MK 72-S17-Ex0/24VDC	TURCK
B	Switch amplifier	KF**-SR2-Ex1.W.**	Pepperl + Fuchs
	Switch amplifier	MK1-22Ex0-R/**	TURCK
C	Loop-powered Isolators	IsoTrans® 36A7	Knick

# Panel Mounting

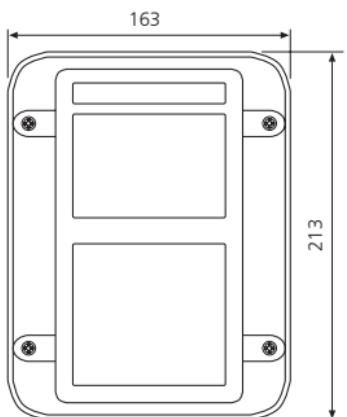
## Dimension Drawings




Front view

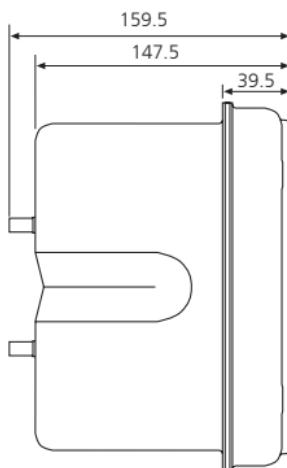

Side view

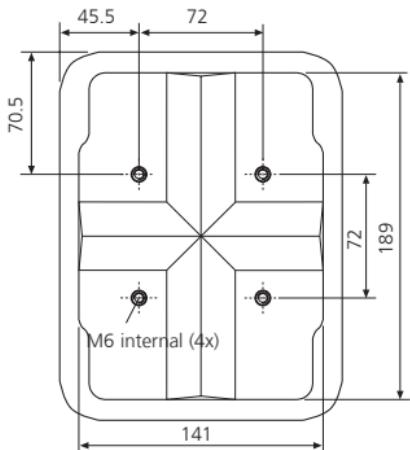


Rear view

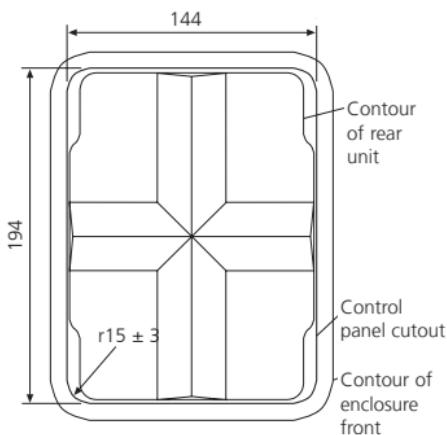


Control panel cutout

# Wall Mounting, Post Mounting

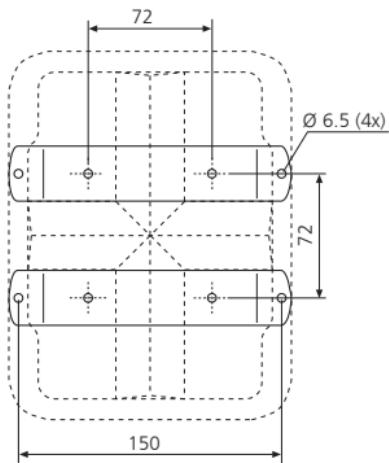
## Dimension Drawings



Wall mounting

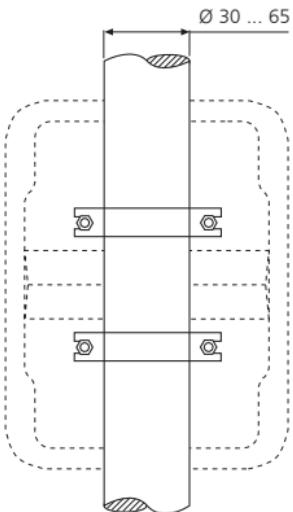

Post mounting

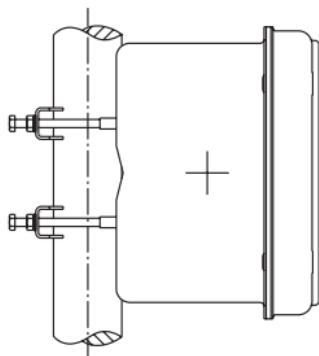


Ø 30 ... 65 mm  
for vertical or horizontal mounting

Ø 30 ... 65 mm	M6x50	M6x70
Ø 30 ... 40 mm	X	
Ø 40 ... 62 mm		X
Ø 62 ... 65 mm		X without nut

# Operation (FRONT Module)
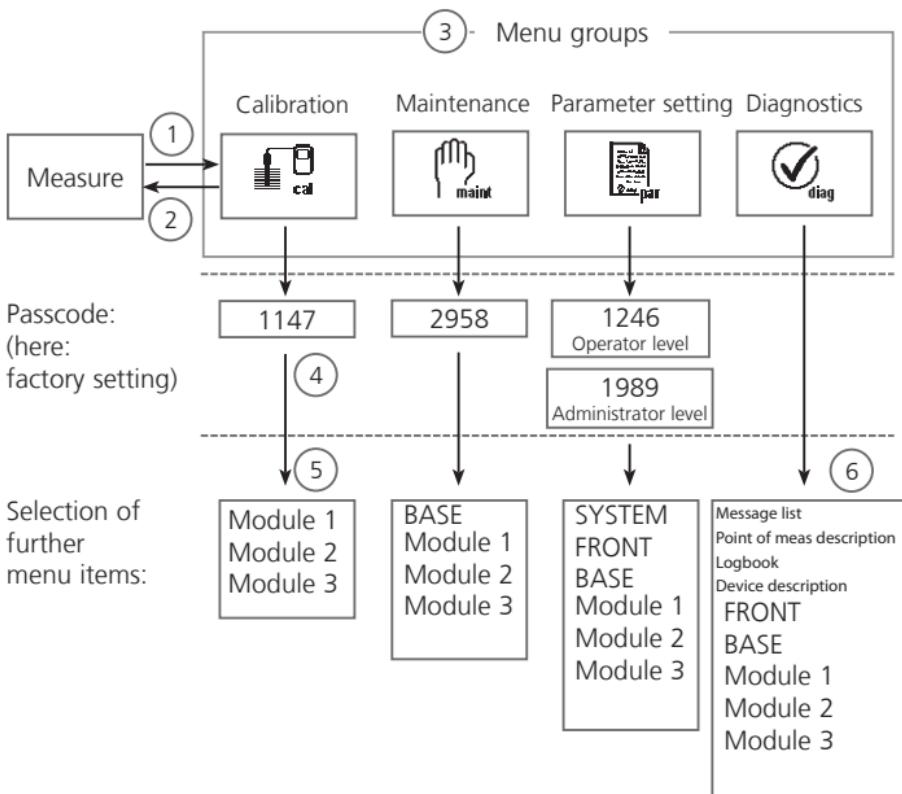
## Menu Structure




# Menu Selection

## FRONT Module


After switching on, the analyzer first performs an internal test routine and automatically detects the number and type of modules installed. Then, the analyzer goes to measuring mode (Pg 39).

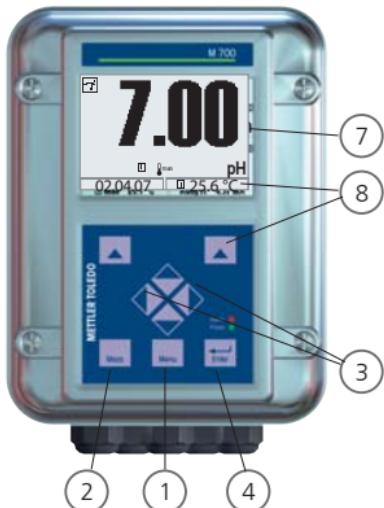- Configure measurement display (7) Pg 40
- Secondary displays/softkeys (8) Pg 41




## Menu Selection

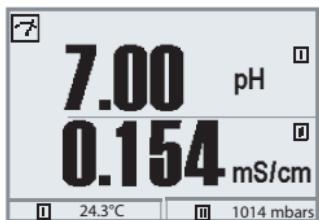- 1) Pressing the **menu** key accesses menu selection.
- 2) Pressing the **meas** key returns to measurement.



(Measuring mode)

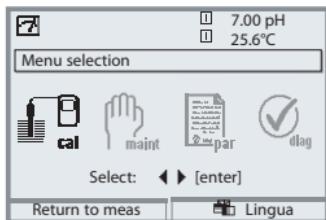

(Menu selection)

Select the desired menu group using the arrow keys (3).

Press **enter** (4) to confirm your choice.

An overview of the menu structure is given on Pg 34.


# Mode Indicators in the Display
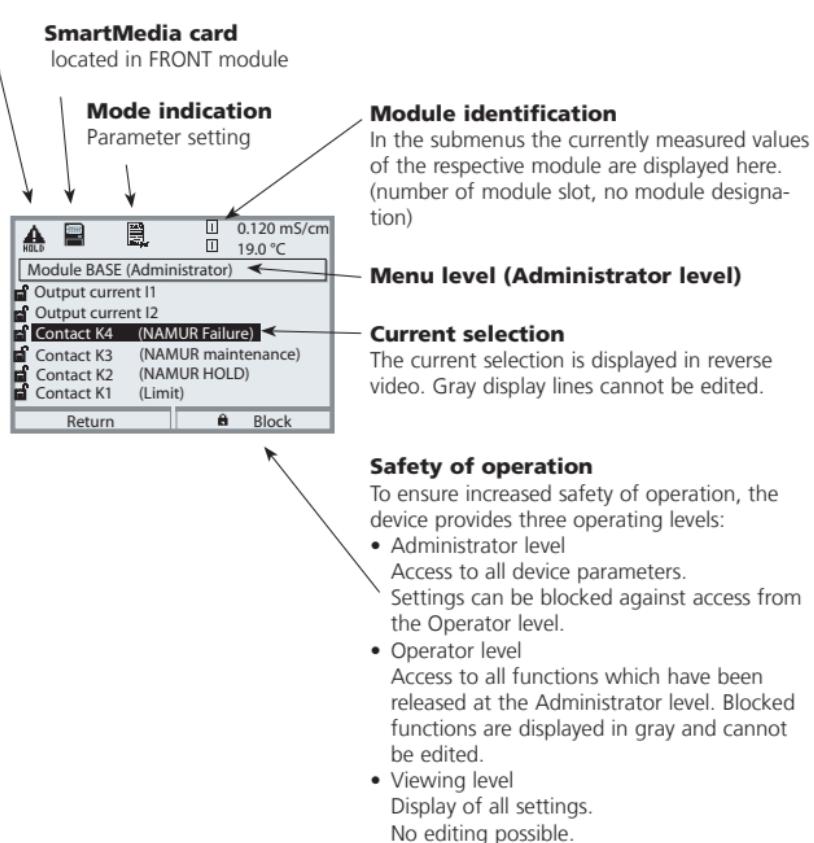
## Icons

The plain-text user interface is supplemented by icons which provide information on the operating status:

### HOLD

The NAMUR "HOLD" mode is active (NAMUR "HOLD" contact (function check); as delivered, that is the K2 contact of the BASE module (normally open contact). This setting can be changed as required - the contacts K2 ... K3 are for free programming. The current outputs behave as configured (you can adjust: last usable value, fixed, 22 mA).



<b>Display</b>	<b>Explanation of Display Icons</b>
	The analyzer is in measuring mode, an ISM sensor is connected.
	The device is in calibration mode. HOLD mode is active.
	The device is in maintenance mode. HOLD mode is active.
	The device is in parameter setting mode. HOLD mode is active.
	The device is in diagnostics mode.
<b>NAMUR signals</b>	<p><b>HOLD:</b> The NAMUR "HOLD" contact is active (factory setting: Module BASE, Contact K2, N/O contact). Current outputs as configured:</p> <ul style="list-style-type: none"> <li>• Current meas.: The currently measured value appears at the current output</li> <li>• Last usable value: The last measured value is held at the current output</li> <li>• Fixed 22 mA: The output current is at 22 mA</li> </ul> <p><b>Failure:</b> The NAMUR "failure" contact is active (factory setting: Module BASE, Contact K4, N/C contact). To view error message, call up: Diagnostics menu/Message list</p> <p><b>Maintenance:</b> The NAMUR "maintenance request" contact is active (factory setting: Module BASE, Contact K2, N/O contact). To view error message, call up: Diagnostics menu/Message list</p>
	Limit indication: Lower / upper range limit exceeded
	The analyzer contains a SmartMedia "memory card". The card is closed and can be removed or enabled in the maintenance menu.
	The analyzer contains an enabled SmartMedia "memory card". During data recording the dot in the icon flashes. Please note: "Close memory card" in the maintenance menu before removing the SmartMedia card.
	The analyzer contains a SmartMedia "update card". You can save the current device software or perform a software update from the SmartMedia card. Be sure to check the configuration after the update is completed.
	The analyzer contains a SmartMedia card of the type "memory card to FDA 21 CFR Part 11". Serves for consistent recording of all operations (SW 700-107).
	Displayed in plain text, when the analyzer is controlled via PROFIBUS PA. Only in conjunction with a BUS module. Different representation for Foundation Fieldbus.
	Designates the module slot (1, 2 or 3), allowing the clear assignment of measured-value/parameter displays in the case of identical module types.
	Indicates the active parameter set .(The analyzer provides two parameter sets A and B. Up to 5 sets can be added using additional functions and SmartMedia card.)


# How to Enter Numbers and Text
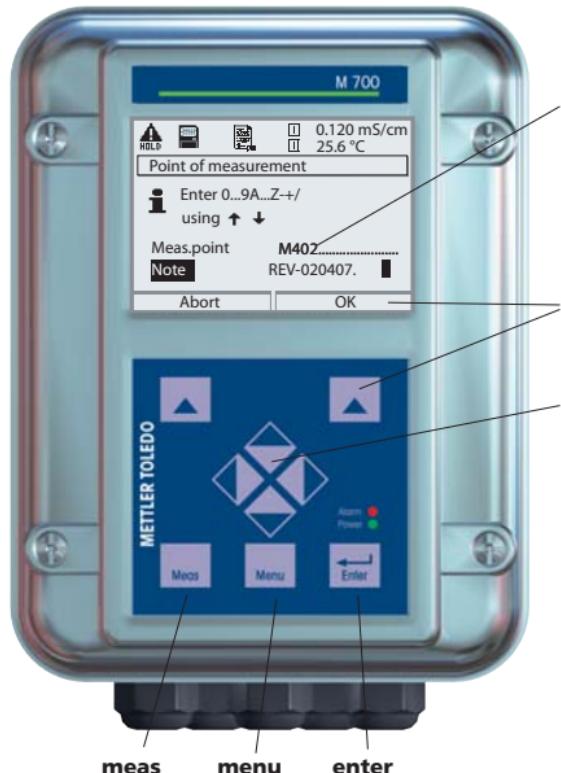
## FRONT Module

Select the position using the **left/right** keys,  
then edit the number or letter using the **up/down** keys.  
Confirm with **enter**.

Example: Entering a tag number (point of measurement)

- Open the menu selection (**menu**)
- Select parameter setting
- Administrator level, enter passcode
- Select point of measurement:



### Point of measurement

You can enter a tag number for the measurement point and notes using the arrow keys.

### Function,

which is assigned to the softkey underneath.

### Arrow keys

For selection of menu lines or entry of letters and numbers.

# Configuring the Measurement Display

## FRONT Module

Select menu: Parameter setting/Module FRONT/Measurement display

Pressing **meas** returns the analyzer to the measuring mode from any function. (Pressing **meas** in measuring mode, successively displays the activated special functions such as measurement recorder or KI recorder).

All process variables coming from the modules can be displayed. The table on the next page describes how to configure the measurement display.



### Measurement display

Typical measurement display (pH, Cond modules)

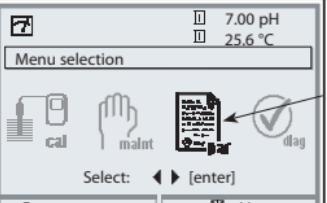
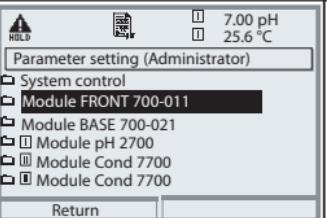
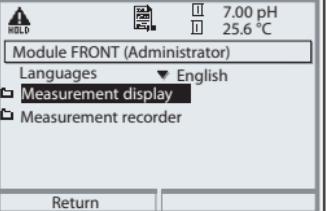
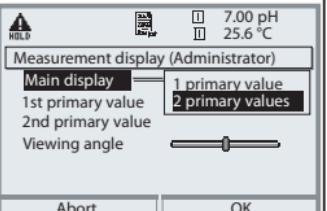
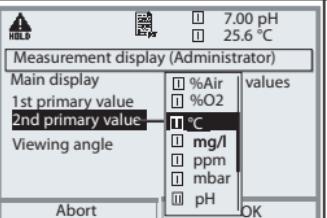
### Secondary displays

Additional values, also date and time, can be displayed depending on the modules installed. They are selected using the softkeys (Pg 41).

### Softkeys

The softkeys allow selection of values for the secondary displays. In addition, Diagnostics functions which are set as "Favorites" can be called up (Pg 42).

If required, you can also change the parameter set via softkey (Pg 42). Furthermore, the softkeys include - self-explaining - context-sensitive functions, e.g. with measurement or KI recorder activated.

Menu	Display	Configure measurement display
	 <p>7.00 pH 25.6 °C</p> <p>Menu selection</p> <p>Select: ◀ ▶ [enter]</p> <p>Return to meas Lingua</p>	<b>Configure measurement display</b> Press <b>menu</b> key to Menu selection Select parameter setting using arrow keys, confirm with <b>enter</b> . Select: "Administrator level": Passcode 1989
	 <p>7.00 pH 25.6 °C</p> <p>HOLD HOLD</p> <p>Parameter setting (Administrator)</p> <ul style="list-style-type: none"> <li>System control</li> <li><b>Module FRONT 700-011</b></li> <li>Module BASE 700-021</li> <li>Module pH 2700</li> <li>Module Cond 7700</li> <li>Module Cond 7700</li> </ul> <p>Return</p>	Parameter setting: Select "Module FRONT"
	 <p>7.00 pH 25.6 °C</p> <p>HOLD HOLD</p> <p>Module FRONT (Administrator)</p> <p>Languages English</p> <ul style="list-style-type: none"> <li><b>Measurement display</b></li> <li>Measurement recorder</li> </ul> <p>Return</p>	Front module: Select "Measurement display"
	 <p>7.00 pH 25.6 °C</p> <p>HOLD HOLD</p> <p>Measurement display (Administrator)</p> <p>Main display</p> <p>1st primary value 2nd primary value Viewing angle</p> <p><b>2 primary values</b></p> <p>Abort OK</p>	Measurement display: Set the number of primary values (large display) to be displayed
	 <p>7.00 pH 25.6 °C</p> <p>HOLD HOLD</p> <p>Measurement display (Administrator)</p> <p>Main display</p> <p>1st primary value <b>2nd primary value</b> Viewing angle</p> <p>%Air %O2 °C mg/l ppm mbar pH</p> <p>values</p> <p>OK</p>	Select process variable(s) to be displayed and confirm with <b>enter</b> .  Pressing the <b>meas</b> key returns to measurement.

# Softkey Function (Function Control)

## FRONT Module

Select menu: Parameter setting/System control/Function control matrix

In measuring mode you can use the **softkeys (1)** to control functions.

The functions are assigned in the function control matrix (Fig.)  
(Parameter setting/System control).

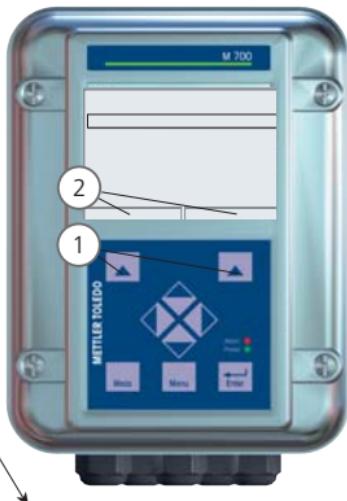
Softkeys which have not been assigned to a certain function are automatically used for selecting the secondary displays.

### Secondary Display (2)

Here, additional values are displayed in the measuring mode. They are selected by pressing the respective softkey.

Always active.

You can choose one of the process variables supplied by the modules (and Calculation Blocks) or the date or time.



HOLD		7.00 pH
		25.6 °C
Function control matrix (Administrator)		
	ParSet	✓Fav
Input OK2	<input type="radio"/>	<input type="radio"/>
Left softkey	<input checked="" type="radio"/>	<input type="radio"/>
Right softkey	<input type="radio"/>	<input type="radio"/>
Profibus DO 2	<input type="radio"/>	<input type="radio"/>
Return		
	Connect	

#### Example:

"Parameter set" to be selected with "Left softkey".

#### To select a softkey function:

Select the control element ("Left softkey"), then the "ParSet" function. Then press "Connect" softkey and confirm with **enter**.

#### To deselect a function:

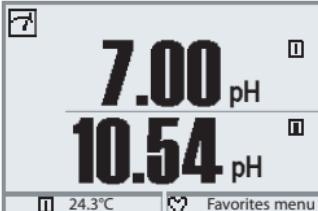
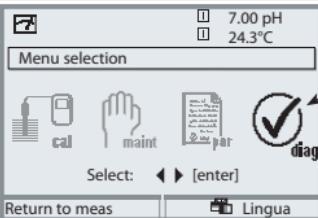
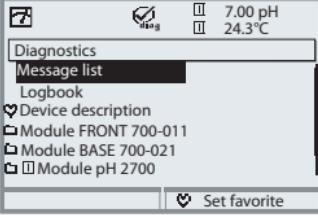
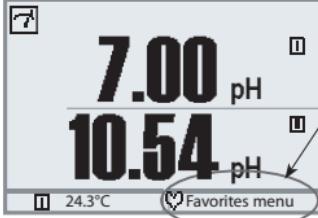
Press "Disconnect" softkey, confirm with **enter**.

### Favorites Menu

Selected Diagnostics functions can be called up directly from the measuring mode using a softkey. The following table (Pg 42) explains how to select favorites.

Further functions which can be controlled via softkey:

- Parameter set
- EC 400 probe controller

Menu	Display	Select favorites
		<b>Favorites menu</b> Diagnostics functions can be called up directly from the measuring mode using a softkey. The "Favorites" are selected in the Diagnostics menu.
		<b>Select favorites</b> Press <b>menu</b> key to Menu selection Select diagnostics using arrow keys, confirm with <b>enter</b> .
		Set/delete favorite: "Set favorite" allows activation of the selected diagnostic function directly from the measuring mode via softkey. The respective function is marked with a heart icon. (See Softkey Function, Pg 41).
		Pressing the <b>meas</b> key returns to measurement. When the softkey has been assigned to "Favorites", "Favorites menu" is read in the secondary display (See Softkey Function, Pg 41).

### Notice:

When one of the softkeys has been assigned to the "Favorites menu" function, diagnostic functions which have been set as "Favorite" can be directly called up from the measuring mode.

# **Documenting Parameter Setting**

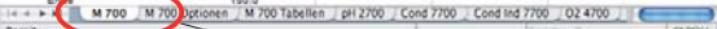
---

You must reproducibly document all parameter settings in the device to achieve a high level of system and device security according to GLP. For that purpose, an Excel file is provided (on the CD-ROM shipped with the basic device or as download at [www.mtpro.com](http://www.mtpro.com)) to enter the parameter settings.

The Excel file provides one worksheet for each module with columns for the following parameters: Factory settings, parameter set A, parameter set B. Enter your settings as parameter set A or B.

The gray cells in the parameter set B column cannot be modified since they contain sensor-specific values which cannot be changed by parameter set switchover. Here, the values listed under parameter set A apply.

# Documenting Parameter Setting

A	B	C	D	E	F
1					
2 1.	<b>Meßstelle:</b> <b>M 700</b>				Zugriff über Menüpunkt:
3	parametrieren am / von:				
4 1.1.					
5					
6					
7 2.	<b>Gerätebeschreibung:</b>	<b>Hardware</b>	<b>Software</b>	<b>Seriennummer</b>	<b>Diagnose / Gerätebeschreibung</b>
8 2.1.	Bedienfond 700.011				Diagnose / Gerätebeschreibung / Front
9 2.2.	M 700 Base 700-021				Diagnose / Gerätebeschreibung / Basis
10 2.3.	Modul Steckplatze [ I ]				Diagnose / Gerätebeschreibung / I
11 2.4.	Modul Steckplatze [ II ]				Diagnose / Gerätebeschreibung / II
12 2.5.	Modul Steckplatze [ III ]				Diagnose / Gerätebeschreibung / III
13					
14					
15	<b>M 700 Front</b>				
16 3.	<b>M 700 Front Einstellungen</b>	<b>Werkseinstellung</b>	<b>Paramettersatz A</b>	<b>Paramettersatz B</b>	<b>Parametrierung (Spezialist) / Modul Front ...</b>
17 3.1.	Sprache:	Deutsch			
18					
19 3.1.1	Messwertanzeige:				
20	Hauptanzeige:	2 Hauptwerte			
21	1. Hauptmaßstab (Modul/Wert)	modulabhängig			Parametrierung (Spezialist) / Modul Front ... / Maß
22	2. Hauptmaßstab (Modul/Wert)	modulabhängig			
23	Anzeigeformat (pH)	xx.xx pH			
24	Blickfeld:	Mitte			
25					
26 3.3.	Nebenanzeige				
27	Anzeigewert, linke	-			Einstellung erfolgt über Softkeys, wenn in Matrixu
28	Anzeigewert, rechts	-			
29					
30 3.4	Messwertkoordinaten:	Option SW700-103			Parametrierung (Spezialist) / Modul Front ... / Maß
31	Zeitbasis (s / Pixel)	1 min			
32	Zeitvorgabe (10s)	10			
33	Min / Max Anzeigen:	Ein			
34 3.4.1	Kanal 1: Maßgröße:	modulabhängig			
35	Anfang	0.00			
36	Ende	14.00			
37 3.4.2	Kanal 2: Maßgröße	modulabhängig			
38	Anfang	-50.0			
39	Ende	150.0			
Bereit 					

From the application window of the Excel file, select the worksheet for the module the parameter settings of which you want to document.  
Set the parameters of the respective module and enter the selected values in the corresponding cells of the module worksheet.





## Caution!

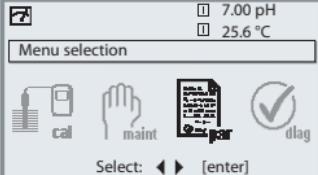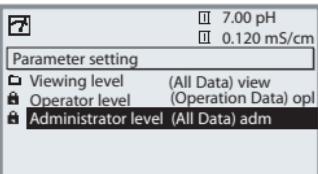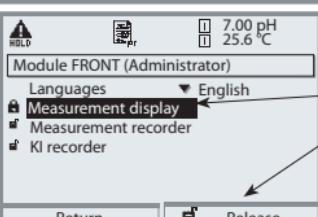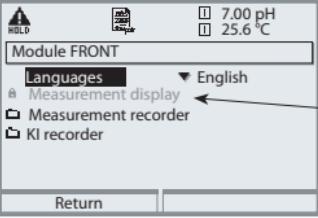Display	During parameter setting the "HOLD" mode is active.
	<b>HOLD.</b> The NAMUR "function check" contact is active (factory setting: Module BASE, Contact K2, N/O contact). Current output response is user-defined: <ul style="list-style-type: none"><li>• Current meas.: The currently measured value appears at the current output</li><li>• Last usable value: The last measured value is held at the current output</li><li>• Fixed 22 mA: The output current is at 22 mA</li></ul>

# Parameter Setting: Operating Levels

Viewing level, Operator level, Administrator level





**Note:** HOLD mode active

Menu	Display	Viewing level, Operator level, Administrator level
		<b>Call up parameter setting</b> From the measuring mode: Press <b>menu</b> key to select menu. Select parameter setting using arrow keys, confirm with <b>enter</b> .
		<b>Administrator level</b> Access to all functions, also passcode setting. Releasing or blocking a function for access from the Operator level.
		Functions which can be blocked for the Operator level are marked with the "lock" symbol. The functions are released or blocked using the softkey.
		<b>Operator level</b> Access to all functions which have been released at the Administrator level. Blocked functions are displayed in gray and cannot be edited (Fig.).
		<b>Viewing level</b> Display of all settings. No editing possible!

# Parameter Setting: Lock Functions

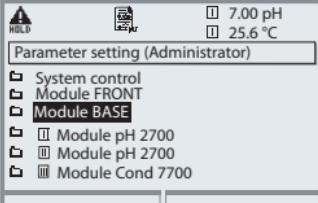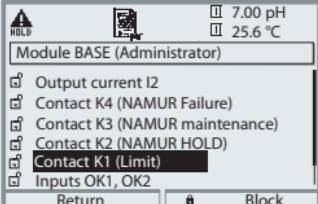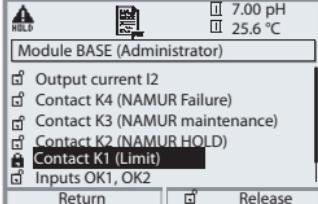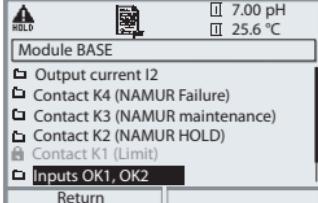Administrator level: Enable / lock functions for Operator level




**Note:** HOLD mode active

Menu	Display	Administrator level: Enable / lock functions
		<p><b>Example:</b> Blocking access to the configuration of relay contact K1 (BASE module) from the Operator level</p> <p><b>Call up parameter setting</b> Select Administrator level. Enter passcode (1989). Select “Module BASE” with arrow keys, confirm with <b>enter</b>.</p>
		Select “Contact K1” using arrow keys, “Block” with softkey.
		Now, the “Contact K1” line is marked with the “lock” icon. This function cannot be accessed from the Operator level any more. The softkey function changes to “Release”.
		<p><b>Call up parameter setting</b> Select <u>Operator level</u>, passcode (1246). Select “Modul BASE”. Now, the locked “Contact K1” function is displayed in gray and marked with the “lock” icon.</p>

# Function Control Matrix, Time/Date

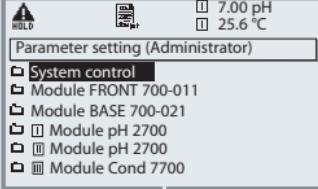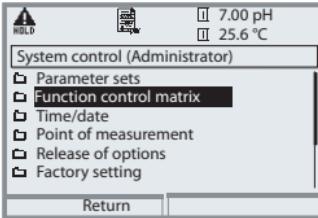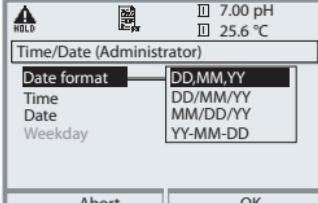Select menu: Parameter setting/System control

**Note:** HOLD mode active

Menu	Display	Function control matrix, Time/Date
	  	<b>Call up parameter setting</b> Select Administrator level. Enter passcode (1989). Select system control using arrow keys, confirm with <b>enter</b> .  Submenus of system control: <ul style="list-style-type: none"><li>• Parameter sets</li><li>• Function control matrix</li><li>• Time/date</li><li>• Point of measurement</li><li>• Release of options</li><li>• Factory setting</li><li>• Passcode entry</li><li>• Software update ... more, depending on Options.</li></ul>
		<b>Function control matrix</b> Clear assignment of function (parameter sets, KI recorder, Favorites menu, EC 400 control) to control element (optocoupler, softkey, or Profibus).
		<b>Time/Date</b> Selection of date format, entering time and date

# Point of Measurement, Passcodes, Release of Options

Select menu: Parameter setting/System control

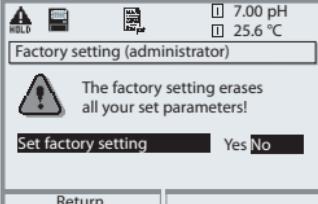
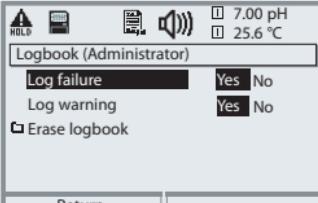
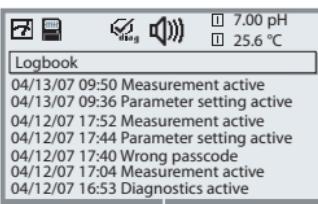
**Note:** HOLD mode active

Menu	Display	Meas point description, Passcodes, Release of options								
	  	<p><b>Meas point description, Passcodes, Release of options</b></p> <p><b>Point of meas description</b> You can enter a tag number or notes (e.g. date of last maintenance).</p> <p><b>Passcode entry</b> Passcodes (factory settings):</p> <table><tbody><tr><td>Calibration</td><td>1147</td></tr><tr><td>Maintenance</td><td>2958</td></tr><tr><td>Operator level</td><td>1246</td></tr><tr><td>Administrator level</td><td>1989</td></tr></tbody></table> <p><b>Caution</b> If you lose the Administrator passcode, system access is locked!</p>	Calibration	1147	Maintenance	2958	Operator level	1246	Administrator level	1989
Calibration	1147									
Maintenance	2958									
Operator level	1246									
Administrator level	1989									
		<p><b>Release of options</b></p> <p><b>When you have purchased an option to be released via TAN:</b></p> <ul style="list-style-type: none"><li>• Parameter setting, Administrator</li><li>• System control</li><li>• Select "Release of options"</li></ul> <p>Set option to "active". Enter the TAN at the prompt. The option is available after the TAN has been entered.</p>								

# Factory Setting, Logbook




Parameter setting/System control/Logbook

**Note:** HOLD mode active

Menu	Display	Factory setting, logbook
		<h3>Factory setting</h3> <p>When this menu is opened, the analyzer displays a warning (Fig.).</p> <ul style="list-style-type: none"><li>• For factory settings, see module description</li></ul> <p>(Free download available at: <a href="http://www.mtpro.com">www.mtpro.com</a>)</p>
		<h3>Logbook</h3> <p>Select which messages are to be logged in the logbook. The last 50 events are recorded with date and time.</p> <p>This permits quality management documentation to ISO 9000 et seq.</p>
		<p>The logbook can be called up from the diagnostics menu (Fig.).</p> <p>Additional function SW 700-104: Extended logbook for recording data on SmartMedia card (TAN).</p>

# Language, Measurement Display, Viewing Angle

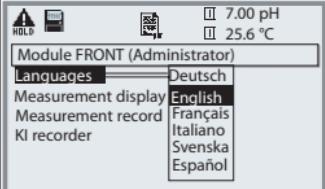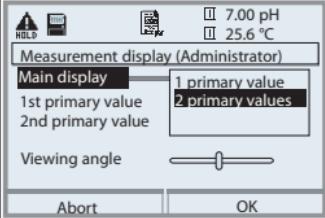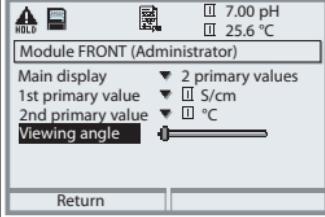Parameter setting/Module FRONT **Note:** HOLD mode active

Menu	Display	Language, Measurement display, Viewing angle
		<b>Language setting</b> <ul style="list-style-type: none"><li>• Call up parameter setting</li><li>• Select "Module FRONT"</li><li>• Call up "Language"</li></ul>
		<b>Measurement display</b> <ul style="list-style-type: none"><li>• Call up parameter setting</li><li>• Select "Module FRONT"</li><li>• Call up "Measurement display"</li><li>• Select number and type of values to be displayed</li></ul>
		<b>Viewing angle</b> <ul style="list-style-type: none"><li>• Call up parameter setting</li><li>• Select "Module FRONT"</li><li>• Call up "Measurement display"</li><li>• Adjust display to local light conditions</li><li>• Confirm with <b>enter</b>.</li></ul>

# Calculation Blocks (System Control)

Select menu: Parameter setting/System control/Calculation Blocks

Calculation of new variables from measured variables

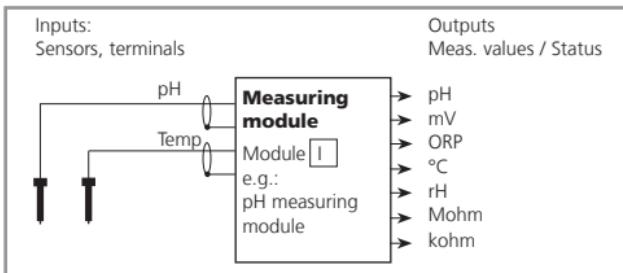
## Calculation Blocks

Two measuring modules with all their measured values serve as input for the calculation block. In addition, the general device status (NAMUR signals) is taken into account. The following variables are calculated from the existing values:


- Ratio
- Pass (passage)
- Reject (rejection)
- Measured-value difference
- Deviation
- pH value calculation by means of dual conductivity measurement

These output variables are then available in the system and can be assigned to the outputs (current, limit values, display ...)

## Functionality of Measuring Module



## Functionality of Calculation Block

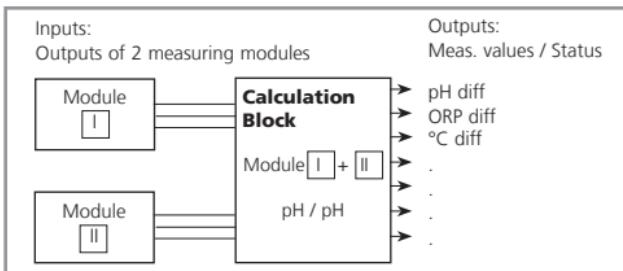

# Activating Calculation Blocks

Select menu: Parameter setting/System control/Calculation Blocks

Combining measuring modules to Calculation Blocks

## Combining Measuring Modules

With three measuring modules the following Calculation Block combinations are possible:

+ , + , +

Two Calculation Blocks can be activated.

Menu	Display	Activating Calculation Blocks
	7.10 pH 25.6 °C System control (Administrator) <input type="checkbox"/> Calculation Blocks <input type="checkbox"/> Point of measurement <input type="checkbox"/> Release of options <input type="checkbox"/> Logbook <input type="checkbox"/> Buffer table <input type="checkbox"/> Concentration table Return	<b>Calculation Blocks</b> <ul style="list-style-type: none"><li>Call up parameter setting</li><li>System control</li><li>Select "Calculation Blocks"</li></ul>
	7.10 pH 25.6 °C Calculation Blocks (Administrator) Block 1 → Off Block 2 →   Calc pH/pH Return	<ul style="list-style-type: none"><li>Depending on the modules installed, the possible combinations for Calculation Blocks are offered.</li></ul>
	7.10 pH 25.6 °C Parameter setting (Administrator) <input type="checkbox"/> System control <input type="checkbox"/> Module FRONT 700-011 <input type="checkbox"/> Module BASE 700-021 <input checked="" type="checkbox"/> Module pH 2700 <input checked="" type="checkbox"/> Module pH 2700 <input checked="" type="checkbox"/> +  Calc pH/pH Return	During parameter setting the Calculation Blocks are displayed like modules.

# Overview of Calculation Blocks

Module Combinations, Calculation Block, Process Variables

Module combination	Calculation Block	Variables calculated by the Calculation Block	
pH + pH	Calc pH/pH	Difference Difference Difference	pH ORP °C
Cond + Cond Condl + Condl Cond + Condl	Calc Cond/Cond	Difference Difference Difference Ratio Passage (Pass) Rejection (Reject) Deviation (Deviat) Deviation (Deviat)	S/cm Ohm*cm °C S/cm [] S/cm[%] S/cm[%] S/cm[%] pH
Oxy + Oxy	Calc Oxy/Oxy	Difference Difference Difference Difference Difference	%Air %O <sub>2</sub> g/l ppm °C
CO <sub>2</sub> + CO <sub>2</sub>	Calc CO <sub>2</sub> /CO <sub>2</sub>	Difference	°C

## New Process Variables and Signal Processing

### Current outputs

All current outputs can be set to output the new process variables formed by the Calculation Blocks.

### Measurement display

All new process variables can be displayed as primary or as secondary value.

### Controller

Controller functions are not supported.

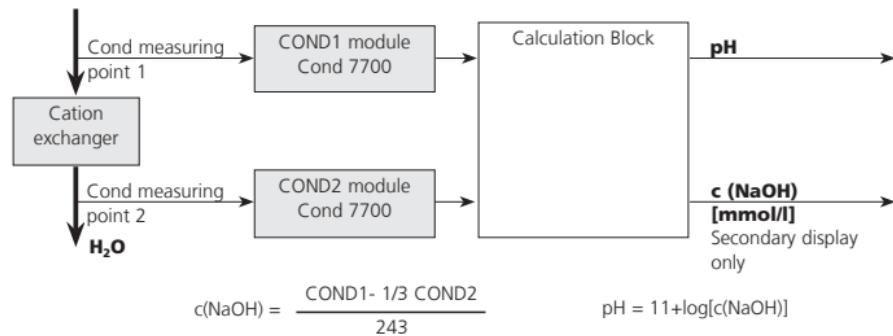
# Calculation Formulas

Module Combinations, Calculation Block, Process Variables

Variable	Calculation formula	Range	Span
Difference (selectable in menu)	DIFF = A - B or DIFF = B - A	Variable	Variable
Ratio (selectable in menu)	RATIO = $\frac{A}{B}$	0.00 ... 19.99	0.10
Passage	PASS = $\frac{B}{A} \cdot 100$	0.00 ... 199.9	10 %
Rejection	REJECT = $\left(1 - \frac{B}{A}\right) 100\%$	-199.9 ... 199.9	10 %
Deviation	DEVIAT = $\left(\frac{B}{A} - 1\right) 100\%$	-199.9 ... 199.9	10 %

## pH Value Calculation by Means of Dual Conductivity Measurement

See instruction manual for Cond 7700 module. Principle:



# Configuring a Calculation Block

Select menu: Parameter setting/System control/Calculation Blocks

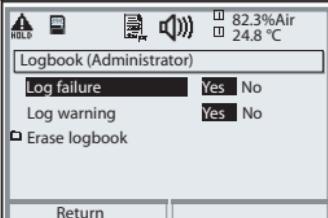
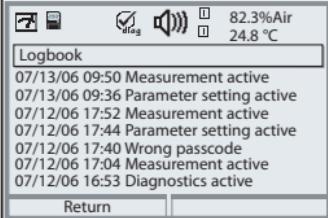
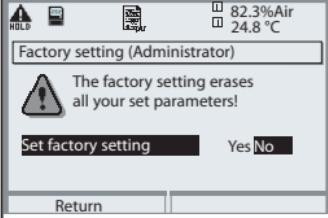
Setting the process variable to be calculated

Menu	Display	Calculation Block Configure																
	   Parameter setting (Administrator) <input type="checkbox"/> System control <input type="checkbox"/> Module FRONT 700-011 <input type="checkbox"/> Module BASE 700-021 <input type="checkbox"/> <input checked="" type="checkbox"/> Module pH 2700 <input type="checkbox"/> <input checked="" type="checkbox"/> Module pH 2700 <input type="checkbox"/> <input checked="" type="checkbox"/> Calc pH/pH  Return	<h3>Select Calculation Block</h3> <ul style="list-style-type: none"><li>• Call up parameter setting</li><li>• System control</li><li>• Select module</li></ul>																
	   <input checked="" type="checkbox"/> + <input checked="" type="checkbox"/> Calc pH/pH (Administrator)  <table border="1"><tr><td>Difference pH</td><td>Off</td><td><input type="checkbox"/> - <input checked="" type="checkbox"/> II</td><td><input checked="" type="checkbox"/> I - <input type="checkbox"/></td></tr><tr><td>Difference ORP</td><td>Off</td><td><input type="checkbox"/> I - <input checked="" type="checkbox"/> II</td><td><input checked="" type="checkbox"/> II - <input type="checkbox"/></td></tr><tr><td>Difference °C</td><td>Off</td><td><input type="checkbox"/> I - <input checked="" type="checkbox"/> II</td><td><input checked="" type="checkbox"/> II - <input type="checkbox"/></td></tr><tr><td>Messages</td><td></td><td></td><td></td></tr></table> Return	Difference pH	Off	<input type="checkbox"/> - <input checked="" type="checkbox"/> II	<input checked="" type="checkbox"/> I - <input type="checkbox"/>	Difference ORP	Off	<input type="checkbox"/> I - <input checked="" type="checkbox"/> II	<input checked="" type="checkbox"/> II - <input type="checkbox"/>	Difference °C	Off	<input type="checkbox"/> I - <input checked="" type="checkbox"/> II	<input checked="" type="checkbox"/> II - <input type="checkbox"/>	Messages				<ul style="list-style-type: none"><li>• Depending on the modules installed, the possible combinations for Calculation Blocks are offered.</li></ul>
Difference pH	Off	<input type="checkbox"/> - <input checked="" type="checkbox"/> II	<input checked="" type="checkbox"/> I - <input type="checkbox"/>															
Difference ORP	Off	<input type="checkbox"/> I - <input checked="" type="checkbox"/> II	<input checked="" type="checkbox"/> II - <input type="checkbox"/>															
Difference °C	Off	<input type="checkbox"/> I - <input checked="" type="checkbox"/> II	<input checked="" type="checkbox"/> II - <input type="checkbox"/>															
Messages																		
	   <input checked="" type="checkbox"/> + <input checked="" type="checkbox"/> Messages (Administrator)  <input type="checkbox"/> Messages pH diff <input type="checkbox"/> Messages ORP diff <input type="checkbox"/> Messages Temp diff  Return	<h3>Messages</h3> <p>You can activate messages for the selected variables.</p> <p>Variables which have been set as "Off" cannot be processed further.</p>																
	   <input checked="" type="checkbox"/> + <input checked="" type="checkbox"/> Messages pH diff (Administrator)  <table border="1"><tr><td>Monitoring</td><td>▼ Variable limits</td></tr><tr><td>Failure Limit Lo</td><td>-01.00 pH</td></tr><tr><td>Warning Limit Lo</td><td>-00.50 pH</td></tr><tr><td>Warning Limit Hi</td><td>+00.50 pH</td></tr><tr><td>Failure Limit Hi</td><td>+01.00 pH</td></tr></table> Return	Monitoring	▼ Variable limits	Failure Limit Lo	-01.00 pH	Warning Limit Lo	-00.50 pH	Warning Limit Hi	+00.50 pH	Failure Limit Hi	+01.00 pH	<p>The measured values which shall release a message are set using the arrow keys (left/right: select position, up/down: edit number). Confirm with <b>enter</b>.</p>						
Monitoring	▼ Variable limits																	
Failure Limit Lo	-01.00 pH																	
Warning Limit Lo	-00.50 pH																	
Warning Limit Hi	+00.50 pH																	
Failure Limit Hi	+01.00 pH																	

# Logbook, Factory Setting

Parameter setting/System control/Logbook

**Note:** HOLD mode


Menu	Display	Logbook, factory setting
		<p><b>Logbook</b></p> <p>Select which messages are to be logged in the logbook. The last 50 events are recorded with date and time.</p> <p>This permits quality management documentation to ISO 9000 et seq.</p>
		<p>The logbook can be called up from the diagnostics menu (Fig.).</p>
		<p><b>Factory setting</b></p> <p>Allows resetting the parameters to their factory setting.</p> <p>When this menu is opened, the analyzer displays a warning (Fig.).</p>

# Switching Between Parameter Sets A, B

## Parameter Sets A, B

2 complete parameter sets (A, B) can be stored in the analyzer.

An icon in the measurement display shows which parameter set is active:

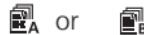

Excel "Parameter settings" spreadsheet at [www.mtpro.com](http://www.mtpro.com).




The control element for switching between the parameter sets (optocoupler, softkey, or PROFIBUS) is selected at "Parameter setting/System control/Function control matrix". The currently activated set can be signaled by a relay contact.

Menu	Display	Parameter sets
	A screenshot of the "Function control matrix (Administrator)" screen. It shows a table with columns for Input OK2, Left softkey, Right softkey, and Profibus DO 2. Each column has three rows of radio buttons. The first row is selected in all columns. Below the table are "Return" and "Connect" buttons. At the top right are status indicators for 7.00 pH and 25.6 °C.  A screenshot of the "System control (Administrator)" screen. It lists several menu items: Memory card, Copy configuration, Parameter sets (which is highlighted), Function control matrix, Time/date, and Point of measurement. Below the list are "Return" and "Connect" buttons. At the top right are status indicators for 7.00 pH and 25.6 °C.  A screenshot of the "Parameter sets (Administrator)" screen. It contains a note about switching over to the function control matrix, a dropdown menu showing "Parameter sets" and "A, B (internal)", and a list of options: Save parameter set (which is highlighted) and Load parameter set. Below the list are "Return" and "Connect" buttons. At the top right are status indicators for 7.00 pH and 25.6 °C.	<p><b>Select control element for switching between the parameter sets</b></p> <ul style="list-style-type: none"><li>• Open menu selection</li><li>• Parameter setting, Admin. level</li><li>• Enter passcode</li><li>• System control: Select "Function control matrix"</li></ul> <p><b>Parameter sets A, B</b></p> <ul style="list-style-type: none"><li>• Open menu selection</li><li>• Parameter setting, Admin. level</li><li>• Enter passcode</li><li>• System control</li><li>• Select "Parameter sets" menu and confirm with <b>enter</b>.</li></ul> <p><b>• Save parameter set</b> The active parameter set A overwrites the internal parameter set B.</p> <p><b>• Load parameter set</b> Parameter set B is loaded.</p>

# Current Outputs, Contacts, OK Inputs

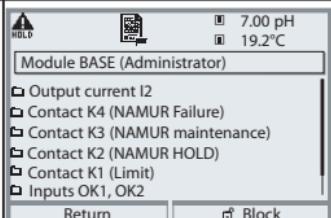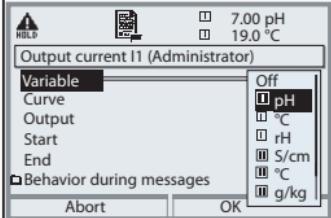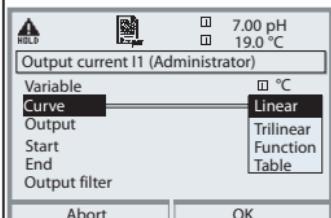Select menu: Parameter setting/Module BASE


**Note:** HOLD mode active

Menu	Display	Parameter setting BASE module
	  	<p>Configure current output</p> <ul style="list-style-type: none"><li>• Call up parameter setting</li><li>• Enter passcode</li><li>• Select "Module BASE"</li><li>• Select "Output current ..."</li></ul> <ul style="list-style-type: none"><li>• Select measured variable</li></ul> <ul style="list-style-type: none"><li>• Select Curve, e.g. "linear": The measured variable is represented by a linear output current curve. The desired range of the measured variable is specified by the values for "Start" and "End".</li></ul>

## Assignment of Measured Values: Start (4 mA) and End (20 mA)

Example 1: Range pH 0 - 14

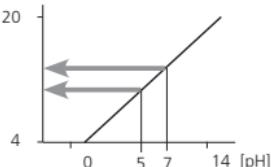
Output current [mA]



Example 2: Range pH 5 - 7

Advantage: Higher resolution in range of interest

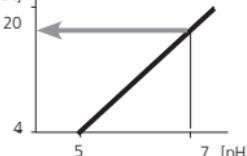[mA]




# Current Outputs: Characteristics

Select menu: Parameter setting/Module BASE


- **Linear characteristic**

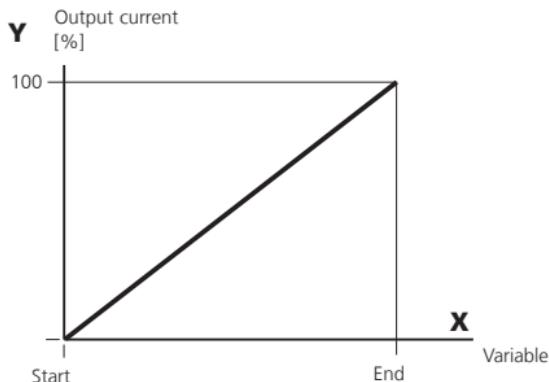The measured variable is represented by a linear output current curve.



- **Trilinear characteristic**

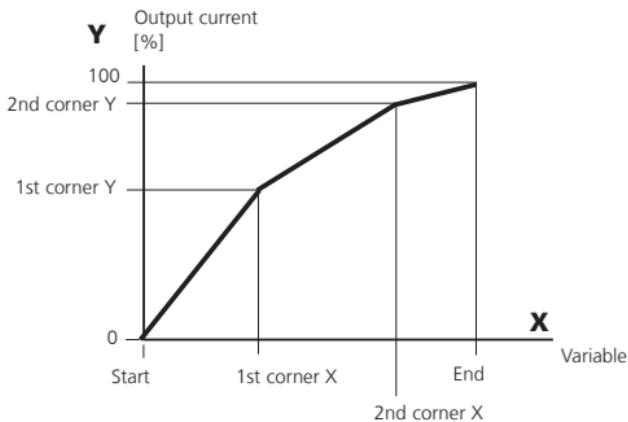Two additional corner points must be entered:




- **Note: Bilinear characteristic**

For a bilinear characteristic, identical parameters are entered for the two corner points (1st corner, 2nd corner).

## • Function characteristic

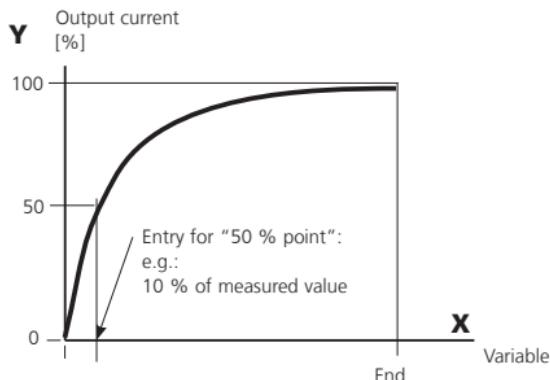Nonlinear output current characteristic: allows measurements over several decades, e.g. measuring very low values with a high resolution and high values with a low resolution.

Required: Entering a value for 50 % output current.



## Equation

$$\text{Output current (4 ... 20 mA)} = \frac{(1+K)x}{1+Kx} \quad 16 \text{ mA} + 4 \text{ mA}$$

$$K = \frac{E + S - 2 * X50\%}{X50\% - S} \qquad \qquad x = \frac{M - S}{E - S}$$

S: Start value at 4 mA

X50%: 50% value at 12 mA (output current range 4 to 20 mA)

E: End value at 20 mA

M: Measured value

### Logarithmic output curve over one decade:

S: 10 % of maximum value

X50%: 31.6 % of maximum value

E: Maximum value

### Logarithmic output curve over two decades:

S: 1 % of maximum value

X50%: 10 % of maximum value

E: Maximum value

# **Output Filter**

---

Time constant.

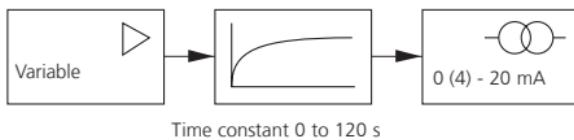
## **Time constant of output filter**

To smoothen the current output, a low-pass filter with adjustable time constant can be switched on. When there is a jump at the input (100 %), the output level is at 63 % after the time constant has been reached.

The time constant can be set from 0 to 120 sec. If the time constant is set to 0 sec, the current output follows the input.

### **Notice**


The filter only acts on the current output and the current value of the secondary display, not on the measurement display, the limit values, or the controller!



# NAMUR Signals: Current Outputs

Behavior during messages: HOLD, 22 mA signal

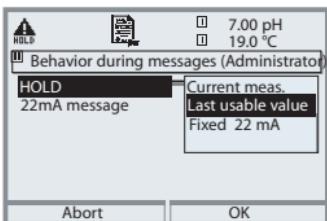
## Behavior during messages



Depending on the parameter setting ("Messages") the current outputs switch to:

- Currently measured value
- Last measured value (HOLD function)
- Fixed value (22 mA)

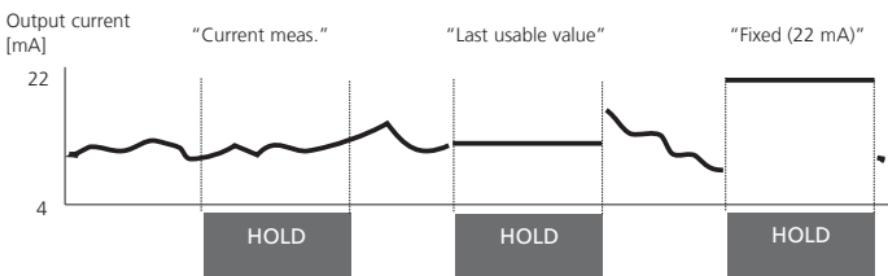In the case of a fault a 22 mA signal can be generated for the selected process variable (1st primary value).



## Message when the current range is exceeded

As delivered, the "Maintenance request" (Warn) message is generated when the current range is exceeded (< 3.8 mA or > 20.5 mA).

This setting can be changed in the Parameter setting menu of the respective measuring module at "Messages".

To generate a "Failure" message, the limit value monitoring must be set to "Variable limits":

Parameter setting - <measuring module> - Messages - Variable limits - Failure limit ...

Enter the same values for the failure limits as for the current output:  
Parameter setting - Module BASE - Output current - Variable Start / End.

# NAMUR Signals: Relay Contacts

Failure, Maintenance Request, HOLD (Function Check)

As delivered, the floating relay outputs of the BASE module are assigned to the NAMUR signals:

## Failure

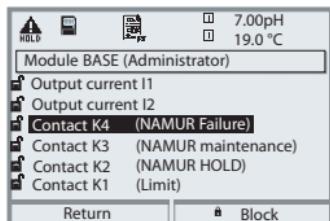
Contact K4, normally closed  
(signaling current failure)

## Maint. request

Contact K3, normally open contact

## HOLD

Contact K2, normally open contact



## NAMUR signals: Factory setting of contacts

- Select parameter setting:
- Administrator level
- Select "Module BASE" (Fig.)

You can define a delay time for "Maintenance request" and "Failure", resp. If an alarm message is released, the contact will only be activated after expiry of this delay time.

## Failure is active

when a value has exceeded (or fallen below, resp.) a preset "Failure Limit Hi" or "Failure Limit Lo", when the measured value is out of range, or in the event of other failure messages. That means that the equipment no longer operates properly or that process parameters have reached a critical value. Failure is disabled during "HOLD" (Function check).

## Maintenance request is active

when a value has exceeded (or fallen below, resp.) a preset "Warning Limit Hi" or "Warning Limit Lo", or when other warning messages have been activated. That means that the equipment is still operating properly but should be serviced, or that process parameters have reached a value requiring intervention.

Failure is disabled during "HOLD" (function check).

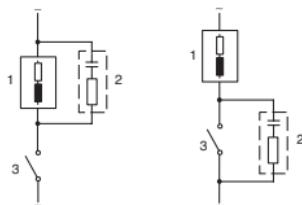
## HOLD is active:

- during calibration
- during maintenance (current source, meas. point maintenance)
- during parameter setting at the Operator level and the Administrator level
- during an automatic rinsing cycle.

# Relay Contacts: Protective Wiring

## Protective Wiring of Relay Contacts

Relay contacts are subjected to electrical erosion. Especially with inductive and capacitive loads, the service life of the contacts will be reduced. For suppression of sparks and arcing, components such as RC combinations, nonlinear resistors, series resistors and diodes should be used.



### Typical AC applications with inductive load

- 1 Load
- 2 RC combination, e.g. RIFA PMR 209  
Typical RC combinations  
e.g.  
Capacitor 0.1  $\mu\text{F}$ ,  
Resistor 100 ohms / 1 W
- 3 Contact

## Caution!

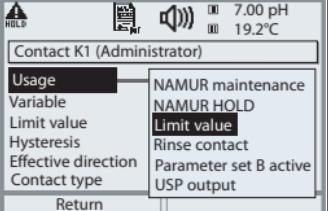
Make sure that the maximum ratings of the relay contacts are not exceeded even during switching!


## Information Concerning Relay Contacts

As delivered, the relay contacts are suitable for low signal currents (down to approx. 1mA). If currents above approx. 100 mA are switched, the gold plating is destroyed during the switching process. After that, the contacts will not reliably switch low currents.

# Relay Contacts

Parameter setting/Module BASE/Relay contacts

Menu	Display	Setting the relay contacts
		<b>Relay contacts, usage</b> <ul style="list-style-type: none"><li>• Call up parameter setting</li><li>• Enter passcode</li><li>• Select "Module BASE"</li><li>• Select "Contact ..."</li><li>• "Usage" (Fig.)</li></ul>

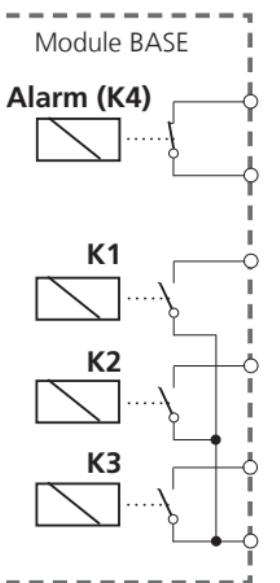

## Contact assignment:

See terminal plate of  
BASE module

The BASE module provides 4 relay contacts (max. AC/DC rating 30 V / 3 A each).

Contact K4 is provided for failure message. The switching behavior (normally open or normally closed), as well as a switch-on or switch-off delay can be defined.

## Default settings of the user-definable relay contacts of the BASE module:

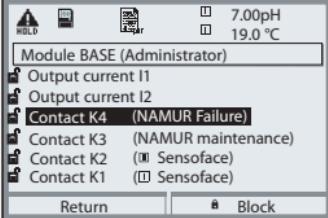
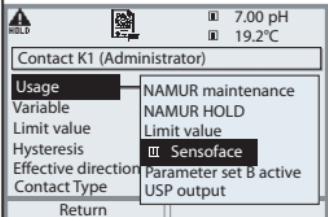
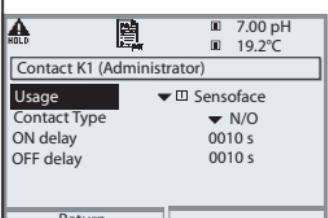
- K3: NAMUR maintenance request
- K2: NAMUR HOLD (function check)
- K1: Limit

## K1-K3 are user definable ("Usage"):

- NAMUR maintenance
- NAMUR HOLD
- Limit value
- Rinse contact
- Parameter set B active
- USP output (Cond module only)
- KI rec. active
- Sensoface
- Controller alarm



# Relay Contacts: Sensoface Messages

Parameter setting/Module BASE/Relay contacts/Usage/Sensoface

Menu	Display	Parameter setting (Sensoface)
		<b>Assign Sensoface Messages to Relay Contacts</b> When more than one measuring module is used, the Sensoface messages of the modules can be assigned to different contacts.
		<b>Relay Contacts, Usage</b> <ul style="list-style-type: none"><li>• Open Parameter Setting</li><li>• Enter passcode</li><li>• Select "Module BASE"</li><li>• Select contact e.g. K1)</li><li>• Assign Sensoface message of desired measuring module to selected relay contact</li></ul>
		<b>Set Contact Parameters</b> <ul style="list-style-type: none"><li>• (e.g. "N/O")</li><li>• Set ON / OFF delay.</li></ul>

# Rinse Contact

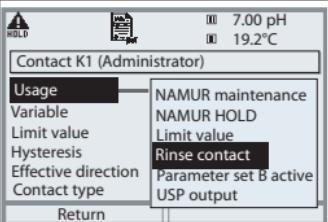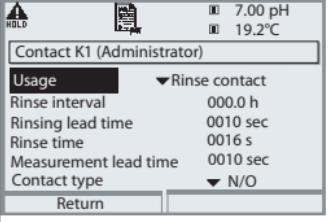
Parameter setting/Module BASE/Relay contacts/Usage/Rinse contact

Menu	Display	Configuring the rinse contact
		<b>Relay contacts, usage</b> <ul style="list-style-type: none"><li>• Call up parameter setting</li><li>• Enter passcode</li><li>• Select "Module BASE"</li><li>• Select contact e.g. K1)</li><li>• "Rinse contact" (Fig.)</li></ul>
		<b>Configuring the rinse contact</b> <ul style="list-style-type: none"><li>• Set rinse interval</li><li>• Set rinse duration</li><li>• During the defined "lead time" the "HOLD" mode is active.</li><li>• Select contact type (e.g. "N/O")</li></ul>

## Please note when configuring the "Rinse contact" function

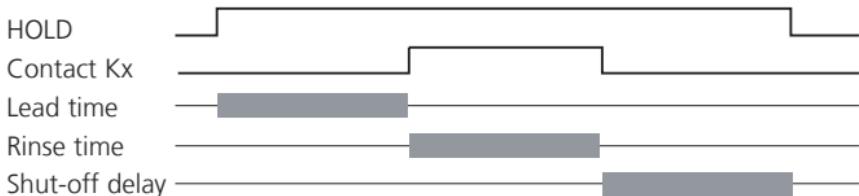- "HOLD" mode (e.g. during parameter setting) delays the execution of the "Rinse contact" function.
- Up to 3 rinse functions (contacts K1 ... K3) can be configured independently.
- The individual rinse functions are not synchronized with each other.

## Time Response




# Limit Value, Hysteresis, Contact Type

Parameter setting/Module BASE/Relay contacts/Usage

Menu	Display	Usage as limit value
		<b>Relay output: Limit</b> <ul style="list-style-type: none"><li>Call up parameter setting</li><li>Enter passcode</li><li>Select "Module BASE"</li><li>Select "Contact ..."</li><li>"Usage: Limit" (Fig.)</li></ul>


## Limit value ▼

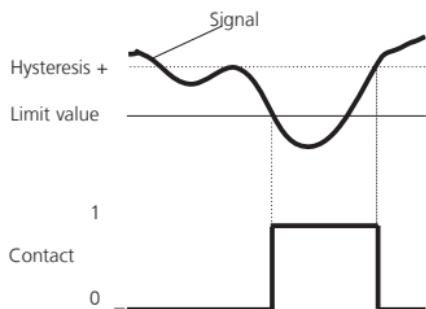Effective direction min



## Limit value ▲

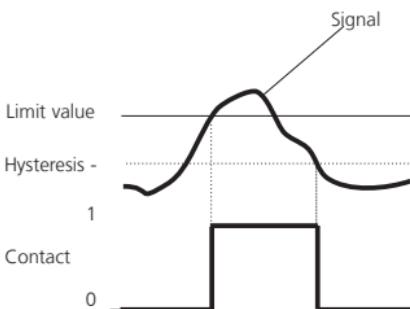Effective direction max



## Icons in the measurement display:

Measured value exceeds limit: Measured value falls below limit:

## Hysteresis

Tolerance band around the limit value, within which the contact is not actuated. Serves to obtain appropriate switching behavior at the output and suppress slight fluctuations of the measured variable (Fig.)

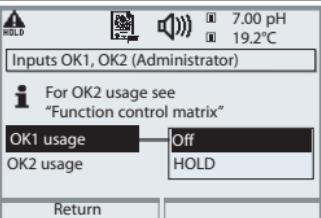
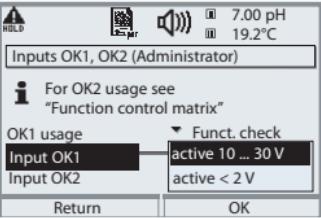
## Contact type

Specifies whether the active contact is closed (N/O) or open (N/C).

# OK1, OK2 Inputs: Specify Level

Parameter setting/Module BASE/Inputs OK1, OK2


**Note:** HOLD mode (setting: BASE module)

Menu	Display	Setting the OK inputs
		<b>OK1 usage</b> <ul style="list-style-type: none"><li>Call up parameter setting</li><li>Enter passcode</li><li>Select "Module BASE"</li><li>Select "Inputs OK1/OK2"</li><li>Select "OK1 usage"</li></ul>
		<b>OK1/OK2 switching level</b> <ul style="list-style-type: none"><li>Call up parameter setting</li><li>Enter passcode</li><li>Select "Module BASE"</li><li>Select "Inputs OK1/OK2"</li><li>Specify active switching level</li></ul>

The BASE module provides 2 digital inputs (OK1, OK2). The following functions (depending on the parameter setting) can be started via a control signal:

- OK1: "Off" or "HOLD" (Function check)
- OK2: Select: System control / Function control matrix ("Off", "Parameter set A/B", "Start KI recorder")

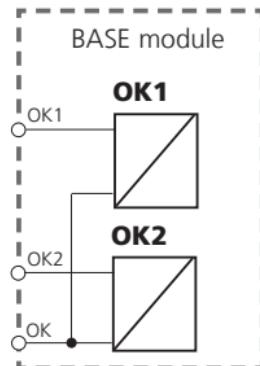The switching level for the control signal must be specified:  
(active 10...30 V or active < 2 V).



# Switching Parameter Sets via OK2

Parameter setting / System control / Function control matrix

**Note:** HOLD mode (setting: BASE module)


## Parameter sets

2 complete parameter sets (A, B) can be stored in the analyzer.

You can switch between the parameter sets using the OK2 input.

The currently activated set can be signaled by a relay contact.

An icon in the measurement display shows which parameter set is active:

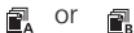

Menu	Display	Parameter sets
	A screenshot of a software interface titled 'Function control matrix (Administrator)'. It shows two columns of radio buttons under 'Input OK2' and 'Left softkey'. The first column has three rows with radio buttons followed by '-' signs. The second column has four rows with radio buttons followed by '-' signs. At the bottom are 'Return' and 'Connect' buttons.	<b>Selecting parameter set (A, B) via OK2 input</b> <ul style="list-style-type: none"><li>Call up parameter setting</li><li>System control</li><li>Function control matrix</li><li>Select "OK2"</li><li>Connect "Parameter set A/B"</li></ul>
	A screenshot of a software interface titled 'Contact K3 (Administrator)'. It shows a list of options: 'Usage' (highlighted), 'Contact type', 'ON delay', 'OFF delay', 'NAMUR maintenance', 'NAMUR HOLD', 'Limit value', 'Rinse contact', 'Parameter set B active' (highlighted), and 'USP output'. At the bottom are 'Abort' and 'OK' buttons.	<b>Signaling active parameter set via relay contact</b> <ul style="list-style-type: none"><li>Call up parameter setting</li><li>BASE module</li><li>Select contact</li><li>Usage: "Parameter set ...".</li></ul>

## Notice

The selection has no effect when working on SmartMedia card with SW 700-102.

# Inserting the SmartMedia Card

## Please note when inserting the SmartMedia card:

Protect against electrostatic discharge!

The analyzer must be opened to insert or replace the SmartMedia card.

Power can remain on. When closing the device, make sure that the sealing is properly seated and clean.



**Warning!**

**Do not touch the terminal compartment, there may be dangerous contact voltages!**



### 1. Open the analyzer

- Loosen the 4 front screws
- Open the FRONT module at its right side (pivot hinge inside at the left)
- The slit for inserting the SmartMedia card is located at the inner side of the FRONT module

### 2. Insert SmartMedia card

- Remove SmartMedia card without touching the contact surface from its package
- Insert card in the slit at the inner side of the FRONT module



#### Inserting the SmartMedia card:

The label must be facing you.

### 3. Remove SmartMedia card

- To avoid data loss, please call up the Maintenance menu.
- Select "Close memory card" to terminate software access to the SmartMedia card. Now the card can be taken out.

# SmartMedia Card: Types

---

## Types of SmartMedia Cards Provided by the Manufacturer

The SmartMedia cards are supplied preformatted as:

- Memory Card (SW 700-102 ... 1xx)
- Software update (SW 700-106)

## SmartMedia Card: Display Icons

When the analyzer has recognized the SmartMedia card, it displays an icon resembling a SmartMedia card:



### Memory Card (SW 700-102 ... 1xx)

This type of card allows the storage of data (e.g. configuration, parameter sets, logbook, measurement recorder data).

The icon flashes to indicate active data transmission.



### SmartMedia Card Locked Against Data Access

(type "memory card")

To avoid data loss, a memory card must be "closed" in the Maintenance menu before it is removed.

The icon shown on the left is displayed.

Now the card can be taken out.

(A locked card can be opened in the Maintenance menu.)



### Software Update Card (Additional Function SW 700-106)

This SmartMedia card is specially preformatted and allows a software update. In that case the previous operating program of the analyzer ("firmware") will be replaced by a new version.

An update card can also be used to save older versions of the operating program. You cannot save general data on a SmartMedia card of the type "Update card". By formatting an update card you can generate a "memory card" (irreversible!) Formatting erases the update!

# SmartMedia Card: Memory Cards

Formatting Commercial SmartMedia Cards

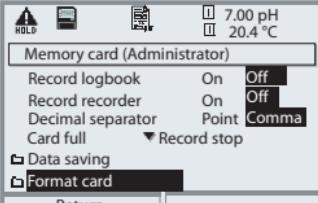
## Commercially Available SmartMedia Card as Memory Card.

The following types of cards are supported: 8 MB, 16 MB, 32 MB, 64 MB, and 128 MB. Externally produced files, such as from a digital camera, are tolerated. Long file names can be read. The M 700(X) generates file names in the 8.3 format (8 characters file name, 3 characters program-specific file name extension).

## Formatting a Commercial SmartMedia Card

Please format a commercial SmartMedia card as M 700 memory card before use.

Please do NOT format the card in a PC card reader, always use the M 700!

Menu	Display	Formatting commercial SmartMedia cards
	 <p>Memory card (Administrator)</p> <p>Record logbook On Off</p> <p>Record recorder On Off</p> <p>Decimal separator Point Comma</p> <p>Card full ▾ Record stop</p> <p>Data saving</p> <p>Format card</p> <p>Return</p>	<p><b>Format</b></p> <ul style="list-style-type: none"><li>• Insert SmartMedia card</li><li>• Open menu selection</li><li>• Parameter setting, Admin. level</li><li>• Enter passcode</li><li>• System control: Memory card ("Memory card" function only available with SmartMedia card inserted!)</li><li>• Format card</li></ul>

## File Structure of a Memory Card

Folder	Typ. file name	Remark
BACKUP	BACKUP01.PAR	BACKUP device configuration
LOGBOOK	L_YYMM00.TXT	Logbook file, YY=year, MM= month
PARASET	SET 1	Parameter set
RECORDER	R_YYMMDD.TXT	Recorder entry, YY=year, MM=month, DD=day

# **Saving / Loading Device Configuration**

---

Parameter setting/System control/Copy configuration

## **Saving / Loading the Complete Device Configuration**

Parameter setting/System control/Memory card/Copy configuration

“Save” configuration means that the complete device configuration (except the passcodes) is written on the memory card.

“Load” configuration means that the complete device configuration is read from the memory card and programmed.

BACKUP file generated on SmartMedia card: \BACKUP\BACKUP01.PAR

## **Transferring the Complete Device Configuration from one Device to Further Devices**

Prerequisite:

The devices have the same hardware equipment,  
the modules are placed in the same slots  
(e.g. pH 2700 in slot I, Cond 7700 in slot II etc.).

Options:

All required options must be enabled in the “master device”, the options in the “slave devices” can be a subset of them.

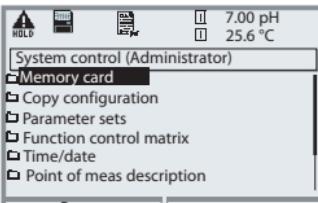
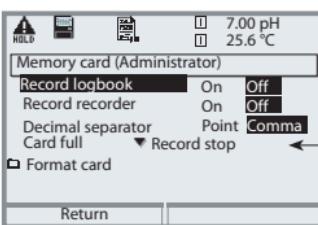
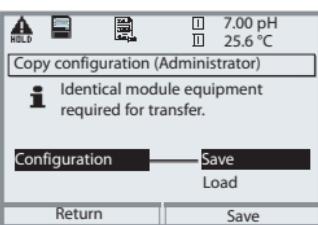
Only the option parameters are transferred, not the option itself.

When an option is enabled in a “slave device” at a later point in time, the parameters of this option are already initialized according to the “master device”.

- 1) Write device configuration of configured device on SmartMedia card:  
Parameter setting/System control/Copy configuration/Save.
- 2) Change to maintenance menu. Select “Close memory card”.
- 3) Remove the SmartMedia card. Now you can transfer the device configuration to further identically equipped devices.
- 4) To do so, insert the SmartMedia card containing the configuration in the next device to be configured.  
Select  
Parameter setting/System control/Copy configuration/Load.
- 5) Change to maintenance menu. Select “Close memory card”.
- 6) Remove the SmartMedia card.

# Using the Memory Card

Parameter setting/System control/Memory card

Menu	Display	Using the memory card
	  	<p><b>To use the memory card</b></p> <ul style="list-style-type: none"><li>• Insert SmartMedia card</li><li>• Open menu selection</li><li>• Parameter setting, Admin. level</li><li>• Enter passcode</li><li>• System control: Memory card</li></ul> <p>With SmartMedia card inserted, the display shown on the left appears (The “Memory card” line is displayed only if a memory card is in the slot). • Select “Memory card”, confirm with <b>enter</b>. The menu is self-explanatory.</p>
		<p><b>Behavior when the memory card is full:</b></p> <p>Continuous recording (as with a flight recorder) or Stop (card replacement).</p> <p><b>Copy configuration</b></p> <ul style="list-style-type: none"><li>• Save: Saving all data on the memory card</li><li>• Load: Overwriting all device data with the data from the memory card</li></ul> <p><b>Caution! “Close” memory card before removing it (Maintenance menu)</b></p>

# Formatting the Update Card

Parameter setting/System control/Format card

**Note:** HOLD mode active

Menu	Display	Formatting the update card (generate memory card)
	 <b>Software update (Administrator)</b> Updating will change the device characteristics. Perform verification as appropriate! Update firmware Save firmware <b>Format card</b> Return	<b>To format the card</b> <ul style="list-style-type: none"><li>Insert SmartMedia card</li><li>Open menu selection</li><li>Parameter setting, Admin. level</li><li>Enter passcode</li><li>System control: Format card</li></ul> <p>Formatting an update card generates a memory card.</p> <p><b>Caution! This process is irreversible!</b></p> <p>Double warning messages protect against faulty operation.</p> <p>When formatting is finished, a message will be displayed.</p>



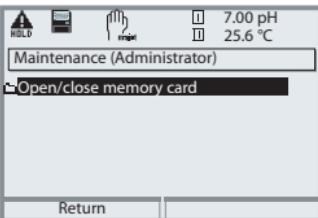
## Caution!

Please do NOT format the memory card in a PC card reader, always use the M 700!

# SmartMedia Card: Remove Card

Maintenance/Removing Memory Card



**Note:** HOLD mode active

Menu	Display	Close memory card
 maint		<p><b>Caution!</b> <b>"Close" memory card before removing it (Maintenance menu)</b> Otherwise you risk losing data.</p> <p><b>Remove memory card</b></p> <ul style="list-style-type: none"><li>• Insert SmartMedia card</li><li>• Open menu selection</li><li>• Maintenance, Memory card</li><li>• "Close card"</li></ul> <p><b>Close memory card</b> terminates software access to the SmartMedia card. Must be executed before removing the card from the SmartMedia card slot to prevent data loss. Do not remove the card while the dot in the SmartMedia card icon flashes!</p>

# SW 700-102: Loadable Parameter Sets

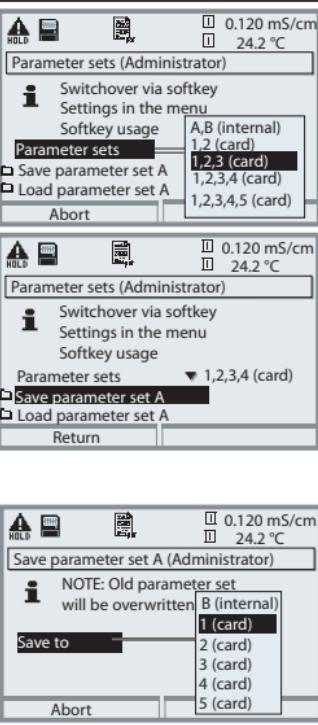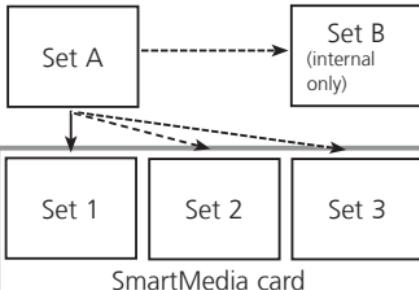Parameter setting/System control/Parameter sets

**Note:** Additional function SW 700-102 required.






Menu	Display	Saving parameter set on SmartMedia card
		<p><b>To save a parameter set on SmartMedia card</b></p> <ul style="list-style-type: none"><li>• Call up parameter setting</li><li>• System control</li><li>• Call up "Parameter sets" (Fig)</li></ul> <p>The analyzer provides 2 complete parameter sets (A, B). Up to 5 parameter sets can be loaded to the SmartMedia card. To do so, a parameter set (1, 2, 3, 4, or 5) of the SmartMedia card is overwritten by the device-internal parameter set A.</p> <ul style="list-style-type: none"><li>• Selecting the parameter set on the SmartMedia card</li></ul>  <p>Set A</p> <p>Set B (internal only)</p> <p>Set 1      Set 2      Set 3</p> <p>SmartMedia card</p>

## Parameter set as file on a memory card:

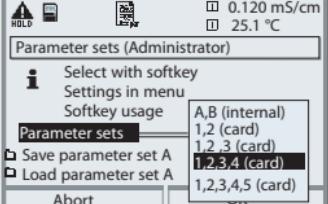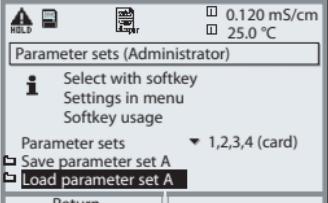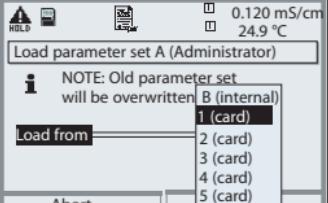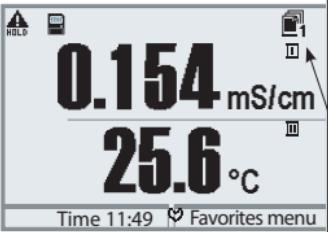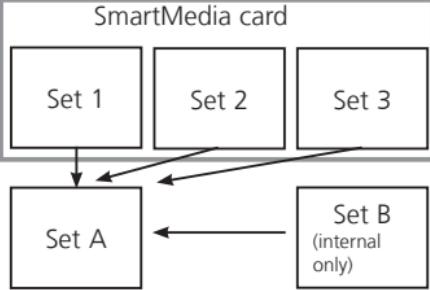Stored in "PARASET" folder, typical file name "1.SET".

# SW 700-102: Loadable Parameter Sets

Parameter setting/System control/Parameter sets

Menu	Display	Load parameter set from SmartMedia card
	    	<p><b>Load parameter set from SmartMedia card</b></p> <p><b>Loading a parameter set from SmartMedia card</b></p> <ul style="list-style-type: none"><li>• Call up parameter setting</li><li>• System control</li><li>• Call up "Parameter sets" (Fig)</li></ul> <p>The analyzer provides 2 complete parameter sets (A, B). 5 parameter sets can be stored on the SmartMedia card. One of those can be saved as parameter set A to the analyzer:</p> <p><b>SmartMedia card</b></p>  <ul style="list-style-type: none"><li>• Select parameter set to be loaded. Activated parameter set is displayed in measuring mode.</li></ul> <p>Note: Remote switching between A and B is possible via the OK2 input.</p>

# **SW 700-106: Software Update**

---

For a software update (additional function SW 700-106), the manufacturer supplies a specially formatted SmartMedia card. The analyzer replaces its own firmware (operating program) by the new version ("Update").

## **Caution!**

During a software update the analyzer is not operable!

After a software update you should check the configuration.



This icon indicates that a SmartMedia card is inserted in the slot. The card allows storing of current device software on the card as well as loading of new software into the analyzer.

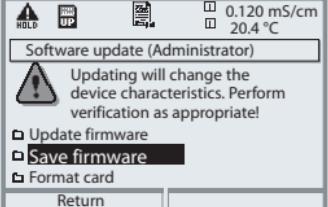
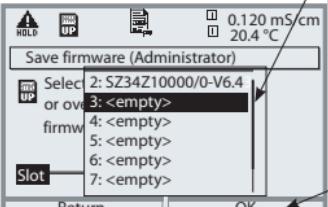
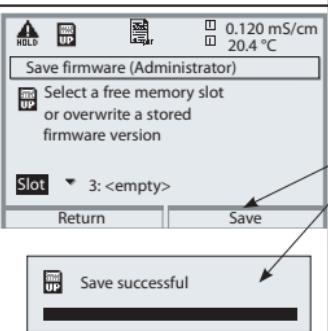
- 1.** Save the firmware currently installed in your analyzer (Pg 81)
- 2.** Load the software update as described on Pg 82.

## **Notice:**

A memory card can be generated by formatting an update card (irreversible!). See introductory chapter to SmartMedia card.

# SMARTMEDIA Card: Save firmware

Parameter setting/System control/Software update/Save firmware

Menu	Display	Save firmware on software update card
		<b>Save firmware</b> <ul style="list-style-type: none"><li>Insert SmartMedia card</li><li>Open menu selection</li><li>Parameter setting, Admin. level</li><li>Enter passcode</li><li>System control: Software update</li></ul>
		Select a free memory slot on the card: <ul style="list-style-type: none"><li>Select slot with ► key</li><li>Select free slot with arrow keys.</li></ul>
		<ul style="list-style-type: none"><li>Confirm slot with "OK".</li></ul>
		<ul style="list-style-type: none"><li>Start with "Save" softkey.</li><li>Confirm finish message (with "OK" or enter).</li><li>Remove the SmartMedia card.</li><li>Close the front door.</li></ul>
		

# SMARTMEDIA Card: Load Firmware

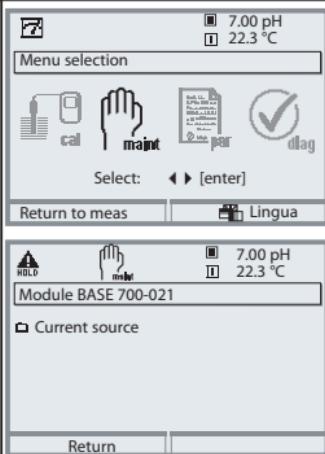
Parameter setting/System control/Software update/Load firmware

Menu	Display	Software update ("Load firmware")
	<b>Release of options (Administrator)</b> 102 Parameter sets 103 Measurement recorder 104 Logbook <b>106 Software update</b> 107 AuditTrail  Return	<p><b>Software update</b></p> <ul style="list-style-type: none"><li>Insert SmartMedia card</li><li>Open menu selection</li><li>Parameter setting, Admin. level</li><li>Enter passcode</li><li>Select System control</li></ul> <p><b>1: Select Release of options</b> (Software update SW 3400-106) Set option to "active". Enter the TAN at the prompt. The option is available after the TAN has been entered.</p> <p><b>2. Select Software update</b> Check whether your unit really requires a software update. To read the current software version, select:<ul style="list-style-type: none"><li>Diagnostics</li><li>Device description</li><li>Module FRONT</li></ul><p><b>Perform update:</b></p><ul style="list-style-type: none"><li>Parameter setting</li><li>System control</li><li>Software update</li><li>Select slot</li><li>Confirm slot with "OK".</li><li>Press "Load firmware" softkey to start the software update.</li></ul></p>

# Maintenance

BASE Module

**Note:** HOLD mode active

Menu	Display	Maintenance
 <b>maint</b>		<p><b>Call up Maintenance</b> From the measuring mode: Press <b>menu</b> key to select menu. Select maintenance using arrow keys, confirm with <b>enter</b>. Then select "Module BASE".</p> <p><b>BASE module: Current source</b> For testing purposes, the output current can be manually specified (range 0 ... 22 mA).</p> <p><b>Open/close memory card</b> terminates software access to the SmartMedia card. Must be executed before removing the card from the SmartMedia card slot to prevent data loss.</p>


# Diagnostics Functions
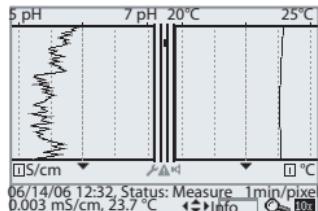
## Overview

Selected diagnostics functions for quality management


### Diagnostics Functions (Quality Management, ISO 9000 et seq.)

To meet the quality management requirements to ISO 9000, the M 700 provides comprehensive diagnostics and safety functions such as Sensocheck sensor monitoring and CalCheck monitoring of calibration ranges, a logbook for time- and date-stamped recording of function activations, warning and failure messages. Further features are:



#### 2-Channel Measurement Recorder

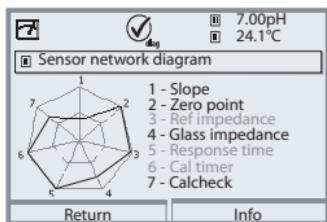
Can be called up directly from the measuring mode.  
Allows detailed evaluation of events by placing the cursor on measured values of interest.



#### Sensor Network Diagram

(pH, O<sub>2</sub> modules, EC 400, sensor wear)

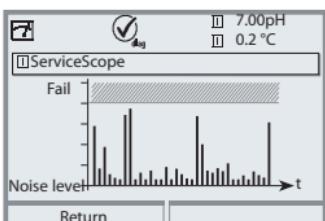Graphical representation of the sensor parameters in a network diagram – with slope, zero, reference impedance, glass impedance, response time, calibration timer, deviation from calibration range.



#### ServiceScope

(pH module)

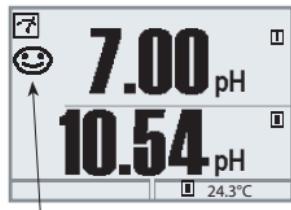
Displays the noise levels over the time. Allows distinction of individual disturbances, periodic and broadband disturbances, which is helpful for troubleshooting. An error message is generated if the noise level exceeds the failure limit.

# Sensoface



Graphical indication of sensor condition

Sensocheck must have been activated during parameter setting



## Sensocheck - Sensor Monitoring

Module Sensocheck function

O<sub>2</sub>: Monitoring membrane/electrolyte

Cond/

Cond Ind:

pH/ORP/

CO<sub>2</sub>: Information on sensor condition

Automatic monitoring of glass and reference electrode

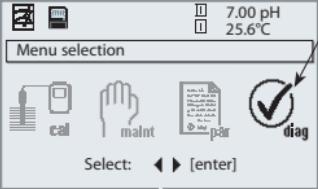
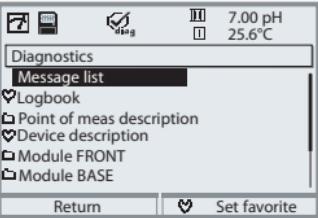
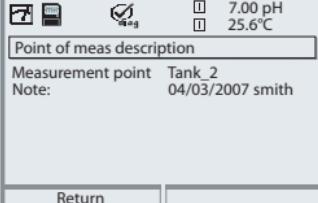
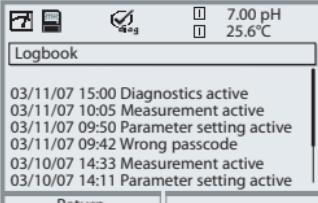
The "smileys" provide information on wear and required maintenance of the sensor ("friendly" - "neutral" - "sad").

Menu	Display	Activate Sensocheck
		<p><b>Open menu selection</b> Select parameter setting Enter passcode (Administrator)</p> <p>Select measuring module (e.g. "pH" or "O<sub>2</sub>"). Confirm with <b>enter</b></p> <p>Select "Sensor data". Confirm with <b>enter</b>. Then select "Sensocheck Ref el". (Fig.) Assign function and confirm with <b>enter</b>.</p>

# Diagnostics Functions

General status information of the measuring system

Select menu: Diagnostics - Logbook

Menu	Display	Diagnostics functions
	  	<p><b>Call up diagnostics</b></p> <p>From the measuring mode: Press <b>menu</b> key to select menu. Select diagnostics using arrow keys, confirm with <b>enter</b>.</p>
		<p>The “Diagnostics” menu gives an overview of all functions available. Functions which have been set as “Favorite” can be directly accessed from the measuring mode.</p>
		<p><b>Point of meas description</b></p> <p>Allows entering a tag number and a note. Select position: left/right arrow key, select character: up/down arrow key. Confirm the entry with <b>enter</b>.</p>
		<p><b>Logbook</b></p> <p>Shows the last 50 events with date and time, e.g. calibrations, warning and failure messages, power failure etc. This permits quality management documentation to ISO 9000 et seq. Extended logbook: SmartMedia card (SW 700-104)</p>

# **SW 700-104: Extended Logbook**

---

Parameter setting/System control/Logbook

## **Additional Function SW 700-104: Extended Logbook**

The extended logbook saves all entries in a file. The last 50 entries can be displayed on the M 700. A new file is generated for each month. The date is encoded in the file name.

Example for a file generated on SmartMedia card:

**\LOGBOOK\L\_\YYMM00.TXT**

Recorder data of YYMM

(YY = year, MM = month)

The data is recorded as ASCII file with the extension .TXT.

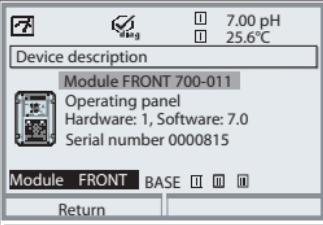
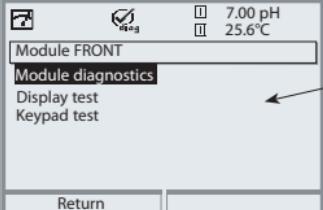
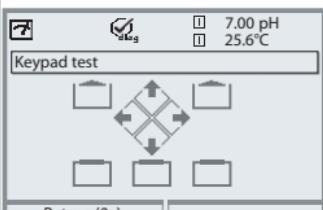
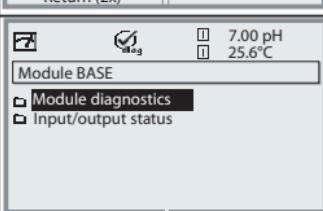
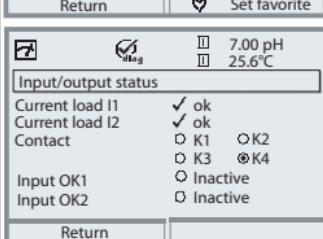
The individual columns are separated by tabs. This makes the file readable with word processing or spreadsheet programs (e.g. Microsoft Excel). Each time the memory card is inserted in the slot, a "Device Info" consisting of Model number, BASE serial number, and tag number is written. Thus, a memory card can also be used to collect the logbook data of several devices.

Example:

## **M 700 - Logbook**

No.	Time Stamp	Status	Message
<< Protos 3400 - Serial 0001760 [DSE KL_001] >>			
F226	21.04.07	19:08:43	Power supply Off
F227	22.04.07	06:02:01	Power supply On
F223	22.04.07	06:09:27	Diagnostics active
F225	22.04.07	06:09:36	Measurement active
B077	23.04.07	16:45:07 (x)	Fail current I2 > 20 mA
F222	23.04.07	18:43:11	Parameter setting active
F225	23.04.07	18:47:38	Measurement active
B077	23.04.07	18:47:38 ( )	Fail current I2 > 20 mA

No.	Message identifier
Time stamp:	Time stamp of logbook entry
Status	(x) - Message activated ( ) - Message deactivated
Message	Message text (in selected operator language)

Menu	Display	Diagnostics functions
	  	<p><b>Device description</b> Provides information about all modules installed: Module type and function, serial number, hardware and software version and device options (Example: FRONT).</p>
		<p><b>FRONT module</b> The module contains the display and keypad control. Test possibilities:</p> <ul style="list-style-type: none"> <li>• Module diagnostics</li> <li>• Display test</li> <li>• Keypad test</li> </ul> <p>Example: Module FRONT, Keypad test. Correct functioning of each key can be checked by pressing it down.</p>
	 	<p><b>BASE module</b> The module generates the standard output signals. Test possibilities:</p> <ul style="list-style-type: none"> <li>• Module diagnostics</li> <li>• Input/output status</li> </ul> <p>Example: Module BASE, input/output status.</p>

# Setting Diagnostics Messages as Favorite

Select menu: Parameter setting/System control/Function control matrix

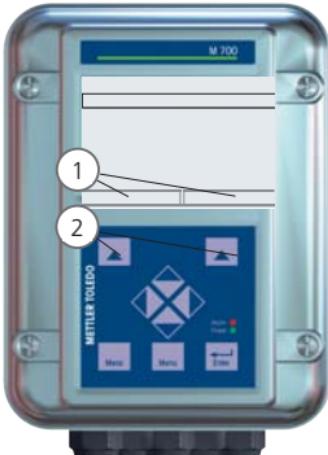
## Secondary Displays (1)

Here, additional values are displayed in the measuring mode according to the factory setting. When the respective softkey (2) is pressed, the process variables measured by the modules plus date or time are displayed. In addition, you can use the **softkeys (2)** to control functions.

To assign a function to a softkey, select

## Parameter setting/System control/ Function control matrix

- Function which can be controlled by softkeys:
- Parameter set selection
- Favorites
- EC 400 (fully automated probe controller)



		83.3%Air
		25.6 °C
Function control matrix (Administrator)		
Input OK2	ParSet	KI rec.
Left softkey	<input type="radio"/>	<input type="radio"/>
Right softkey	<input type="radio"/>	<input checked="" type="radio"/>
Profibus DO 2	<input type="radio"/>	<input type="radio"/>
Return		Connect

## Favorites

Selected Diagnostics functions can be called up directly from the measuring mode using a softkey.

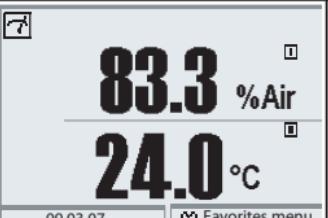
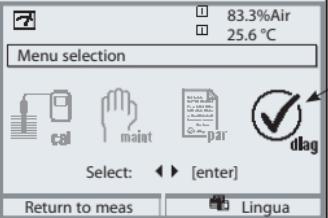
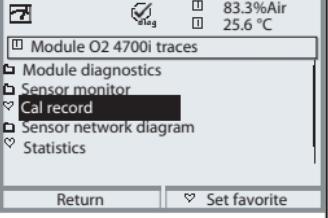
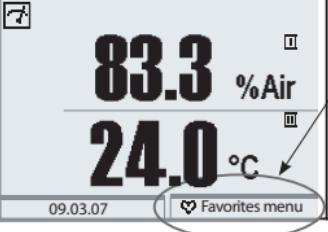
The table on the next page explains how to select favorites.

Example:

"Favorites" to be selected with "Right softkey"

To select a softkey function:  
Select desired function  
using arrow keys,  
press "Connect" softkey  
and confirm with **enter**.

To deselect a function:  
Press "Disconnect" softkey,  
confirm with **enter**.

Menu	Display	Select favorites
		<b>Favorites menu</b> Diagnostics functions can be called up directly from the measuring mode using a softkey. The "Favorites" are selected in the Diagnostics menu.
		<b>Select favorites</b> Press <b>menu</b> key to Menu selection Select diagnostics using arrow keys, confirm with <b>enter</b> . Then select module and confirm with <b>enter</b> .
		Set/delete favorite: "Set favorite" allows activation of the selected diagnostic function directly from the measuring mode via softkey. The menu line is marked with a heart icon.
		Pressing the <b>meas</b> key returns to measurement. When the softkey has been assigned to "Favorites", "Favorites menu" is read in the secondary display (see "Function control matrix").



### Notice:

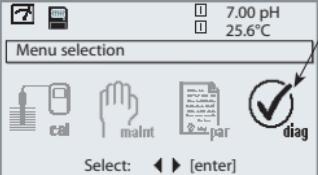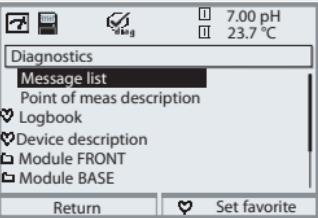When one of the softkeys has been assigned to the "Favorites menu" function, diagnostic functions which have been set as "Favorite" can be directly called up from the measuring mode.

# Diagnostics Functions

General status information of the measuring system

Select menu: Diagnostics - Message list

Menu	Display	Diagnostics functions
	 <p>7.00 pH 25.6°C</p> <p>Menu selection</p> <p>Select: &lt; &gt; [enter]</p> <p>Return to meas Lingua</p>	<b>Call up diagnostics</b> From the measuring mode: Press <b>menu</b> key to select menu. Select diagnostics using arrow keys, confirm with <b>enter</b> .
	 <p>7.00 pH 23.7 °C</p> <p>Diagnostics</p> <p>Message list</p> <p>Point of meas description</p> <p>Logbook</p> <p>Device description</p> <p>Module FRONT</p> <p>Module BASE</p> <p>Return Set favorite</p>	The “Diagnostics” menu gives an overview of all functions available. Functions which have been set as “Favorite” can be directly accessed from the measuring mode.
	 <p>7.00 pH 25.6°C</p> <p>Message list 8 mess.</p> <p>D062 Warn Sensocheck</p> <p>P018 Warn Temp Alarm HI</p> <p>P030 Warn Zero Range</p> <p>D013 Saturation %Air Alarm HI</p> <p>P210 Fail Wrong sensor</p> <p>P092 Warn Tolerance band</p> <p>Return</p>	<b>Message list</b> Shows the currently activated warning or failure messages in plain text.  <b>Number of messages</b> When there are more than 7 messages, a vertical scrollbar appears. Scroll with the up/down arrow keys.  <b>Message identifier</b> See message list for description.  <b>Module identifier</b> Specifies the module that has generated the message.

# Messages

---

## Module FRONT 700-011 Module FRONT 700(X)-015

No.	FRONT message	Message type
F008	Meas. processing (factory settings)	FAIL
F009	Module failure (Firmware Flash check sum)	FAIL
F060	KI process window exceeded (acknowledgeable message)	User-defined
F061	KI recorder parameter	WARN
F080	ComFu®-E Channel 1 – [1] No sensor	
F081	ComFu®-E Channel 1 – [2] No sensor	
F082	ComFu®-E Channel 1 – [1] Communication interrupted	
F083	ComFu®-E Channel 1 – [2] Communication interrupted	
F084	ComFu®-E Channel 1 – [1] Sensor connection	
F085	ComFu®-E Channel 1 – [2] Sensor connection	
F086	ComFu®-E Channel 1 – [1] Battery empty	
F087	ComFu®-E Channel 1 – [2] Battery empty	
F090	ComFu®-E Channel 2 – [2] No sensor	
F091	ComFu®-E Channel 2 – [3] No sensor	
F092	ComFu®-E Channel 2 – [2] Communication interrupted	
F093	ComFu®-E Channel 2 – [3] Communication interrupted	
F094	ComFu®-E Channel 2 – [2] Sensor connection	
F095	ComFu®-E Channel 2 – [3] Sensor connection	
F096	ComFu®-E Channel 2 – [2] Battery empty	
F097	ComFu®-E Channel 2 – [3] Battery empty	
F200	CRC error PAR	FAIL
F201	Communications error (system bus)	FAIL
F202	System failure	FAIL
F210	Device diagnostics (Self test signals error)	WARN
F211	Card error (SmartMedia)	WARN
F212	Time/date	WARN
F213	Module temperature (range exceeded)	WARN
F215	Memory card full	WARN

# Messages

---

No.	FRONT message	Message type
F216	AuditTrail card	FAIL
F220	Calibration active	Text
F221	Maintenance active	Text
F222	Parameter setting active	Text
F223	Diagnostics active	Text
F225	Measurement active	Text
F226	Power supply OFF	Text
F227	Power supply ON	Text
F228	Software update	Text
F229	Wrong passcode	Text
F230	Factory setting	Text
F231	Module configuration changed	Text
F232	Module equipment IS/non-IS	FAIL
F233	Module equipment IS	FAIL

# Messages

---

**BASE 700-021 Module**  
**BASE 700(X)-025/VPW Module**  
**BASE 700(X)-026/24V Module**

No.	BASE message	Message type
B008	Meas. processing (factory settings)	FAIL
B009	Module failure (Firmware Flash check sum)	FAIL
B070	Current I1 Span	WARN
B071	Current I1 <0/4 mA	WARN
B072	Current I1 > 20 mA	WARN
B073	Current I1 Load	FAIL
B074	Current I1 Parameter	WARN
B075	Current I2 Span	WARN
B076	Current I2 <0/4 mA	WARN
B077	Current I2 > 20 mA	WARN
B078	Current I2 Load	FAIL
B079	Current I2 Parameter	WARN
B200	Rinsing program active	Text
B254	Module reset	Text

# Messages

---

**pH 2700(X) Module**  
**pH 2700i(X) Module**  
**EC 700(X) Module**

No.	pH message	Message type
P008	Meas. processing (factory settings)	FAIL
P009	Module failure (Firmware Flash check sum)	FAIL
P010	pH Range	FAIL
P011	pH Alarm LO_LO	FAIL
P012	pH Alarm LO	WARN
P013	pH Alarm HI	WARN
P014	pH Alarm HI_HI	FAIL
P015	Temperature Range	FAIL
P016	Temperature Alarm LO_LO	FAIL
P017	Temperature Alarm LO	WARN
P018	Temperature Alarm HI	WARN
P019	Temperature Alarm HI_HI	FAIL
P020	ORP Range	FAIL
P021	ORP Alarm LO_LO	FAIL
P022	ORP Alarm LO	WARN
P023	ORP Alarm HI	WARN
P024	ORP Alarm HI_HI	FAIL
P025	rH Range	WARN
P026	rH Alarm LO_LO	FAIL
P027	rH Alarm LO	WARN
P028	rH Alarm HI	WARN
P029	rH Alarm HI_HI	FAIL
P030	Zero Range	WARN
P035	Slope Range	WARN
P040	Isotherm potential Uis Range	WARN
P045	mV Range	WARN
P046	mV Alarm LO_LO	FAIL

# Messages

---

No.	pH message	Message type
P047	mV Alarm LO	WARN
P048	mV Alarm HI	WARN
P049	mV Alarm HI_HI	FAIL
P050	Temperature - manual	FAIL
P060	SAD SENSOFACE: Slope	User-defined
P061	SAD SENSOFACE: Zero	User-defined
P062	SAD SENSOFACE: Ref impedance (Sensocheck)	User-defined
P063	SAD SENSOFACE: Glass impedance (Sensocheck)	User-defined
P064	SAD SENSOFACE: Response time	User-defined
P065	SAD SENSOFACE: Cal timer	WARN
P066	SAD SENSOFACE: Calcheck	User-defined
P069	SAD SENSOFACE: Calimatic (Zero/slope)	WARN
P070	SAD SENSOFACE: Sensor wear	User-defined
P071	SAD SENSOFACE: ISFET leakage current	User-defined
P090	Buffer offset (buffer table to be entered):	WARN
P091	Zero offset ORP	WARN
P092	Tolerance band	WARN
P110	CIP counter	User-defined
P111	SIP counter	User-defined
P112	Autoclaving counter	User-defined
P113	Sensor operating time (duration of use)	User-defined
P114	ISFET characteristic	User-defined
P115	Membrane body changes	User-defined
P120	Wrong sensor	FAIL
P121	Sensor (error in factory settings/characteristics)	FAIL
P122	Sensor memory (error in cal data records)	WARN
P123	New sensor, adjustment required	WARN
P130	SIP cycle counted	Text
P131	CIP cycle counted	Text
P200	Noise level at pH input	FAIL
P201	Cal temp	WARN

# Messages

---

No.	pH message	Message type
P202	Cal: Buffer unknown	Text
P203	Cal: Identical buffers	Text
P204	Cal: Buf interchanged	Text
P205	Cal: Sensor unstable	Text
P206	Cal: Slope	WARN
P207	Cal: Zero	WARN
P208	Cal: Sensor failure (ORP check)	FAIL
P254	Module reset	Text

No.	Calculation Block pH / pH messages	Message type
A010	pH-Diff Range	FAIL
A011	pH-Diff Alarm LO_LO	FAIL
A012	pH-Diff Alarm LO	WARN
A013	pH-Diff Alarm HI	WARN
A014	pH-Diff Alarm HI_HI	FAIL
A015	Temperature-Diff Range	FAIL
A016	Temperature-Diff Alarm LO_LO	FAIL
A017	Temperature-Diff Alarm LO	WARN
A018	Temperature-Diff Alarm HI	WARN
A019	Temperature-Diff Alarm HI_HI	FAIL
A020	ORP-Diff Range	FAIL
A021	ORP-Diff Alarm LO_LO	FAIL
A022	ORP-Diff Alarm LO	WARN
A023	ORP-Diff Alarm HI	WARN
A024	ORP-Diff Alarm HI_HI	FAIL

# Messages

---

## EC 400(X) with EC 700(X) Module

No.	EC 400 Messages	Message type
U190	EC 400 Buffer I almost empty	WARN
U191	EC 400 Buffer II almost empty	WARN
U192	EC 400 Cleaner almost empty	WARN
U194	EC 400 Buffer I empty	FAIL
U195	EC 400 Buffer II empty	FAIL
U196	EC 400 Cleaner empty	FAIL
U219	Firmware Probe control	WARN
U220	EC 400 Switch Compressed air	FAIL
U221	Sensor dismounted	FAIL
U222	Undefined security status	FAIL
U224	EC 400 flooded	FAIL
U225	EC 400 Probe valve defective	FAIL
U226	Probe Limit position switch	FAIL
U227	Probe limit position SERVICE	FAIL
U228	Probe cylinder untight	WARN
U229	Sensor dismount guard defective	WARN
U230	Probe Limit position MEASURE	FAIL
U231	Probe Move time MEASURE	WARN
U232	Probe wear counter	WARN
U233	EC 400 Switch Water pressure	WARN
U234	Probe move time SERVICE	WARN
U235	EC 400 Safety valve defective	WARN
U236	EC 400 No pump I	WARN
U237	EC 400 No pump II	WARN
U238	EC 400 No pump III	WARN
U239	EC 400 No aux. valve 1	WARN
U240	EC 400 No aux. valve 2	WARN
U241	Check Rinse water	WARN

# Messages

---

No.	EC 400 Messages	Message type
U242	Check buffer I	WARN
U243	Check buffer II	WARN
U244	Check cleaner	WARN
U245	Check Add. medium 1	WARN
U246	Check Add. medium 2	WARN
U248	EC 400 Water valve	WARN
U251	EC 400 Calibration error	WARN
U252	EC 400 Communication error	WARN
U253	Probe control	WARN

# Messages

---

**O<sub>2</sub> 4700(X), O<sub>2</sub> 4700(X) ppb Modules,  
O<sub>2</sub> 4700i(X), O<sub>2</sub> 4700i(X) ppb Modules,  
O<sub>2</sub> 4700i(X) traces Module**

No.	O <sub>2</sub> messages	Message type
D008	Meas. processing (factory settings)	FAIL
D009	Module failure (Firmware Flash check sum)	FAIL
D010	Saturation %Air Range	FAIL
D011	Saturation %Air Alarm LO_LO	FAIL
D012	Saturation %Air Alarm LO	WARN
D013	Saturation %Air Alarm HI	WARN
D014	Saturation %Air Alarm HI_HI	FAIL
D015	Temperature Range	FAIL
D016	Temperature Alarm LO_LO	FAIL
D017	Temperature Alarm LO	WARN
D018	Temperature Alarm HI	WARN
D019	Temperature Alarm HI_HI	FAIL
D020	Concentration Range	FAIL
D021	Concentration Alarm LO_LO	FAIL
D022	Concentration Alarm LO	WARN
D023	Concentration Alarm HI	WARN
D024	Concentration Alarm HI_HI	FAIL
D025	Part. press. Range	FAIL
D026	Part. press. Alarm LO_LO	FAIL
D027	Part. press. Alarm LO	WARN
D028	Part. press. Alarm HI	WARN
D029	Part. press. Alarm HI_HI	FAIL
D030	Zero Range	WARN
D035	Slope Range	WARN
D040	Air pressure Range	WARN
D041	Air pressure Alarm LO_LO	FAIL

# Messages

---

No.	O <sub>2</sub> messages	Message type
D042	Air pressure Alarm LO	WARN
D043	Air pressure Alarm HI	WARN
D044	Air pressure Alarm HI_HI	FAIL
D045	Saturation %O <sub>2</sub> Range	FAIL
D046	Saturation %O <sub>2</sub> Alarm LO_LO	FAIL
D047	Saturation %O <sub>2</sub> Alarm LO	WARN
D048	Saturation %O <sub>2</sub> Alarm HI	WARN
D049	Saturation %O <sub>2</sub> Alarm HI_HI	FAIL
D050	Air pressure Manual Range	WARN
D060	SAD SENSOFACE: Slope	WARN
D061	SAD SENSOFACE: Zero	WARN
D062	SAD SENSOFACE: Sensocheck	User-defined
D063	SAD SENSOFACE: Response time	WARN
D064	Calibration timer	WARN
D070	SAD SENSOFACE: Sensor wear	User-defined
D080	Range (sensor current)	WARN
D090	Vol% Range (measurement in gases)	WARN
D091	Vol% Alarm LO_LO (measurement in gases)	FAIL
D092	Vol% Alarm LO (measurement in gases)	WARN
D093	Vol% Alarm HI (measurement in gases)	WARN
D094	Vol% Alarm HI_HI (measurement in gases)	FAIL
D095	ppm Range (measurement in gases)	FAIL
D096	ppm Alarm LO_LO (measurement in gases)	FAIL
D097	ppm Alarm LO (measurement in gases)	WARN
D098	ppm Alarm HI (measurement in gases)	WARN
D099	ppm Alarm HI_HI (measurement in gases)	FAIL
D110	CIP counter	User-defined
D111	SIP counter	User-defined
D112	Autoclaving counter	User-defined
D113	Sensor operating time (duration of use)	User-defined
D114	Membrane body changes	User-defined

# Messages

---

No.	O <sub>2</sub> messages	Message type
D115	Inner body changes	User-defined
D120	Wrong sensor	FAIL
D121	Sensor (error in factory settings/characteristics)	FAIL
D122	Sensor memory (error in cal data records)	WARN
D123	New sensor, adjustment required	WARN
D130	SIP cycle counted	Text
D131	CIP cycle counted	Text
D200	Temp O <sub>2</sub> conc/SAT	WARN
D201	Cal temp	Text
D203	Cal: Identical media	Text
D204	Cal: Media interchanged	Text
D205	Cal: Sensor unstable	Text
D254	Module reset	Text

No.	Calculation Block OXY/OXY messages	Message type
H010	%AIR-Diff Range	FAIL
H011	%AIR-Diff Alarm LO_LO	FAIL
H012	%AIR-Diff Alarm LO	WARN
H013	%AIR-Diff Alarm HI	WARN
H014	%AIR-Diff Alarm HI_HI	FAIL
H015	Temperature-Diff Range	FAIL
H016	Temperature-Diff Alarm LO_LO	FAIL
H017	Temperature-Diff Alarm LO	WARN
H018	Temperature-Diff Alarm HI	WARN
H019	Temperature-Diff Alarm HI_HI	FAIL
H020	Concentration-Diff Range	FAIL
H021	Concentration-Diff Alarm LO_LO	FAIL

# Messages

---

No.	Calculation Block OXY/OXY messages	Message type
H022	Concentration-Diff Alarm LO	WARN
H023	Concentration-Diff Alarm HI	WARN
H024	Concentration-Diff Alarm HI_HI	FAIL
H045	%O2-Diff Range	FAIL
H046	%O2-Diff Alarm LO_LO	FAIL
H047	%O2-Diff Alarm LO	WARN
H048	%O2-Diff Alarm HI	WARN
H049	%O2-Diff Alarm HI_HI	FAIL
H090	Vol%-Diff Range (measurement in gases)	WARN
H091	Vol%-Diff Alarm LO_LO (measurement in gases)	FAIL
H092	Vol%-Diff Alarm LO (measurement in gases)	WARN
H093	Vol%-Diff Alarm HI (measurement in gases)	WARN
H094	Vol%-Diff Alarm HI_HI (measurement in gases)	FAIL
H095	ppm-Diff Range (measurement in gases)	FAIL
H096	ppm-Diff Alarm LO_LO (measurement in gases)	FAIL
H097	ppm-Diff Alarm LO (measurement in gases)	WARN
H098	ppm-Diff Alarm HI (measurement in gases)	WARN
H099	ppm-Diff Alarm HI_HI (measurement in gases)	FAIL

# Messages

---

## CO<sub>2</sub> 5700i(X) Module

No.	CO <sub>2</sub> messages	Message type
G008	Meas. processing (factory settings)	FAIL
G009	Module failure (Firmware Flash check sum)	FAIL
G010	Saturation Range	FAIL / WARN
G011	Saturation Alarm LO_LO	FAIL
G012	Saturation Alarm LO	WARN
G013	Saturation Alarm HI	WARN
G014	Saturation Alarm HI_HI	FAIL
G015	Temperature Range	WARN
G016	Temperature Alarm LO_LO	FAIL
G017	Temperature Alarm LO	WARN
G018	Temperature Alarm HI	WARN
G019	Temperature Alarm HI_HI	FAIL
G020	Concentration Range	WARN
G021	Concentration Alarm LO_LO	FAIL
G022	Concentration Alarm LO	WARN
G023	Concentration Alarm HI	WARN
G024	Concentration Alarm HI_HI	FAIL
G025	Part. press. Range	WARN
G026	Part. press. Alarm LO_LO	FAIL
G027	Part. press. Alarm LO	WARN
G028	Part. press. Alarm HI	WARN
G029	Part. press. Alarm HI_HI	FAIL
G030	Zero Range	WARN
G035	Slope Range	WARN
G045	mV Range	WARN
G046	mV Alarm LO_LO	FAIL

# Messages

---

No.	CO <sub>2</sub> messages	Message type
G047	mV Alarm LO	WARN
G048	mV Alarm HI	WARN
G049	mV Alarm HI_HI	FAIL
G050	Temperature - manual	FAIL
G060	SAD SENSOFACE: Slope	User-defined
G061	SAD SENSOFACE: Zero	User-defined
G062	SAD SENSOFACE: Ref. impedance	User-defined
G063	SAD SENSOFACE: Glass impedance	User-defined
G064	SAD SENSOFACE: Response time	User-defined
G065	SAD SENSOFACE: Cal timer	WARN
G066	SAD SENSOFACE: Calcheck	User-defined
G069	SAD SENSOFACE: Calimatic (Zero/slope)	WARN
G070	SAD SENSOFACE: Sensor wear	User-defined
G110	CIP counter	User-defined
G111	SIP counter	User-defined
G112	Autoclaving counter	User-defined
G113	Sensor operating time (duration of use)	User-defined
G114	Membrane body changes	User-defined
G120	Wrong sensor	FAIL
G121	Sensor (error in factory settings/characteristics)	FAIL
G122	Sensor memory (error in cal data records)	WARN
G123	New sensor, adjustment required	WARN
G130	SIP cycle counted	Text
G131	CIP cycle counted	Text
G200	Noise level at pH input	FAIL
G201	Cal temp	WARN
G202	Cal: Buffer unknown	Text
G203	Cal: Identical buffers	Text
G204	Cal: Buf interchanged	Text
G205	Cal: Sensor unstable	Text

# Messages

---

No.	CO <sub>2</sub> messages	Message type
G206	Cal: Slope	WARN
G207	Cal: Zero	WARN
G208	Cal: Sensor failure (ORP check)	FAIL
G254	Module reset	Text

K015	Temperature-Diff Range	FAIL
K016	Temperature-Diff Alarm LO_LO	FAIL
K017	Temperature-Diff Alarm LO	WARN
K018	Temperature-Diff Alarm HI	WARN
K019	Temperature-Diff Alarm HI_HI	FAIL

# Messages

---

## Cond 7700(X) module

No.	Cond messages	Message type
C008	Meas. processing (factory settings)	FAIL
C009	Module failure (Firmware Flash check sum)	FAIL
C010	Conductivity Range	FAIL
C011	Conductivity Alarm LO_LO	FAIL
C012	Conductivity Alarm LO	WARN
C013	Conductivity Alarm HI	WARN
C014	Conductivity Alarm HI_HI	FAIL
C015	Temperature Range	FAIL
C016	Temperature Alarm LO_LO	FAIL
C017	Temperature Alarm LO	WARN
C018	Temperature Alarm HI	WARN
C019	Temperature Alarm HI_HI	FAIL
C020	Resistivity Range	FAIL
C021	Resistivity Alarm LO_LO	FAIL
C022	Resistivity Alarm LO	WARN
C023	Resistivity Alarm HI	WARN
C024	Resistivity Alarm HI_HI	FAIL
C025	Concentration Range	FAIL
C026	Concentration Alarm LO_LO	FAIL
C027	Concentration Alarm LO	WARN
C028	Concentration Alarm HI	WARN
C029	Concentration Alarm HI_HI	FAIL
C035	Cell constant Range	WARN
C040	Salinity Range	FAIL
C041	Salinity Alarm LO_LO	FAIL
C042	Salinity Alarm LO	WARN
C043	Salinity Alarm HI	WARN

# Messages

---

No.	Cond messages	Message type
C044	Salinity Alarm HI_HI	FAIL
C045	Conductance Range	FAIL
C050	Temperature - manual	FAIL
C060	SAD SENSOFACE: Polarization	User-defined
C061	SAD SENSOFACE: Cable	User-defined
C090	USP limit value	User-defined
C120	Wrong sensor	FAIL
C121	Sensor	FAIL
C122	Sensor memory	WARN
C123	New sensor, adjustment required	WARN
C130	SIP cycle counted	Text
C131	CIP cycle counted	Text
C200	Reference temperature	WARN
C201	TC correction	WARN
C202	TC range	WARN
C203	TC range	FAIL
C204	Cal: Sensor unstable	Text
C205	Cal: Sensor failure	Text
C254	Module reset	Text

No.	Calculation Block Cond/Cond messages	Message type
E010	Conductivity-Diff Range	FAIL
E011	Conductivity-Diff Alarm LO_LO	FAIL
E012	Conductivity-Diff Alarm LO	WARN
E013	Conductivity-Diff Alarm HI	WARN
E014	Conductivity-Diff Alarm HI_HI	FAIL
E015	Temperature-Diff Range	FAIL
E016	Temperature-Diff Alarm LO_LO	FAIL
E017	Temperature-Diff Alarm LO	WARN
E018	Temperature-Diff Alarm HI	WARN
E019	Temperature-Diff Alarm HI_HI	FAIL

# Messages

---

No.	Calculation Block Cond/Cond messages	Message type
E020	Resistivity-Diff Range	FAIL
E021	Resistivity-Diff Alarm LO_LO	FAIL
E022	Resistivity-Diff Alarm LO	WARN
E023	Resistivity-Diff Alarm HI	WARN
E024	Resistivity-Diff Alarm HI_HI	FAIL
E030	RATIO Range	FAIL
E031	RATIO Alarm LO_LO	FAIL
E032	RATIO Alarm LO	WARN
E033	RATIO Alarm HI	WARN
E034	RATIO Alarm HI_HI	FAIL
E035	PASSAGE Range	FAIL
E036	PASSAGE Alarm LO_LO	FAIL
E037	PASSAGE Alarm LO	WARN
E038	PASSAGE Alarm HI	WARN
E039	PASSAGE Alarm HI_HI	FAIL
E045	REJECTION Range	FAIL
E046	REJECTION Alarm LO_LO	FAIL
E047	REJECTION Alarm LO	WARN
E048	REJECTION Alarm HI	WARN
E049	REJECTION Alarm HI_HI	FAIL
E050	DEVIATION Range	FAIL
E051	DEVIATION Alarm LO_LO	FAIL
E052	DEVIATION Alarm LO	WARN
E053	DEVIATION Alarm HI	WARN
E054	DEVIATION Alarm HI_HI	FAIL
E055	c(NaOH) Range	FAIL
E060	pH value Range	FAIL
E061	pH value Alarm LO_LO	FAIL
E062	pH value Alarm LO	WARN
E063	pH value Alarm HI	WARN
E064	pH value Alarm HI_HI	FAIL

# Messages

---

## Cond Ind 7700(X) Module

No.	Cond Ind messages	Message type
T008	Meas. processing (factory settings)	FAIL
T009	Module failure (Firmware Flash check sum)	FAIL
T010	Conductivity Range	FAIL / WARN
T011	Conductivity Alarm LO_LO	FAIL
T012	Conductivity Alarm LO	WARN
T013	Conductivity Alarm HI	WARN
T014	Conductivity Alarm HI_HI	FAIL
T015	Temperature Range	FAIL
T016	Temperature Alarm LO_LO	FAIL
T017	Temperature Alarm LO	WARN
T018	Temperature Alarm HI	WARN
T019	Temperature Alarm HI_HI	FAIL
T020	Resistivity Range	FAIL / WARN
T021	Resistivity Alarm LO_LO	FAIL
T022	Resistivity Alarm LO	WARN
T023	Resistivity Alarm HI	WARN
T024	Resistivity Alarm HI_HI	FAIL
T025	Concentration Range	FAIL / WARN
T026	Concentration Alarm LO_LO	FAIL
T027	Concentration Alarm LO	WARN
T028	Concentration Alarm HI	WARN
T029	Concentration Alarm HI_HI	FAIL
T030	Zero Range	WARN
T035	Cell factor Range	WARN
T040	Salinity Range	FAIL / WARN
T041	Salinity Alarm LO_LO	FAIL
T042	Salinity Alarm LO	WARN
T043	Salinity Alarm HI	WARN

# Messages

---

No.	Cond Ind messages	Message type
T044	Salinity Alarm HI_HI	FAIL
T045	Conductance Range	FAIL
T050	Temperature - manual	FAIL
T060	SAD SENSOFACE: Primary coil	User-defined
T061	SAD SENSOFACE: Secondary coil	User-defined
T062	SAD SENSOFACE: SensoLoop	User-defined
C120	Wrong sensor	FAIL
C121	Sensor	FAIL
C122	Sensor memory	WARN
C123	New sensor, adjustment required	WARN
C130	SIP cycle counted	Text
C131	CIP cycle counted	Text
T200	Reference temperature	WARN
T201	TC correction	WARN
T202	TC range	WARN
T203	TC range	FAIL
T204	Sensor coding	WARN
T205	Cal: Sensor unstable	Text
T254	Module reset	Text

# Messages

---

## Out 700(X) Module

No.	Out messages	Message type
I008	Meas. processing (factory settings)	FAIL
I009	Module failure (Firmware Flash check sum)	FAIL
I070	Current I3 Span	WARN
I071	Current I3 <0/4 mA	WARN
I072	Current I3 > 20 mA	WARN
I073	Current I3 Load	FAIL
I074	Current I3 Parameter	WARN
I075	Current I4 Span	WARN
I076	Current I4 <0/4 mA	WARN
I077	Current I4 > 20 mA	WARN
I078	Current I4 Load	FAIL
I079	Current I4 Parameter	WARN
I254	Module reset	Text

# Messages

---

## PID 700(X) Module

No.	PID messages	Message type
R008	Meas. processing (factory settings)	FAIL
R009	Module failure (Firmware Flash check sum)	FAIL
R014	Feed time Alarm HI_HI (analog controller)	FAIL
R019	Feed time Alarm HI_HI (digital controller)	FAIL
R073	Current IV1 Load	FAIL
R078	Current IV2 Load	FAIL
R200	Control parameters	WARN
R254	Module reset	Text

## PA 700(X) Module

No.	PA messages	Message type
N008	Meas. processing (factory settings)	FAIL
N009	Module failure (Firmware Flash check sum)	FAIL
N254	Module reset	Text

## FF 700(X) Module

No.	FF messages	Message type
N008	Meas. processing (factory settings)	FAIL
N009	Module failure (Firmware Flash check sum)	FAIL
N254	Module reset	Text

# Specifications

---

## Specifications M 700(X)

Display*	LC graphic display, white backlighting
Resolution	240 x 160 pixels
Languages	German, English, French, Italian, Spanish, Swedish
Keypad	NAMUR keypad, individual keys, no double assignments [meas] [menu] [ $\blacktriangleleft$ ] [ $\blacktriangleup$ ] [ $\blacktriangledown$ ] [ $\blacktriangleright$ ] [enter] [softkey 1] [softkey 2], NAMUR LEDs red and green.
Logbook	Recording of function activations, appearance and disappearance of warning and failure messages, with date and time
Storage capacity	Approx. 50 entries, without SmartMedia-Card read on display, recording on SmartMedia card
Extended logbook	> 50 000 entries, depending on free memory of SmartMedia card
Measurement recorder	2-channel measurement recorder with marking of events (failure, maintenance request, function check, limit values)
Recording medium	SmartMedia card
Recording capacity	> 50 000 entries, depending on free memory of SmartMedia card
Recording	Process variables and span selectable
Recording method	<ul style="list-style-type: none"><li>• Snapshot</li><li>• Min/Max value</li><li>• Average</li><li>• 10 s ... 10 h/pixel</li><li>• 10fold zoom in the event of high rate of change</li></ul>
Time base	
Zoom function	

\* Caution! Never expose the display to direct sun light! Only operate the display within the temperature range of 0 °C up to 50 °C max.

# Specifications

---

KI recorder	Adaptive representation of process flow with monitoring and signaling of critical process parameters		
Device self-test	Test of RAM, FLASH, EEPROM, display, and keypad, Record for QM documentation to ISO 9000		
Clock	Real-time clock with date		
Power reserve	Approx. 1 year (lithium battery)		
Data retention in case of power failure	Parameters and factory settings > 10 years (EEPROM) Logbook, statistics, records > 1 year (lithium battery) Measurement recorder SmartMedia card		
Module slots	3		
Power supply (BASE module 700-021)	24 (-15 %) ... 230 (+15 %) V AC/DC; approx. 10 VA/10 W		
Overtoltage category	II		
Protection class	I		
pollution degree	2 (EN 61010-1)		
Wire cross-section	2,5 mm <sup>2</sup>		
Power supply (BASE 700X-025/VPW module)	100 (-15 %) ... 230 (+10 %) V AC < 15 VA, 48 ... 62 Hz		
EEx em IIC			
or			
Power supply (BASE 700X-026/24V module)	24 V AC/DC		
EEx em IIC	AC 24 V (- 15 %, + 10 %) < 15 VA, 48 ... 62 Hz DC 24 V (- 15 %, + 20 %) < 8 VA		
Overtoltage category	II		
Protection class	I		

# Specifications

---

Pollution degree	2 (EN 61010-1)
Wire cross-section	2,5 mm <sup>2</sup>
Ground wire connection	2.5 mm <sup>2</sup> , M4 screw (EN 61010-1, 6..5.1.2.)
Sensor monitor	Direct display of measured values from sensor for validation
Protection against electric shock	Protective connection according to EN 61010-1, 6.5.1
Input OK 1	Galv. separated (OPTO coupler)
EEx ib IIC	Vi ≤ 30 V, floating, galvanic isolation up to 60 V
Function	Switches device to HOLD mode (user defined)
Switching voltage	0 ... 2 V AC/DC inactive                  10 ... 30 V AC/DC active (invertible)
Input OK 2	Galv. separated (OPTO coupler)
EEx ib IIC	Vi ≤ 30 V, floating, galvanic isolation up to 60 V
Function	Switch-over to second parameter set
Switching voltage	0 ... 2 V AC/DC inactive                  10 ... 30 V AC/DC active (invertible)
Current output I1	0/4 ... 20 mA (22 mA), max. 10 V, galvanic isolation up to 60 V (galvanically connected with output I2)
EEx ib IIC	Error message if load is exceeded
Load monitoring	22 mA in the case of a message
Overrange *	< 0,2 % current value + 0.02 mA
Measurement error **	0.00 ... 22.00 mA
Current source	
Current output I2	0/4 ... 20 mA (22 mA), max. 10 V, Galvanic isolation up to 60 V (galvanically connected with output I1)
EEx ib IIC	

# Specifications

---

Load monitoring	Error message if load is exceeded
Overrange *	22 mA in the case of a message
Measurement error **	< 0,2 % current value + 0.02 mA
Current source	0.00 ... 22.00 mA
Relay contacts *	4 relay contacts K1 ... K4, floating
EEx ib IIC	Galvanic isolation up to 60 V
Loadability	K1, K2, K3 connected on one side
Usage *	DC: < 30 V / < 500 mA, < 10 W
	K1 - K3, user definable for NAMUR maintenance request/ HOLD, limit value, parameter set B active, rinsing contact, USP contact, KI rec. active, Sensoface, controller alarm (EC 400)
	K4 permanently set as alarm contact (NAMUR failure)
<b>Enclosure</b>	
Assembly	M 700(X) C: Steel, coated M 700(X) S: Stainless steel, polished, 1.4305
Dimensions	<ul style="list-style-type: none"><li>• Wall mounting</li><li>• Post/pipe mounting</li><li>• Panel mounting</li><li>• Sealed against panel</li></ul>
Ingress protection	See dimension drawing
Cable glands	See dimension drawing
Terminals	5 times M20 x 1.5
Weight	Single wires and flexible leads up to 2.5 mm <sup>2</sup> Approx. 3.2 kg plus approx. 150 g per module

\* User-defined

\*\* To IEC 746 Part 1, at nominal operating conditions

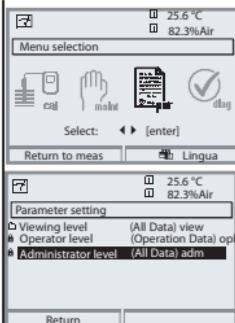
# Specifications

---

## General Data

<b>Explosion protection</b> (IS module only)	ATEX: See rating plate: KEMA 03 ATEX 2056 II 2 (1) GD EEx ib [ia] IIC T4 T 70 °C
	FM: NI, Class I, Div 2, GP A, B, C, D T4 with IS circuits extending into Division 1 Class I, Zone 2, AEx nA, Group IIC, T4 Class I, Zone 1, AEx me ib [ia] IIC, T4
	CSA: NI, Class I, Div 2, Group A, B, C, D with IS circuits extending into Division 1 AIS, Class I, Zone 1, Ex ib [ia] IIC, T4 NI, Class I, Zone 2, Ex nA [ia] IIC
<b>EMC</b>	NAMUR NE 21 and EN 61326 VDE 0843 Part 20 /01.98 EN 61326/A1 VDE 0843 Part 20/A1 /05.99 Class B Industry
<b>Lightning protection</b>	EN 61000-4-5, Installation Class 2
<b>Nominal operating conditions</b>	Ambient temperature: -20 ... +55 °C (Ex: max. +50 °C) Rel. humidity: 10 ... 95 % not condensing
<b>Transport/Storage temperature</b>	-20 ... +70 °C
<b>Screw clamp connector</b>	Single wires and flexible leads up to 2.5 mm <sup>2</sup>

# Overview of Parameter Setting



## Parameter setting

Activated from measuring mode: Press **menu** key to select menu.

Select parameter setting using arrow keys, confirm with **enter**.

### Administrator level

Access to all functions, also passcode setting.  
Releasing or blocking a function for access from the Operator level.

### Operator level

Access to all functions which have been released at the Administrator level. Blocked functions are displayed in gray and cannot be edited.

### Viewing level

Only display, no editing possible!

## System Control

### Memory card (Option)

- Record logbook
- Register recorder
- Decimal separator
- Card full
- Format

Menu only appears with SmartMedia Card inserted.

Make sure that it is a memory card, not an update card.

Commercially available SmartMedia cards must be formatted before they can be used as memory card.

### Copy configuration

The complete configuration of an analyzer can be written on a SmartMedia card. This allows transferring all device settings to other devices with identical equipment (exception: options and passcodes).

### Parameter sets

- Load
- Save

2 parameter sets (A,B) are available in the analyzer.

The currently active parameter set is read on the display. Parameter sets contain all settings except:

Sensor type, Options, System control settings

Up to 5 parameter sets (1, 2, 3, 4, 5) are available when a SmartMedia card (Option) is used.

### Function control matrix

- Input OK2
- Left softkey
- Right softkey

Selecting the control element for the following functions:

- Parameter set selection
- KI recorder (Start/Stop)
- Favorites menu (selected diagnostics functions)
- EC 400 (fully automated probe controller)

### Time/date

Selecting the display format, entry

### Point of meas description

Can be called up in the diagnostics menu.

### Release of options

A TAN is required to release an Option.

### Software update

Software update from SmartMedia card (update card)

### Logbook

Selecting events to be recorded

### Buffer table

Entering own buffer set for automatic calibration

### Factory setting

Resetting all parameters to factory setting

### Passcode entry

Editing the passcodes

# Parameter Setting Menu



## Display Settings: FRONT Module

### Languages

Measurement display Representation of measured values on the display:

- Main display
- Display format
- Viewing angle
- Selecting the number of primary values displayed (one or two)
- Decimal places

Measurement recorder Option: 2-channel, selection of process variable, start and end

- Time base
- Zoom function
- Min/Max display

KI recorder Option: See more detailed "Options" manual

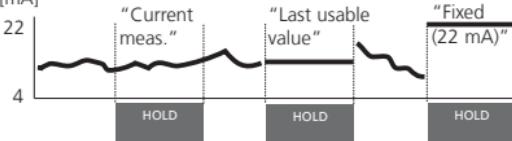
## Signal Outputs and Inputs, Contacts: BASE Module

Output current I1, I2 2 current outputs, separately adjustable

- Variable
- Curve
- Output (0/4 - 20 mA)
- Output filter
- Behavior during messages
  - HOLD
  - Current meas.
  - Last meas. value
  - Fixed 22 mA
  - 22 mA message

Behavior during messages

Output current  
[mA]



Contact K4 NAMUR Failure

- Contact type
- ON delay
- OFF delay

Contacts K3, K2, K1 Factory setting:  
K3: Maintenance request, K2: HOLD, K1: Limit

- Usage
- Maintenance request
- HOLD (function check)
- Limit value (adjustable)
- Rinse contact (adjustable)
- Parameter set B active
- USP output
- KI recorder active
- Sensoface
- Conoller alarm (alarm output EC 400)
- Contact type / ON/OFF delay

- Variable, limit value, hysteresis, effective direction, ...

- Rinsing interval, lead times, rinse duration, logbook entry, ...

Inputs OK1, OK2

- OK1 usage
  - Signal level

Optocoupler - signal inputs

Off, HOLD (function check)

active level switchable from 10 to 30 V or < 2 V, resp.

For OK2 see System control/Function control matrix

# Glossary

---

## Technical Terms

### **Alarm limit**

For each process variable, you can define high and low warning and failure limits (NAMUR states: maintenance request, failure).

The alarm can be activated individually for each variable.

If an alarm limit is exceeded, an error message appears and the corresponding NAMUR contact is activated.

### **Calibration/adjustment passcode**

Protects access to calibration. Can be set or disabled at the Administrator level.

### **Cell factor**

Mechanical characteristic of electrodeless (toroidal) conductivity sensors.

### **Cleaning**

User-defined time during which the cleaning contact is closed during a rinsing cycle.

### **Controlled variable**

User-defined variable that acts on the controller.

### **Diagnostics menu**

Display of all relevant information on the device status.

### **Failure**

Alarm message and NAMUR contact. Failure means that the equipment no longer operates properly or that a process parameter has reached a critical value. Failure is disabled during "function check".

### **Feed time alarm**

Monitors the time during which the controller output is at 100 %.

### **Function check**

NAMUR contact. Always active when the unit does not output the configured measured value.

# Glossary

---

## Technical Terms

### **GLP/GMP**

Good Laboratory Practice / Good Manufacturing Practice:  
Rules for performance and documentation of measurements.

### **Interval**

The interval extends from the start of one rinsing cycle to the start of the next rinsing cycle, user defined.

### **Isothermal potential**

The isothermal intersection point is the point of intersection between two calibration lines at two different temperatures. The potential difference between the electrode zero point and this intersection point is the isothermal potential " $V_{iso}$ ".

### **Limit contacts**

Are controlled by a user-definable process variable. The limit contact is activated if the measured value falls below or exceeds an alarm limit, depending on the user-defined effective direction.

### **Logbook**

The logbook shows the last 50 events with date and time, e.g. calibrations, warning and failure messages, power failure etc. This permits quality management documentation to ISO 9000 et seq.

Longer recordings are possible with the additional function "Extended logbook".

### **Main display**

Large measured-value display in the measuring mode. You can select which process variable is to be displayed.

### **Maintenance menu**

The Maintenance menu provides all functions for sensor maintenance and signal outputs.

# Glossary

---

## Technical Terms

### **Maintenance passcode**

Protects access to Maintenance. Can be set or disabled at the Administrator level.

### **Measuring mode**

When no menu function is activated, the unit is in measuring mode. The selected measured value is displayed. Pressing the meas key always returns you to the measuring mode.

### **Menu structure**

The M 700 provides a very clear menu structure. Menu selection is called up by pressing the menu key. Four basic functions can be accessed: Calibration, maintenance, parameter setting, diagnostics. From each of these functions, the individual module blocks (system control, FRONT module (display functions), BASE module (signal outputs)) can be accessed, as well as all added measuring and communication modules.

### **Message list**

The message list shows the number of currently activated messages and the individual warning or failure messages in plain text.

### **NAMUR**

German committee for measurement and control standards in the chemical industry

### **NAMUR contacts**

"HOLD (function check)", "maintenance request", and "failure".

Indicate status of measured variable and measuring system.

### **Operator level**

Menu level of the Parameter Setting menu. You can edit the device settings that have been enabled at the Administrator level.

# Glossary

---

## Technical Terms

### **Operator passcode**

Protects access to the Operator level. Can be set or disabled at the Administrator level.

### **Parameter Setting menu**

The Parameter Setting menu provides 3 access levels:  
Viewing, Operator, and Administrator level.

### **Passcode protection**

Access to the Calibration, Maintenance, Operator, and Administrator levels is protected by passcodes.

The passcodes can be defined or disabled at the Administrator level.

### **Point of measurement**

Can be defined to identify the unit and can be displayed in the Diagnostics menu.

### **Reference temperature**

With temperature compensation activated, the measured value is calculated to the value at the reference temperature (usually 20 oder 25 °C) using the temperature coefficient.

### **Second rinsing**

User-defined time during which the "Rinsing" contact is closed at the end of the rinsing cycle.

### **Secondary displays**

Two small displays located below the main display in measuring mode. The process variables to be displayed can be selected using the softkeys underneath.

### **Sensor coding**

Here, internal settings for electrodeless sensors are encrypted.

# Glossary

---

## Technical Terms

### **Slope**

The slope of an electrode is the voltage change per pH unit.  
For an ideal pH electrode, it lies at -59.2 mV/pH (25 °C).

### **Viewing level**

Menu level of the Parameter Setting menu. Display of all device settings,  
however no editing possible.

### **Zero**

The zero point refers to the voltage delivered by an electrode at 25 °C and  
pH = 7.00. For an ideal pH electrode, it lies at 0 mV.

In practice, the real zero point is slightly different.

# **Index**

---

## **A**

Accessories .....	16
Additional functions .....	16
Application in hazardous locations.....	11
Assignment of measured values: Start (4 mA) and end (20 mA) .....	58
Audit Trail Log .....	13

## **B**

BASE module.....	25
Behavior during messages.....	62

## **C**

Cable glands.....	22
Calculation Blocks.....	51
Configuring a Calculation Block.....	55
Configuring the measurement display.....	39
Connection of power supply.....	26
Contact type.....	68
Contacts.....	58
Copy configuration.....	75
Current outputs.....	58
Current outputs: Characteristics.....	59

## **D**

Device description.....	88
Diagnostics functions .....	84
Diagnostics messages .....	91
Diagnostics messages as favorite .....	89
Dimension drawings .....	32
Display test .....	88
Disposal .....	2
Documenting the settings.....	43

# **Index**

---

## **E**

EC Declaration of Conformity .....	3, 4
Electronic Signature .....	13
EMC .....	118
Entry of numbers and text .....	38

## **F**

Factory setting .....	49, 56
Failure.....	63
Favorites menu .....	42
Favorites .....	89
FDA 21 CFR Part 11 .....	13
Formatting a SmartMedia card.....	73
FRONT module .....	24
Function check .....	63
Function control matrix.....	47
Function control.....	41, 47

## **G**

Glossary.....	121
Graphic display .....	22

## **H**

Hazardous-area components.....	31
HOLD.....	44
Hysteresis.....	68

## **I**

Icons.....	36
Input/output status .....	88
Intended use .....	9
IS connection .....	30

# **Index**

---

## **K**

Keypad test .....	88
-------------------	----

## **L**

Languages .....	50
LED.....	22
Limit value .....	68
Limit value, icons in the measurement display.....	68
Linear characteristic .....	59
Logarithmic output curve.....	60
Logbook .....	49, 56, 86

## **M**

Maintenance.....	83
Measurement display.....	50
Measurement display, settings .....	39
Menu selection .....	35
Menu structure .....	23, 34
Message list.....	91
Message when the current range is exceeded.....	62
Messages, behavior of current outputs .....	62
Modular concept .....	21
Module diagnostics.....	88
Module equipment .....	25
Module identification.....	36

## **N**

NAMUR signals: Current outputs .....	62
NAMUR signals: Relay contacts .....	63

## **O**

OK inputs .....	58
OK1 usage.....	69
OK1/OK2 inputs .....	69
OK1/OK2 switching level .....	69

# **Index**

---

OK2, selecting parameter set (A, B) .....	70
Output filter .....	61
Overview of parameter setting.....	119

## **P**

Package contents.....	10
Panel mounting .....	32
Parameter set selection .....	57, 70
Parameter sets .....	57
Parameter setting: Documenting.....	43
Parameter setting: Lock functions .....	46
Parameter setting: Operating levels.....	45
Parameter setting: Overview .....	120
Passcode entry .....	48
pH value calculation by means of dual conductivity measurement .....	54
Point of measurement .....	48
Post mounting .....	33
Power supply .....	26
Product line .....	14, 15, 16

## **R**

Relay contacts, usage.....	65, 66, 67
Relay contacts: Protective wiring .....	64
Relay output: Limit value .....	68
Release of options .....	48
Replacing the front module .....	24
Return of products under warranty.....	2
Rinse contact .....	66, 67

## **S**

Safety information .....	11, 12
Safety of operation .....	36
Screw clamp connector.....	118
Sealing.....	24
Secondary displays .....	22

# **Index**

---

Sensocheck, Sensoface .....	85
Sensor network diagram.....	84
ServiceScope .....	84
Setting .....	43
Short description .....	22
Signaling active parameter set via relay contact .....	70
Slot for SmartMedia card .....	24
SmartMedia card .....	24, 71, 72
SmartMedia card: Remove card .....	77
Softkey function .....	41
Softkeys.....	22
Specifications.....	114, 118
Start up .....	12
Switching between parameter sets A, B.....	57, 70
System overview .....	19

## **T**

Technical terms .....	121
Terminal compartment .....	25
Terminal plates of "hidden" modules.....	24
Terminal plates.....	24, 27, 28, 29
Time/date .....	47
Trademarks .....	2

## **V**

Viewing angle.....	50
--------------------	----

## **W**

Wall mounting.....	33
Warranty .....	2

# Menu structure of basic unit

---

M 700(X): FRONT module, BASE module



## Parameter setting of FRONT module ..... 50

Documenting .....	43
Lock functions .....	46
Languages .....	50
Measurement display .....	50
Logbook .....	56
Factory setting .....	56
BASE module .....	58
Current outputs .....	58
Current outputs: Behavior during messages .....	62
Relay contacts .....	65
Rinse contact .....	67
Limit value .....	68



## Maintenance ..... 83

Open/close memory card .....	83
BASE module: Current source .....	83



## Diagnostics functions ..... 84

Logbook .....	86
Point of meas description .....	86
Logbook .....	86
Device description .....	88
FRONT module .....	88
BASE module .....	88
Setting diagnostics messages as favorite .....	89
Message list .....	91

# Configuring the system control

---

Passcode	Administrator level	1989 (new: .....
	Operator level	1246 (new: .....
<hr/>		
	Function control matrix (Softkey usage) .....	47
	Time/date .....	47
	Point of measurement .....	48
	Passcode entry.....	48
	Release of options (additional functions).....	48
	Factory setting .....	49
	Logbook .....	49
	Calculation Block .....	51
	Parameter sets A, B .....	57
	Parameter sets on SmartMedia card (SW 700-102) .....	78

# SmartMedia card features

---

Passcode	Administrator level	1989 (new: .....
	Operator level	1246 (new: .....

---

	Inserting the SmartMedia card .....	71
	Formatting SmartMedia cards as memory cards .....	73
	Memory card: Copy configuration .....	74
	Formatting an update card .....	76
	Remove SmartMedia card/Close memory card .....	77